

Technical Accessory Guides (TAGs)

For Associates, Resellers, ISVs and Alliance Partners

Global



Version: Active-Only

Will only show products that are known to be available for sale

Need to provide an update or change?

Contact <mailto:pgw786@zebra.com>



For Internal Use by
PartnerConnect Members Only



RFD90 Technical Accessory Guide



NOTE: This document is only for general reference. Solutions Pathway and related PMBs should be used for product availability, pricing, and final solution selection.




* Zebra does not endorse or specifically recommend any **third-party products, accessories, or hardware**. ZEBRA DISCLAIMS ANY AND ALL LIABILITY, INCLUDING ANY EXPRESS OR IMPLIED WARRANTIES, WHETHER ORAL OR WRITTEN, FOR SUCH THIRD PARTY PRODUCTS, ACCESSORIES, OR HARDWARE. THE CUSTOMER ACKNOWLEDGES THAT NO REPRESENTATION HAS BEEN MADE BY ZEBRA AS TO THE FITNESS OF THE THIRD-PARTY PRODUCTS, ACCESSORIES, OR HARDWARE FOR THE CUSTOMER'S INTENDED PURPOSE.






Cradles and Charging





Single Device


Part Number	Picture	Description	Notes	Required Items
CRD1S0T-RFD49-UNIV-CHG-1R		Single Slot Charging ShareCradle - Universal/3rd Party	<ul style="list-style-type: none"> ▶ Cradle will charge RFD90. ▶ Does not charge spare batteries. ▶ Includes USB-A port on rear of cradle cup which can be used to charge third party devices. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. ▶ P/N on cradle is: C1S0T49UNIG1 	<p>For charging one cradle:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V50W0WWW) ▶ DC Line Cord (CBL-DC-388A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) <p>For charging up to 4 cradles from one power supply:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ 4-Way DC Line Cord (CBL-DC-380A1-01) ▶ AC Line Cord (23844-00-00R or country specific version)
CR90-1S0T-TC2-G-01		Single Slot Charging ShareCradle - RFD90 and TC21/TC26	<ul style="list-style-type: none"> ▶ Cradle will charge both RFD90 and TC21/TC26 and supports: <ul style="list-style-type: none"> - RFD90 charging by itself - TC21/TC26 charging by itself - Both RFD90 and TC21/TC26 when attached together ▶ Does not charge spare batteries. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	<p>For charging one cradle:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V50W0WWW) ▶ DC Line Cord (CBL-DC-388A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) <p>For charging up to 4 cradles from one power supply:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ 4-Way DC Line Cord (CBL-DC-380A1-01) ▶ AC Line Cord (23844-00-00R or country specific version)
CR90-1S0T-TC5-G-01		Single Slot Charging ShareCradle - RFD90 and TC5X	<ul style="list-style-type: none"> ▶ Cradle will charge both RFD90 and TC5X and supports: <ul style="list-style-type: none"> - RFD90 charging by itself - TC5X charging by itself - Both RFD90 and TC51/TC52/TC52x/TC52ax/TC56/TC57/TC57x unit when attached together ▶ Does not charge spare batteries. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	<p>For charging one cradle:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V50W0WWW) ▶ DC Line Cord (CBL-DC-388A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) <p>For charging up to 4 cradles from one power supply:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ 4-Way DC Line Cord (CBL-DC-380A1-01) ▶ AC Line Cord (23844-00-00R or country specific version)

CR90-1S0T-TC7-G-01		Single Slot Charging ShareCradle - RFD90 and TC7X	<ul style="list-style-type: none"> ▶ Cradle will charge both RFD90 and TC7X and supports: <ul style="list-style-type: none"> - RFD90 charging by itself - TC7X charging by itself - Both RFD90 and TC70/70x/72/75/75x/77 unit when attached together ▶ Does not charge spare batteries. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	<p>For charging one cradle:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V50W0WWW) ▶ DC Line Cord (CBL-DC-388A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) <p>For charging up to 4 cradles from one power supply:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ 4-Way DC Line Cord (CBL-DC-380A1-01) ▶ AC Line Cord (23844-00-00R or country specific version)
CRD1S0T-RFD49-UNIV-COM-1R		Single Slot Charge-Communication ShareCradle Universal/3rd Party	<ul style="list-style-type: none"> ▶ Cradle will charge RFD90. ▶ Also provides USB communication to RFD90. ▶ Does not charge spare batteries. ▶ Includes USB-A port on rear of cradle cup which can be used to charge third party devices. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. ▶ P/N on cradle is: C1S0T49UNIM1 	<p>For charging one cradle:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V50W0WWW) ▶ DC Line Cord (CBL-DC-388A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) <p>For charging up to 4 cradles from one power supply:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ 4-Way DC Line Cord (CBL-DC-380A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) <p>▶ USB Cable (25-124330-01R) for PC connection</p>
CR90-1S0T-TC2-M-01		Single Slot Charge-Communication ShareCradle RFD90 and TC21/TC26	<ul style="list-style-type: none"> ▶ Cradle will charge both RFD90 and TC21/TC26 and supports: <ul style="list-style-type: none"> - RFD90 charging by itself - TC21/TC26 charging by itself - Both RFD90 and TC21/TC26 when attached together ▶ Also provides USB communication to RFD90, not TC21/TC26. ▶ Does not charge spare batteries. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	<p>For charging one cradle:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V50W0WWW) ▶ DC Line Cord (CBL-DC-388A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) <p>For charging up to 4 cradles from one power supply:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ 4-Way DC Line Cord (CBL-DC-380A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) <p>▶ USB Cable (25-124330-01R) for PC connection</p>
CR90-1S0T-TC5-M-01		Single Slot Charge-Communication ShareCradle RFD90 and TC5X	<ul style="list-style-type: none"> ▶ Cradle will charge both RFD90 and TC5X and supports: <ul style="list-style-type: none"> - RFD90 charging by itself - TC5X charging by itself - Both RFD90 and TC51/TC52/TC52x/TC52ax/TC56/TC57/TC57x unit when attached together ▶ Also provides USB communication to RFD90, not TC5X. ▶ Does not charge spare batteries. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	<p>For charging one cradle:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V50W0WWW) ▶ DC Line Cord (CBL-DC-388A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) <p>For charging up to 4 cradles from one power supply:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ 4-Way DC Line Cord (CBL-DC-380A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) <p>▶ USB Cable (25-124330-01R) for PC connection</p>

CR90-1S0T-TC7-M-01		Single Slot Charge-Communication ShareCradle RFD90 and TC7X	<ul style="list-style-type: none"> ▶ Cradle will charge both RFD90 and TC7X and supports: <ul style="list-style-type: none"> - RFD90 charging by itself - TC7X charging by itself - Both RFD90 and TC70/70x/72/75/75x/77 unit when attached together ▶ Also provides USB communication to RFD90, not TC7X. ▶ Does not charge spare batteries. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	<p>For charging one cradle:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V50W0WWW) ▶ DC Line Cord (CBL-DC-388A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) <p>For charging up to 4 cradles from one power supply:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ 4-Way DC Line Cord (CBL-DC-380A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) ▶ USB Cable (25-124330-01R) for PC connection
CRD1S0T-RFD49-BASE-CHG-1R		Single Slot Charging ShareCradle Base	<ul style="list-style-type: none"> ▶ Includes Charge-Only Base for attaching Cradle cup. ▶ Does not charge spare batteries. ▶ NOTE: Base accepts Charging cups using enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. ▶ P/N on cradle is: C1S0T49BASG1 	<ul style="list-style-type: none"> ▶ Cradle Cup <p>For charging one cradle:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V50W0WWW) ▶ DC Line Cord (CBL-DC-388A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) <p>For charging up to 4 cradles from one power supply:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ 4-Way DC Line Cord (CBL-DC-380A1-01) ▶ AC Line Cord (23844-00-00R or country specific version)
CRD1S0T-RFD49-BASE-COM-1R		Single Slot Charge + Communication ShareCradle Base	<ul style="list-style-type: none"> ▶ Includes Charge + Communication Base for attaching Cradle cup. ▶ Does not charge spare batteries. ▶ NOTE: Base accepts Charging cups using enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. ▶ P/N on cradle is: C1S0T49BASM1 	<ul style="list-style-type: none"> ▶ Cradle Cup <p>For charging one cradle:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V50W0WWW) ▶ DC Line Cord (CBL-DC-388A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) <p>For charging up to 4 cradles from one power supply:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ 4-Way DC Line Cord (CBL-DC-380A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) ▶ USB Cable (25-124330-01R) for PC connection
Multi-Device				
Part Number	Picture	Description	Notes	Required Items
CRD3S4T-RFD49-UNIV-CHG-1R		Multi-Slot Charging ShareCradle - Universal/3rd Party	<ul style="list-style-type: none"> ▶ Cradle will charge up to three RFD90. ▶ Also charges up to four spare RFD90 batteries. ▶ Includes USB-A port on rear of cradle cups which are reserved for future enhancements. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. ▶ P/N on cradle is: C3S4T49UNIG1 	<ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ DC Line Cord (CBL-DC-382A1-01) ▶ AC Line Cord (23844-00-00R or country specific version)




CR90-3S4T-TC2-G-01		<p>Multi-Slot Charging ShareCradle - RFD90 and TC21/TC26</p>	<ul style="list-style-type: none"> ▶ Cradle will charge up to three RFD90 and TC21/TC26 pairings and supports: <ul style="list-style-type: none"> - RFD90 charging by itself - TC21/TC26 charging by itself - Both RFD90 and TC21/TC26 when attached together ▶ Also charges up to four spare RFD90 batteries. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	<ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WW) ▶ DC Line Cord (CBL-DC-382A1-01) ▶ AC Line Cord (23844-00-00F or country specific version)
CR90-3S4T-TC5-G-01		<p>Multi-Slot Charging ShareCradle - RFD90 and TC5X</p>	<ul style="list-style-type: none"> ▶ Cradle will charge up to three RFD90 and TC5X pairings and supports: <ul style="list-style-type: none"> - RFD90 charging by itself - TC5X charging by itself - Both RFD90 and TC5X when attached together ▶ Compatible with TC51/52/52x/52ax/56/57/57x, not compatible with TC53/TC58 or TC55. ▶ Also charges up to four spare RFD90 batteries. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	<ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WW) ▶ DC Line Cord (CBL-DC-382A1-01) ▶ AC Line Cord (23844-00-00F or country specific version)
CR90-3S4T-TC7-G-01		<p>Multi-Slot Charging ShareCradle - RFD90 and TC7X</p>	<ul style="list-style-type: none"> ▶ Cradle will charge up to three RFD90 and TC7X pairings and supports: <ul style="list-style-type: none"> - RFD90 charging by itself - TC7X charging by itself - Both RFD90 and TC7X when attached together ▶ Compatible with TC70/70x/72/75/75x/77, not compatible with TC73/TC78. ▶ Also charges up to four spare RFD90 batteries. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	<ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WW) ▶ DC Line Cord (CBL-DC-382A1-01) ▶ AC Line Cord (23844-00-00F or country specific version)
CRD3S4T-RFD49-UNIV-COM-1R		<p>Multi-Slot Charge + Ethernet ShareCradle - Universal/3rd Party</p> 	<ul style="list-style-type: none"> ▶ Cradle will charge up to three RFD90. ▶ Also provides Ethernet communications to each RFD90 to enable management, firmware updating and device health. ▶ Also charges up to four spare RFD90 batteries. ▶ Includes USB-A port on rear of cradle cups which are reserved for future enhancements. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. ▶ P/N on cradle is: C3S4T49UNIM1 	<ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WW) ▶ DC Line Cord (CBL-DC-382A1-01) ▶ AC Line Cord (23844-00-00F or country specific version)

CR90-3S4T-TC2-M-01		Multi-Slot Charge + Ethernet ShareCradle - RFD90 and TC21/TC26	<ul style="list-style-type: none"> ▶ Cradle will charge up to three RFD90 and TC21/TC26 pairings and supports: <ul style="list-style-type: none"> - RFD90 charging by itself - TC21/TC26 charging by itself - Both RFD90 and TC21/TC26 when attached together ▶ Also provides Ethernet communications to each RFD90 and TC21/TC26 to enable management, firmware updating and device health. ▶ Also charges up to four spare RFD90 batteries. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	<ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ DC Line Cord (CBL-DC-382A1-01) ▶ AC Line Cord (23844-00-00R or country specific version)
CR90-3S4T-TC5-M-01		Multi-Slot Charge + Ethernet ShareCradle - RFD90 and TC5X	<ul style="list-style-type: none"> ▶ Cradle will charge up to three RFD90 and TC5X pairings and supports: <ul style="list-style-type: none"> - RFD90 charging by itself - TC5X charging by itself - Both RFD90 and TC5X when attached together ▶ Also provides Ethernet communications to each RFD90 and TC5X to enable management, firmware updating and device health. ▶ Also charges up to four spare RFD90 batteries. ▶ Compatible with TC51/52/52x/52ax/56/57/57x, not compatible with TC53/TC58 or TC55. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	<ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ DC Line Cord (CBL-DC-382A1-01) ▶ AC Line Cord (23844-00-00R or country specific version)
CR90-3S4T-TC7-M-01		Multi-Slot Charge + Ethernet ShareCradle - RFD90 and TC7X	<ul style="list-style-type: none"> ▶ Cradle will charge up to three RFD90 and TC7X pairings and supports: <ul style="list-style-type: none"> - RFD90 charging by itself - TC57 charging by itself - Both RFD90 and TC7X when attached together ▶ Also provides Ethernet communications to each RFD90 and TC7X to enable management, firmware updating and device health. ▶ Also charges up to four spare RFD90 batteries. ▶ Compatible with TC70/70x/72/75/75x/77, not compatible with TC73/TC78. ▶ NOTE: Charging cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	<ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ DC Line Cord (CBL-DC-382A1-01) ▶ AC Line Cord (23844-00-00R or country specific version)
CRD3S4T-RFD49-BASE-CHG-1R		Multi-Slot Charging ShareCradle Base	<ul style="list-style-type: none"> ▶ Charge-Only Base for attaching up to three Cradle cups. ▶ Includes pre-installed 4-Slot Battery Charger for charging up to four spare RFD90 batteries. ▶ NOTE: Base accepts Charging cups using enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. ▶ P/N on cradle is: C3S4T49BASG1 	<ul style="list-style-type: none"> ▶ Three Cradle Cups ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ DC Line Cord (CBL-DC-382A1-01) ▶ AC Line Cord (23844-00-00R or country specific version)


CRD3S4T-RFD49-BASE-COM-1R		Multi-Slot Charge + Ethernet ShareCradle Base	<ul style="list-style-type: none"> ▶ Charge + Communication Base for attaching up to three Cradle cups. ▶ Also provides Ethernet communications to each RFD90 and mobile computer to enable management, firmware updating and device health. ▶ Includes pre-installed 4-Slot Battery Charger for charging up to four spare RFD90 batteries. ▶ NOTE: Base accepts Charging cups using enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. ▶ P/N on cradle is: C3S4T49BASM1 	<ul style="list-style-type: none"> ▶ Three Cradle Cups ▶ Power Supply (PWR-BGA12V108W0WWW) ▶ DC Line Cord (CBL-DC-382A1-01) ▶ AC Line Cord (23844-00-00R or country specific version)
---------------------------	---	---	---	---

Cradle Accessories

Part Number	Picture	Description	Notes	Required Items
CUP-RFD49-UNIV-1R		Cradle Cup for RFD40, Universal/3rd Party	<ul style="list-style-type: none"> ▶ Cup can be installed on Single Slot SharedCradle Base or Multi-Slot ShareCradle Base. ▶ Provides Charge-Only support or Charge+Communications support for an RFD90 unit, depending on which Cradle Base type installed on. ▶ Includes USB-A port on rear of cup which can be used to charge third party devices. ▶ Cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	ShareCradle Base for RFD40/RFD90
CUP-RFD90-TC2X-1R		Cradle Cup for RFD90 and TC21/TC26	<ul style="list-style-type: none"> ▶ Cup can be installed on Single Slot SharedCradle Base or Multi-Slot ShareCradle Base. ▶ Provides Charge-Only support or Charge+Communications support for an RFD90 and/or TC21/TC26 unit, depending on which Cradle Base type installed on. ▶ Cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	ShareCradle Base for RFD40/RFD90
CUP-RFD90-TC5X-1R		Cradle Cup for RFD90 and TC5X	<ul style="list-style-type: none"> ▶ Cup can be installed on Single Slot SharedCradle Base or Multi-Slot ShareCradle Base. ▶ Provides Charge-Only support or Charge+Communications support for an RFD90 and/or TC51/TC52/TC52x/TC52ax/TC56/TC57/TC57x unit, depending on which Cradle Base type installed on. ▶ Cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	ShareCradle Base for RFD40/RFD90

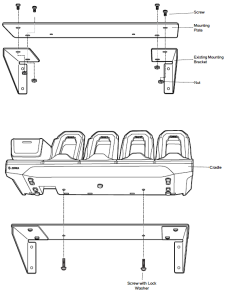

CUP-RFD90-TC7X-1R		Cradle Cup for RFD90 and TC7X	<ul style="list-style-type: none"> ▶ Cup can be installed on Single Slot SharedCradle Base or Multi-Slot ShareCradle Base. ▶ Provides Charge-Only support or Charge+Communications support for an RFD90 and/or TC70/70x/72/75/75x/77 unit, depending on which Cradle Base type installed on. ▶ Cup uses enhanced Zebra common ShareCradle design which allows the cup to be easily removed and swapped with different cups using a simple coin turned screw. 	ShareCradle Base for RFD40/RFD90
BRKT-SCRD-SMRK-01		Multi-Slot ShareCradle Wall/Rack Mount Bracket	<ul style="list-style-type: none"> ▶ Allows for rack and wall mounting of one Multi-Slot ShareCradle or up to four Single-Slot ShareCradles. ▶ Bracket can be mounted on standard 19" network rack or on a wall. ▶ Cable routing slots & removable power supply holder tray. ▶ Adjustable tabs & screw mounts for easy hanging/installation. ▶ Adjustable orientations - horizontal, vertical, angled. ▶ See the Bluetooth-Generic Accessories TAG for info on 3rd party Network Racks that can be used for mounting this bracket. 	
ADP-TC7X-PLT-FX		5-Slot ShareCradle Mounting Bracket Adapter Plate for Honeywell	<ul style="list-style-type: none"> ▶ Allows Zebra Multi-Slot ShareCradles to be mounted on legacy Honeywell Flex Cradle Wall Mount Brackets (HON SKU #203-641-002). ▶ Includes hardware to attach plate to HON wall bracket and secure ShareCradle to plate. ▶ NOTE: This is a custom product. Please work with your Zebra representative to open a Custom Product Request (CPR) if you would like to order this cable. 	

Battery Charging

Part Number	Picture	Description	Notes	Required Items
SAC-TC8X-4SCHG-01		4-Slot Battery Charger	<ul style="list-style-type: none"> ▶ Charges up to four spare batteries. ▶ Can be used standalone or up to four chargers can be installed on Multi-Slot Wall/Rack Mount Bracket (BRKT-SCRD-SMRK-01) 	<p>To power single 4-slot Charger:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V50W0WW) ▶ DC Line Cord (CBL-DC-388A1-01) ▶ AC Line Cord (23844-00-00R or country specific version) <p>To power two sets of 4-slot Chargers from one power supply:</p> <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V108W0WW) ▶ DC Y-Cable Line Cord (CBL-DC-523A1-01) ▶ AC Line Cord (23844-00-00R or country specific version)




Charge/Communication Cables

Part Number	Picture	Description	Notes	Required Items
-------------	---------	-------------	-------	----------------



25-124330-01R		Single Slot Cradle to PC/Host USB cable	<ul style="list-style-type: none"> ▶ Used with Single Slot ShareCradles ▶ Micro USB connection on cradle end 	
CBL-RFD49-USB1-01		Snap-on USB Communication/Charging Cable	<ul style="list-style-type: none"> ▶ Attaches to charge/communicator port on bottom of RFD90 and allows the RFD90 to be used as a tethered RFID reader. ▶ NOTE: RFD90 requires external power supply connected to the cable's barrel jack connector to charge device. Will not charge from USB-A connector. 	For Charging: <ul style="list-style-type: none"> ▶ Power Supply (PWR-BGA12V50W0WW) ▶ DC Line Cord (CBL-DC-388A1-01) ▶ AC Line Cord (23844-00-00F or country specific version)

Device Adapters






Part Number	Picture	Description	Notes	Required Items
ADP-RFD90-BLNK-1R		Replacement Blank Cover for eConnex™ Adapter Slot	<ul style="list-style-type: none"> ▶ This is a spare/replacement cover that typically ships with each RFD90 unit. ▶ Cover snaps into place on RFD90 unit. 	
ADP-RFD90-TC5X-1E		eConnex™ Adapter for TC52ax	<ul style="list-style-type: none"> ▶ Allows TC52ax with SE4720 scan engine to be mounted on top of RFD40 and communicate directly to the reader. ▶ Adapter also allows both the RFD40 and TC52ax to be docked as a pair in Single or Multi-Slot ShareCradles. ▶ Not compatible with other TC5X configurations which don't have the 8-Pin rear I/O connector. Also not compatible with TC52ax units with SE55 Advanced Range Imager due to longer length of device. 	<ul style="list-style-type: none"> ▶ TC5X Rugged Boot/Exoskeleton without handstrap (SG-TC5X-EXONHS-01). ▶ Rugged Boot/Exoskeleton with handstrap (SG-TC5X-EXO1-01) can also be used, but the handstrap will need to be removed before using with the trigger handle.







ADP-RFD90-TC7X-1E		eConnex™ Adapter for TC7X series	<ul style="list-style-type: none"> ▶ Allows TC70/70x/72/75/75x/77 to be mounted on top of RFD90 and communicate directly to the reader. ▶ Adapter also allows both the RFD90 and TC70/70x/72/75/75x/77 to be docked as a pair in Single or Multi-Slot ShareCradles. ▶ Compatible with all generations of TC7X (except TC73/TC78) 	
ADP-RFD90-TC2X-1R		Bluetooth Sled Adapter for TC21/TC26 Standard	<ul style="list-style-type: none"> ▶ Allows TC21/TC26 standard configs to be mounted on top of RFD90 and communicate via Bluetooth to the reader. ▶ Adapter also allows both the RFD90 and the TC device to be docked as a pair in Single or Multi-Slot ShareCradles. ▶ Not compatible with Healthcare versions of TC21/TC26. 	
ADP-RFD90-TC5X-0R		Bluetooth Sled Adapter for TC5X series	<ul style="list-style-type: none"> ▶ Allows TC5X to be mounted on top of RFD90 and communicate via Bluetooth to the reader. ▶ Adapter also allows both the RFD90 and TC5X to be docked as a pair in Single or Multi-Slot ShareCradles. ▶ Compatible with all generations of TC5X (except TC53/TC58 and TC55) - includes TC51, TC52, TC52x, TC52ax, TC56, TC57, TC57x ▶ Does not support TC52ax units with SE55 Advanced Range Imager due to longer length of device. 	<ul style="list-style-type: none"> ▶ TC5X Rugged Boot/Exoskeleton without handstrap (SG-TC5X-EXONHS-01). Rugged Boot/Exoskeleton with handstrap (SG-TC5X-EXO1-01) can also be used, but the handstrap will need to be removed before using with the trigger handle.

ADP-RFD90-TC7X-1R		Bluetooth Sled Adapter for TC7X series	<ul style="list-style-type: none"> ▶ Allows TC7X to be mounted on top of RFD90 and communicate via Bluetooth to the reader. ▶ Adapter also allows both the RFD90 and TC7X to be docked as a pair in Single or Multi-Slot ShareCradles. ▶ Compatible with all generations of TC7X (except TC73/TC78) 	
ADP-RFD90-BT-1R		Bluetooth Sled Adapter for Otterbox uniVERSE cases	<ul style="list-style-type: none"> ▶ Allows devices with Otterbox uniVERSE cases to be mounted on top of RFD90 and communicate via Bluetooth to the reader. 	
SG-RFD90-ADPSCRWS-01		Replacement Screws for Adapters	<ul style="list-style-type: none"> ▶ Includes four screws which are included with each eConnex™ Adapter or Bluetooth Sled Adapter. 	
Soft Goods - Cases/Holsters/ HOLDERS				
Part Number	Picture	Description	Notes	Required Items
SG-RFD90-HLSTR1-01		Rigid Holster with Belt Clip	<ul style="list-style-type: none"> ▶ Holster secures the device to most belts. ▶ Includes belt clip, does not include belt. ▶ Belt clip will rotate the RFD90 so the handle points down or slightly forward. This ensures an easy grip on the handle of the RFD90. ▶ Belt clip features a wide press button at the top that enables it to be used one handed to easily remove the RFD90 when needed. ▶ Supports RFD90 with device adapters (i.e. TC5X, TC7X, etc.) 	

MNT-RFD49-UNPWR-01		<p>Passive (non-charging) Holder (Drop-in Style)</p> 	<ul style="list-style-type: none"> ▶ This is a light duty, quick and easy, one handed, top drop in style holder. ▶ Uses four mounting screws with AMPSS hole pattern - additional mounting hardware required. ▶ Requires Rigid Holster (SG-RFD90-HLSTR1-01) to be installed on device. ▶ Supports RFD90 with device adapters (i.e. TC5X, TC7X, etc.) 	<ul style="list-style-type: none"> ▶ Rigid Holster (SG-RFD90-HLSTR1-01)
--------------------	---	--	--	--

Power Cords/Power Supplies

Part Number	Picture	Description	Notes	Required Items
CBL-DC-388A1-01		DC Power Cord	<ul style="list-style-type: none"> ▶ Used along with Power Supply PWR-BGA12V50W0WW to power Single Slot ShareCradles, Spare Battery Charger or Snap-On Cable (CBL-RFD49-USB1-01). ▶ Cable length is 1.8 meters 	
PWR-BGA12V50W0WW		Power Supply	<ul style="list-style-type: none"> ▶ Used to power to power Single Slot ShareCradles, Spare Battery Charger or Snap-On Cable (CBL-RFD49-USB1-01). ▶ 100-240 VAC, 12V, 4.16A, 50W ▶ Provides US DOE Level VI compliance for power efficiency. ▶ Replaces PWRS-14000-148R and PWRS-14000-148C 	<ul style="list-style-type: none"> ▶ DC Line Cord (CBL-DC-388A1-01) ▶ AC Line Cord (23844-00-00P or country specific version)
KIT-PWR-12V50W		Power Supply Kit	<ul style="list-style-type: none"> ▶ Includes Power Supply (PWR-BGA12V50W0WW) and DC Line Cord (CBL-DC-388A1-01) ▶ Used to power Single Slot ShareCradles, Spare Battery Charger or Snap-On Cable (CBL-RFD49-USB1-01). 	<ul style="list-style-type: none"> ▶ AC Line Cord (23844-00-00P or country specific version)
CBL-DC-381A1-01		DC Power Cord	<ul style="list-style-type: none"> ▶ Used with Power Supply PWR-BGA12V108W0WW to power Multi-Slot ShareCradles. ▶ This cable does not include the black extension release latch which is not required when used on Multi-Slot ShareCradles. 	
CBL-DC-382A1-01		DC Power Cord	<ul style="list-style-type: none"> ▶ Used with Power Supply PWR-BGA12V108W0WW to power Multi-Slot ShareCradles. ▶ Cable has black extension tab for releasing the cable from the back of the cradle. This isn't required when using Multi-Slot ShareCradles. ▶ NOTE: CBL-DC-381A1-01 is the recommended cable to be used. 	

CBL-DC-523A1-01		2-Way DC Y Power Cord	► Used to power two 4-Slot Battery Chargers from one Power Supply (PWR-BGA12V108W0WW)	
CBL-DC-380A1-01		4-Way Power Cable	► Used with Power Supply PWR-BGA12V108W0WW for powering up to four Single Slot Cradles.	
PWR-BGA12V108W0WW		Power Supply	► Used to power Multi-Slot ShareCradles. ► 100-240 VAC, 12V, 9A, 108W ► Provides US DOE Level VI compliance for power efficiency. ► Replaces PWRS-14000-241R	► DC Power Cable (CBL-DC-382A1-01) or 4-Way Power Cable (CBL-DC-380A1-01) ► AC Line Cord (23844-00-00R or country specific version)
23844-00-00R		AC Line Cord	► This AC Line Cord is for use in North America. See the AC Line Cords by Country TAG for comparable line cords to use in other countries.	
Batteries				
Part Number	Picture	Description	Notes	Required Items
BTRY-RFD49-70MA1-01 BTRY-RFD49-70MA1-IN (for India)		RFD90 Spare/Replacement Battery (7000 mAh) with PowerPrecision Plus 	► This is the standard battery that is included with each RFD90 unit. Battery is also compatible with RFD40. ► Provides 8 hours of continuous usage. ► Battery is same form factor as TC8X series devices, but is labeled differently for regulatory compliance. TC8X series batteries should not be used in the RFD90.	