# \*DATALOGIC

This product is covered by one or more of the following patents.

European Patent 851,211 B1; 1,111,690 B1; 1,148,346 B1; 1,209,487 B1.

Italian Patent IT 1.321,772.

# S50-Px SERIES

# **CONTROLS**

OUTPUT LED (S50-Px...A00/B01/C01/C10/C21/E01/F01/T01)

The yellow LED ON indicates that the NO output status is closed.

## STABILITY LED (S50-Px...B01/C01/C21/E01/F01)

The green LED ON indicates that the received signal has a reserve greater than 30% compared to the output switching value.

#### POWER ON LED (S50-Px...G00)

The green LED indicates that the sensor is operating.

#### TRIMMER (\$50-Px...B01/C01/C21/E01/F01/T01)

The trimmer can be used to adjust sensitivity; the operating distance increases turning the trimmer clockwise.

WARNING: The trimmer rotation is limited to 270° by a mechanical stop. Do not apply excessive torque when adjusting (max 40 Nmm).

# **INSTALLATION**

The sensor can be fixed by means of the M18x1 threaded body through a  $\varnothing$  18mm hole, using the specific washer and the two CH.24 nuts enclosed (1.5Nm maximum tightening torque).

Alternatively, the sensor can be mounted through the two housing's holes using two screws (M3x22 or longer) and washer.

Amongst the various possible solutions, we suggest to choose the combination that offers the best visibility of the signalling LEDs and the easiest access to the trimmer.

Wide range of accessories available: 22mm nuts, h=8mm, (2Nm maximum tightening torque) guarantee an improved torque and various orientable fixing brackets ease the sensor

positioning (please refer to the accessories listed in the general catalogue).

The operating distance is measured from the front surface of the sensor lens.

<u>C/D models</u>: To improve the detection, the object has to be moved closer or further away from the front surface of the sensor lens.

In case of lateral translation, the object must move as indicated in the figure.



Radial vers.

# CONNECTIONS


The connections are compliant to the EN 60947-5-2 standard.



### M12 CONNECTOR



# **DIMENSIONS**

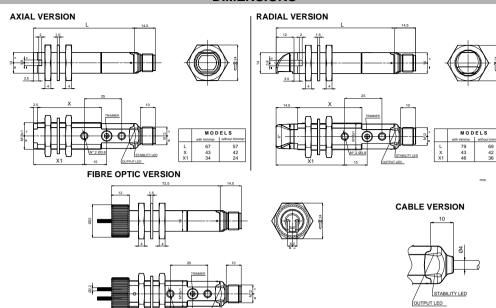

# TECHNICAL DATA

	S50-PA AXIAL VERSION	S50-PR RADIAL VERSION
Power supply:	10 30 Vdc (limit values)	
Ripple:	2 Vpp max.	
Current consumption	35 mA max.	
(output current excluded):	35 MA Max.	
Outputs:	NO and NC; PNP or NPN (short-circuit protection)	
Output current:	100 mA max.	
Output saturation voltage:	2 V max.	
Response time:	0.5 ms (2 ms mod.F01/G00)	
Switching frequency:	1KHz (250 Hz mod.F01/G00)	
Indicators:	OUTPUT LED (YELLOW) excluding mod.G00	
	STABILITY LED (GREEN) (mod.B01/C01/C21/E01/F01)	
	POWER ON LED (GREEN) (mod.G00)	
Setting:	sensitivity trimmer (mod.B01/C01/C01/E01/F01/T01)	
Operating temperature:	-25 55 ℃	
Storage temperature:	-25 70 °C	
Insulating strength:	500 Vac 1 min., between electronics and housing	
Insulating resistance:	>20 MΩ 500 Vdc, between electronics and housing	
Operating distance (typical values):	A00: 0.14m on R2	
, , ,	B01: 0.13.5m on R2	B01: 0.12m on R2
	C01: 060cm	C01: 035cm
	C10: 010cm	C10: 08cm
	C21: 035cm	D00: 08cm
	D00: 0.510cm	F01/G00: 020m
	F01/G00: 025m	T01: 0.11m on R2
	E01: 30mm with OF-42 / 100mm with OF-43	
	T01: 0.11m on R2	
Emission type:	red (630 nm) (mod.D00/E01) / red (660 nm) (mod.B01/T01) / infrared (880nm) (mod.A00/C01/C10/C21/G00)	
Ambient light rejection:	according to EN 60947-5-2	
Vibrations:	0.5 mm amplitude, 10 55 Hz frequency, for every axis (EN60068-2-6)	
Shock resistance:	11 ms (30 G) 6 shock for every axis (EN60068-2-27)	
Housing material:	PBT	
Lens material:	PMMA	
Mechanical protection:	IP67	
Connections:	2 m cable Ø 4 mm / M12 - 4 pole connector	
Weight:	75 g. max. cable vers. / 25 g. max. connector vers.	
AtEx 2014/34/EU:	I I 3G EX nA II T6	
	113D EX tD A22 IP67 T85°C	

#### SETTING

#### Setting of S50-Px...A00

Position the sensor and reflector on opposite sides.

Find the points where the yellow LED (OUT) is switched ON and OFF in both vertical and horizontal positions, and fix the sensor in the centre between these

# Setting of S50-Px...B01/T01

Position the sensor and reflector on opposite sides.

Turn the sensitivity trimmer to the maximum position.

Moving the sensor both vertically and horizontally, determine the power on and off points of the yellow LED (OUT) and then mount the sensor in the middle of the points defined. Optimum operation is obtained when the green LED (mod.B01) is ON and the yellow LED is OFF.

<u>B01 models</u>: If necessary reduce sensitivity in order to detect very small targets. In order to improve alignment, repeat the procedure detailed above whilst progressively reducing the sensitivity.

701 mode! Turn the sensitivity trimmer counterclockwise until the

yellow LED turns ON (pos.A). Turn slowly the trimmer again clockwise until the yellow LED turns OFF (Operating condition, pos.B).

#### Setting of S50-Px...F01/G00/E01 with OF-43 (P/R fibre-optics)

Position the sensors (fibre terminals) on opposite sides.

Turn the sensitivity trimmer to maximum: moving the sensor both vertically and horizontally, determine the power on and off points of the yellow LED (OUT) and then mount the sensor in the middle of the points defined. Optimum operation is obtained when the green LED is ON and the yellow LED is OFF (the output function and the relative LEDs are inverted in the E01 model with the OF-43 fibre). If necessary, reduce sensitivity using the trimmer, in order to detect very small targets. In order to improve alignment, repeat the procedure detailed above whilst progressively reducing the sensitivity.

#### Setting of S50-Px...C01/C21/E01 with OF-42 (proximity fibre)

Tum the sensitivity trimmer to minimum: the green LED is ON, the yellow LED is OFF. Position the target to detect in front of the sensor or of the fibre terminals. Tum the sensitivity trimmer clockwise until the yellow LED turns ON (*Target detected state*, pos.A).

Remove the target, the vellow LED turns OFF.

Turn the sensitivity trimmer clockwise until the yellow LED turns ON (Background detected state, pos.B).

The trimmer reaches maximum if the background is not detected.

Turn the trimmer to the intermediate position C, between the two positions A and B. The green LED must be ON.

#### Setting of S50-Px...C10/D00

The operating distance range of these sensors is factory preset: please consider this feature when positioning.

# **TEST FUNCTION (S50-Px...G00)**

The TEST+ and TEST- inputs can be used to inhibit the emitter and verify that the system is correctly operating.

The receiver output should switch when the test is activated while the beam is uninterrupted.

The inputs activating voltage range is 10 ... 30 VDC.

### Datalogic S.r.l.

Via S. Vitalino 13 - 40012 Calderara di Reno - Italy

Tel: +39 051 3147011 - Fax: +39 051 3147205 - www.datalogic.com

 $\label{eq:helpful links} \mbox{Helpful links at www.datalogic.com: } \mbox{\bf Contact Us, Terms and Conditions, Support.}$ 

The warranty period for this product is 36 months. See General Terms and Conditions of Sales for further details.

Under current Italian and European laws, Datalogic is not obliged to take care of product disposal at the end of its life. Datalogic recommends disposing of the product in compliance with local laws or contacting authorised waste collection centres.

© 2007 - 2017 Datalogic S.p.A. and/or its affiliates • ALL RIGHTS RESERVED • Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates. Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. All other trademarks and brands are property of their respective owners. Datalogic reserves the right to make modifications and improvements without prior notification.

826001247 Rev.J