



itgstore
Let us optimize you!



YOUR PARTNER
in the digitalization process.

USER MANUAL

KUBE II

CUSTOM[®]

CUSTOM S.p.A.
Via Berettine 2/B
43010 Fontevivo (PARMA) - Italy
Tel. : +39 0521-680111
Fax : +39 0521-610701
http: www.custom.biz

Customer Service Department:
Email : support@custom.it

© 2015 CUSTOM S.p.A. – Italy.
All rights reserved. Total or partial reproduction of this manual in whatever form, whether by printed or electronic means, is forbidden. While guaranteeing that the information contained in it has been carefully checked, CUSTOM S.p.A. and other entities utilized in the realization of this manual bear no responsibility for how the manual is used. Information regarding any errors found in it or suggestions on how it could be improved are appreciated. Since products are subject to continuous check and improvement, CUSTOM S.p.A. reserves the right to make changes in information contained in this manual without prior notification.

The pre-installed multimedia contents are protected from Copyright CUSTOM S.p.A. Other company and product names mentioned herein may be trademarks of their respective companies. Mention of third-party products is for informational purposes only and constitutes neither an endorsement nor a recommendation. CUSTOM S.p.A. assumes no responsibility with regard to the performance or use of these products.

THE IMAGES USED IN THIS MANUAL ARE USED AS AN ILLUSTRATIVE EXAMPLES. THEY COULDN'T REPRODUCE THE DESCRIBED MODEL FAITHFULLY.

UNLESS OTHERWISE SPECIFIED, THE INFORMATION GIVEN IN THIS MANUAL ARE REFERRED TO ALL MODELS IN PRODUCTION AT THE ISSUE DATE OF THIS DOCUMENT.

GENERAL INSTRUCTIONS

CUSTOM S.p.A. declines all responsibility for accidents or damage to persons or property occurring as a result of tampering, structural or functional modifications, unsuitable or incorrect installations, environments not in keeping with the equipment's protection degree or with the required temperature and humidity conditions, failure to carry out maintenance and periodical inspections and poor repair work.

GENERAL SAFETY INFORMATION

Your attention is drawn to the following actions that could compromise the characteristics of the product:

- Read and retain the instructions which follow.
- Follow all indications and instructions given on the device.
- Make sure that the surface on which the device rests is stable. If it is not, the device could fall, seriously damaging it.
- Make sure that the device rests on a hard (non-padded) surface and that there is sufficient ventilation.
- Do not fix indissolubly the device or its accessories such as power supplies unless specifically provided in this manual.
- When positioning the device, make sure cables do not get damaged.
- [Only OEM equipment] The equipment must be installed in a kiosk or system that provides mechanical, electrical and fire protection.
- The mains power supply must comply with the rules in force in the Country where you intend to install the equipment.
- Make sure that there is an easily-accessible outlet with a capacity of no less than 10A closely to where the device is to be installed.
- Make sure the power cable provided with the appliance, or that you intend to use is suitable with the wall socket available in the system.
- Make sure the electrical system that supplies power to the device is equipped with a ground wire and is protected by a differential switch.
- Before any type of work is done on the machine, disconnect the power supply.
- Use the type of electrical power supply indicated on the device label.
- These devices are intended to be powered by a separately certified power module having an SELV, non-energy hazardous output. (IEC60950-1 second edition).
- [Only POS equipment] The energy to the equipment must be provided by power supply approved by CUSTOM S.p.A.
- Take care the operating temperature range of equipment and its ancillary components.
- Do not block the ventilation openings.
- Do not insert objects inside the device as this could cause short-circuiting or damage components that could jeopardize printer functioning.
- Do not carry out repairs on the device yourself, except for the normal maintenance operations given in the user manual.
- The equipment must be accessible on these components only to trained, authorized personnel.
- Periodically perform scheduled maintenance on the device to avoid dirt build-up that could compromise the correct, safe operation of the unit.
- Do not touch the head heating line with bare hands or metal objects. Do not perform any operation inside the printer immediately after printing because the head and motor tend to become very hot.
- Use consumables approved by CUSTOM S.p.A.



THE CE MARK AFFIXED TO THE PRODUCT CERTIFY THAT THE PRODUCT SATISFIES THE BASIC SAFETY REQUIREMENTS.

The device is in conformity with the essential Electromagnetic Compatibility and Electric Safety requirements laid down in Directives 2006/95/CE and 2004/108/CE inasmuch as it was designed in conformity with the provisions laid down in the following Standards:

- EN 55022 Class B (*Limits and methods of measurements of radio disturbance characteristics of Information Technology Equipment*)
- EN 55024 (*Information Technology Equipment – Immunity characteristics – Limits and methods of measurement*)
- EN 60950-1 (*Safety of information equipment including electrical business equipment*)

The device is in conformity with the essential requirements laid down in Directives 1999/05/CE about devices equipped with intentional radiators. The Declaration of Conformity and other available certifications can be requested to support@custom.it please providing the correct part number shown on product label or in the invoice.



GUIDELINES FOR
THE DISPOSAL OF
THE PRODUCT

The crossed-out rubbish bin logo means that used electrical and electronic products shall NOT be mixed with unsorted municipal waste. For more detailed information about recycling of this product, refer to the instructions of your country for the disposal of these products.

- Do not dispose of this equipment as miscellaneous solid municipal waste, but arrange to have it collected separately.
- The re-use or correct recycling of the electronic and electrical equipment (EEE) is important in order to protect the environment and the wellbeing of humans.
- In accordance with European Directive WEEE 2002/96/EC, special collection points are available to which to deliver waste electrical and electronic equipment and the equipment can also be handed over to a distributor at the moment of purchasing a new equivalent type.
- The public administration and producers of electrical and electronic equipment are involved in facilitating the processes of the re-use and recovery of waste electrical and electronic equipment through the organisation of collection activities and the use of appropriate planning arrangements.
- Unauthorised disposal of waste electrical and electronic equipment is punishable by law with the appropriate penalties.



The format used for this manual improves use of natural resources reducing the quantity of necessary paper to print this copy.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

- The devices may not cause harmful interference.
- The devices must accept any interference received, including interference that may cause undesired operation.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications to this product not authorized by CUSTOM S.p.A. could void the FCC & Industry Canada regulations and negate your authority to operate the product.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

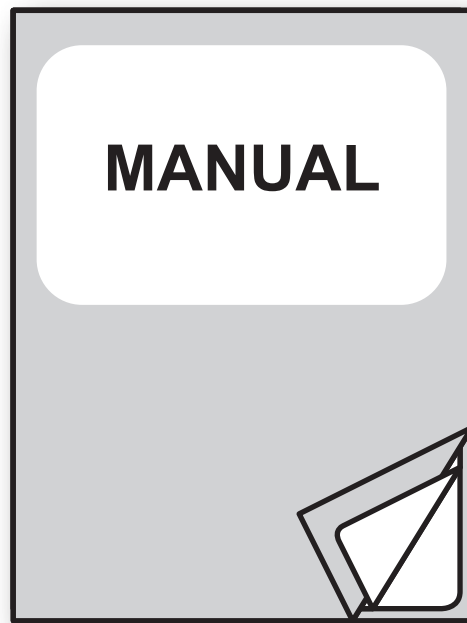

For details on the commands,
refer to the manual with code **77200000001000**

TABLE OF CONTENTS

1	INTRODUCTION	9
1.1	Document structure	9
1.2	Explanatory notes used in this manual	9
2	DESCRIPTION	11
2.1	Box content	11
2.2	Device components	12
2.3	Product label	14
2.4	Key functions: power up	15
2.5	Key functions: standby	16
2.6	Status messages	17
3	INSTALLATION	19
3.1	Wall mounting	19
3.2	Connections	23
3.3	Pinout	24
3.4	Driver and SDK	27
4	OPERATION	29
4.1	Opening the device	29
4.2	Switch the device ON/OFF	30
4.3	Loading the paper roll	31
5	CONFIGURATION	33
5.1	Configuration mode	33
5.2	Setup report	34
5.3	Device status	35
5.4	Printer parameters	36
5.5	Hexadecimal dump	40
6	MAINTENANCE	41
6.1	Autocutter jam	41
6.2	Planning of cleaning operations	43
6.3	Cleaning	44
6.4	Upgrade firmware	47

7	SPECIFICATION	49
7.1	Hardware specifications	49
7.2	Character specifications	53
7.3	Specifications for Wi-Fi DONGLE Access Point Ethernet (optional)	53
7.4	Device dimensions	54
7.5	Power supply dimensions cod. 961GE020000001	55
7.6	Power supply dimensions cod. 963GE020000003 (optional)	56
7.7	Paper specifications	57
7.8	Character sets (release HW \geq R6)	58
8	CONSUMABLES	61
9	ACCESSORIES	63
9.1	Sides replacement	64
10	ALIGNMENT	67
10.1	Enable alignment	68
10.2	Calibration	70
10.3	Alignment parameters	72
10.4	Printing area	75
11	TECHNICAL SERVICE	77



1 INTRODUCTION

1.1 Document structure

This document includes the following chapters:

1	INTRODUCTION	information about this document
2	DESCRIPTION	general description of device
3	INSTALLATION	information required for a correct installation of the device
4	OPERATION	information required to make the device operative
5	CONFIGURATION	description of the configuration parameters of the device
6	MAINTENANCE	information for a correct periodic maintenance
7	SPECIFICATION	technical specification for the device and its accessories
8	CONSUMABLES	description and installation of the available consumables for the device
9	ACCESSORIES	description and installation of the available accessories for the device
10	ALIGNMENT	information required for managing the paper alignment
11	TECHNICAL SERVICE	information required for contacting the technical service

1.2 Explanatory notes used in this manual

NOTE:

Gives important information or suggestions relative to the use of the device

ATTENTION:

Gives information that must be carefully followed to guard against damaging the device

DANGER:

Gives information that must be carefully followed to guard against operator injury or damage




2 DESCRIPTION

2.1 Box content

Remove the device from its carton being careful not to damage the packing material so that it may be re-used if the device is to be transported in the future.

Make sure that all the components illustrated below are present and that there are no signs of damage. If there are, contact Customer Service.

1. Paper roll
2. AC adapter
3. Serial cable
4. AC Power cable
5. Device
6. Documentation (Short guide, sheet warranty)


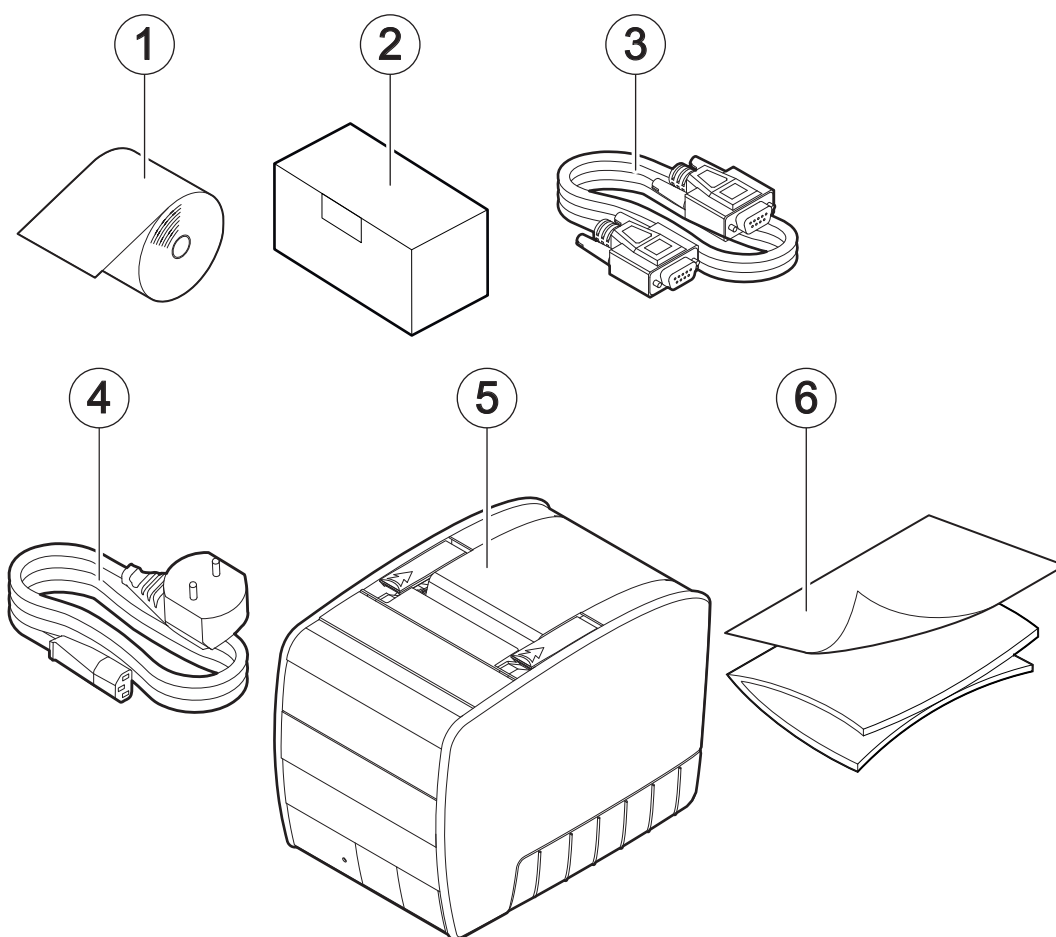


- Open the device packaging.
- Remove the packing frame content and remove the packing frame.
- Take out the device.
- Keep the box, trays and packing materials in the event the device must be transported/shipped in the future.

2.2 Device components


External view

1. Paper compartment
2. Paper out with serrated blade
3. Opening levers
4. Status LED
5. FEED key
6. ON/OFF key
7. RS232 serial port
8. USB port
9. Drawer port
10. Power supply port

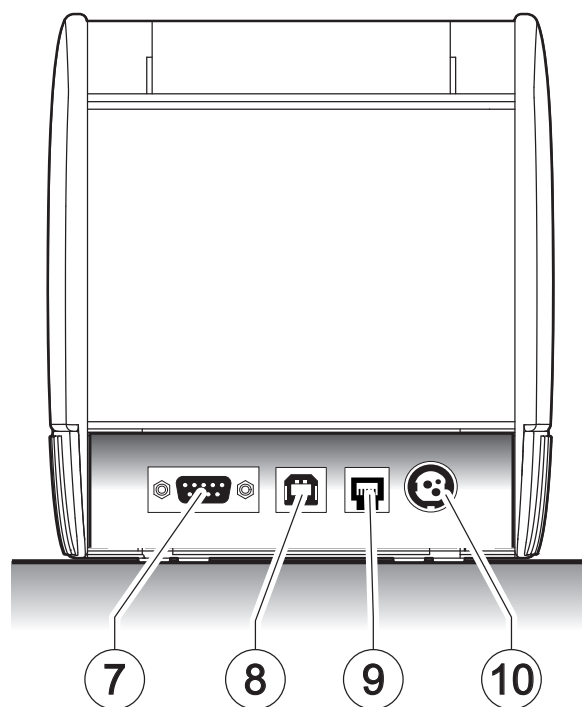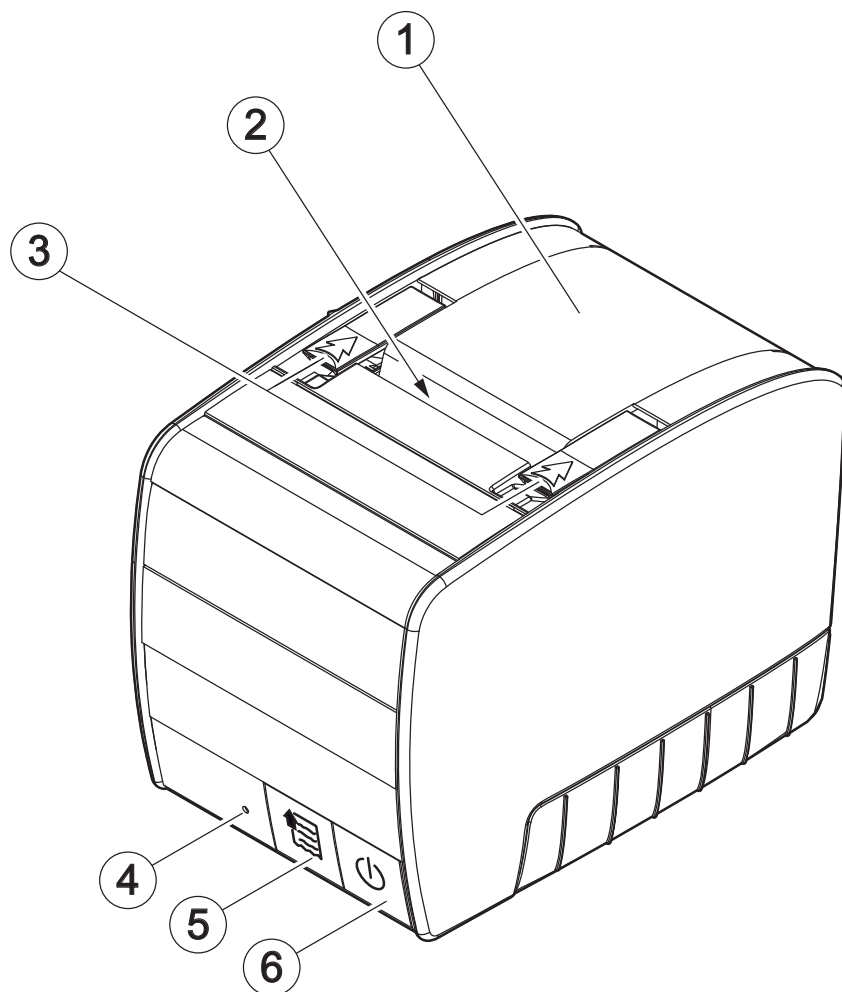


Internal view

1. Sensor for cover open
2. Sensor for paper in presence / Sensor for black mark
3. Temperature sensor for the printhead
4. Sensor for detecting low paper

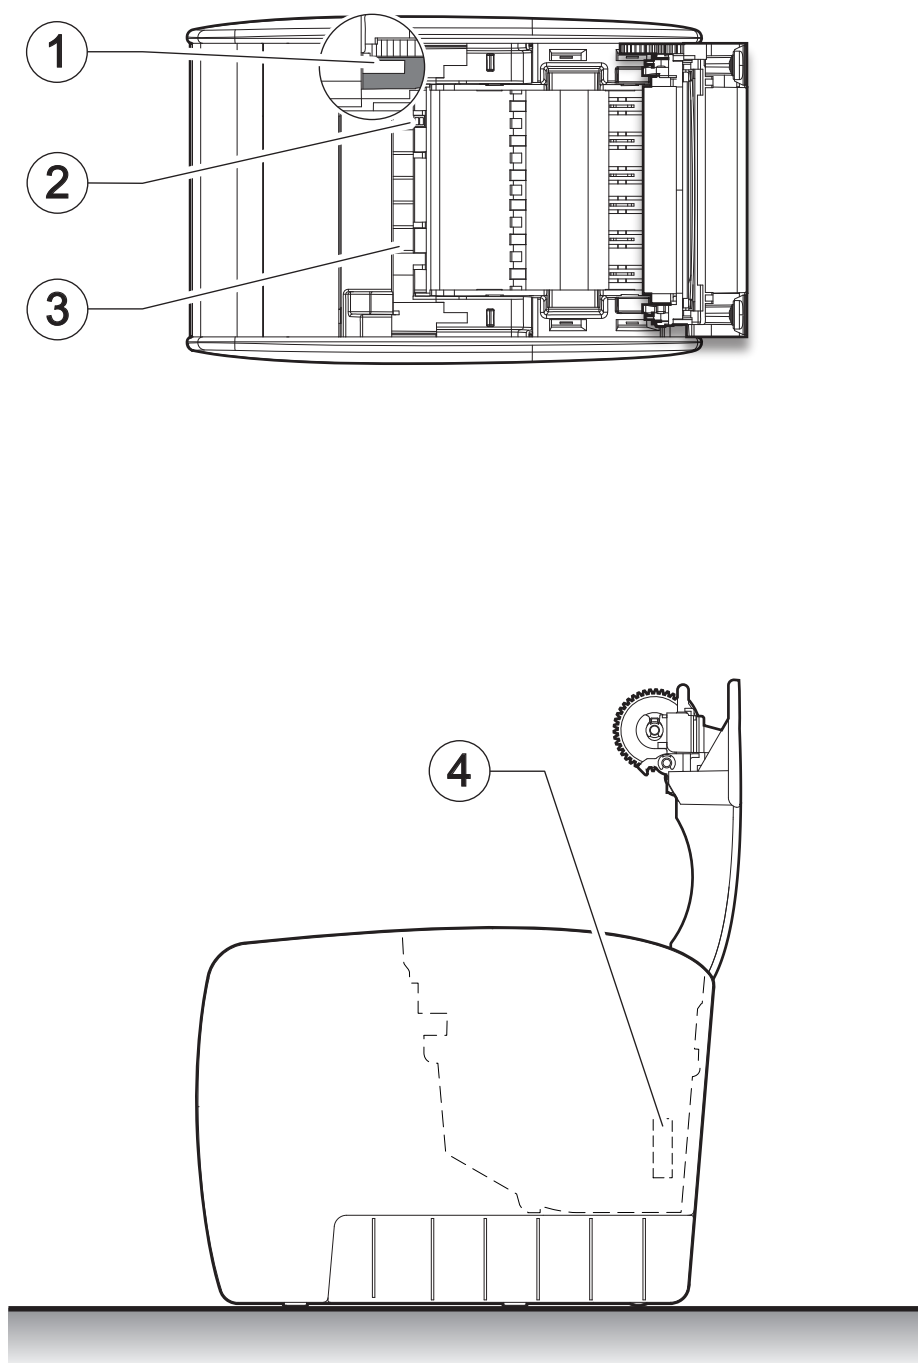


2.3 Product label


PC = Product code (14 digits)
SN = Serial number
HW = Hardware release

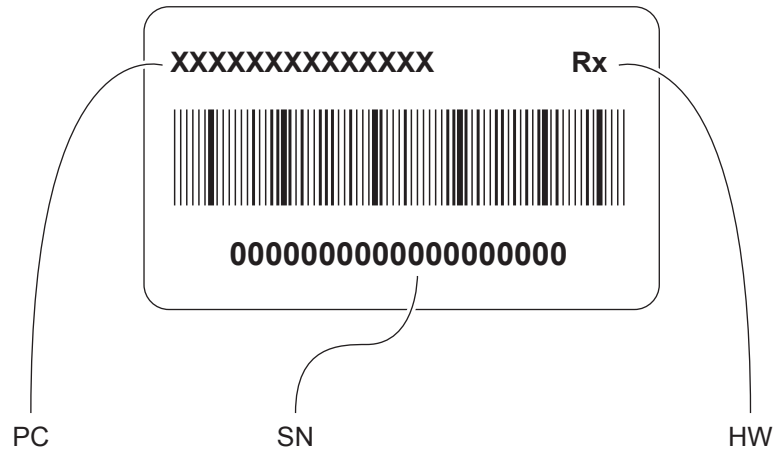

2.4 Key functions: power up

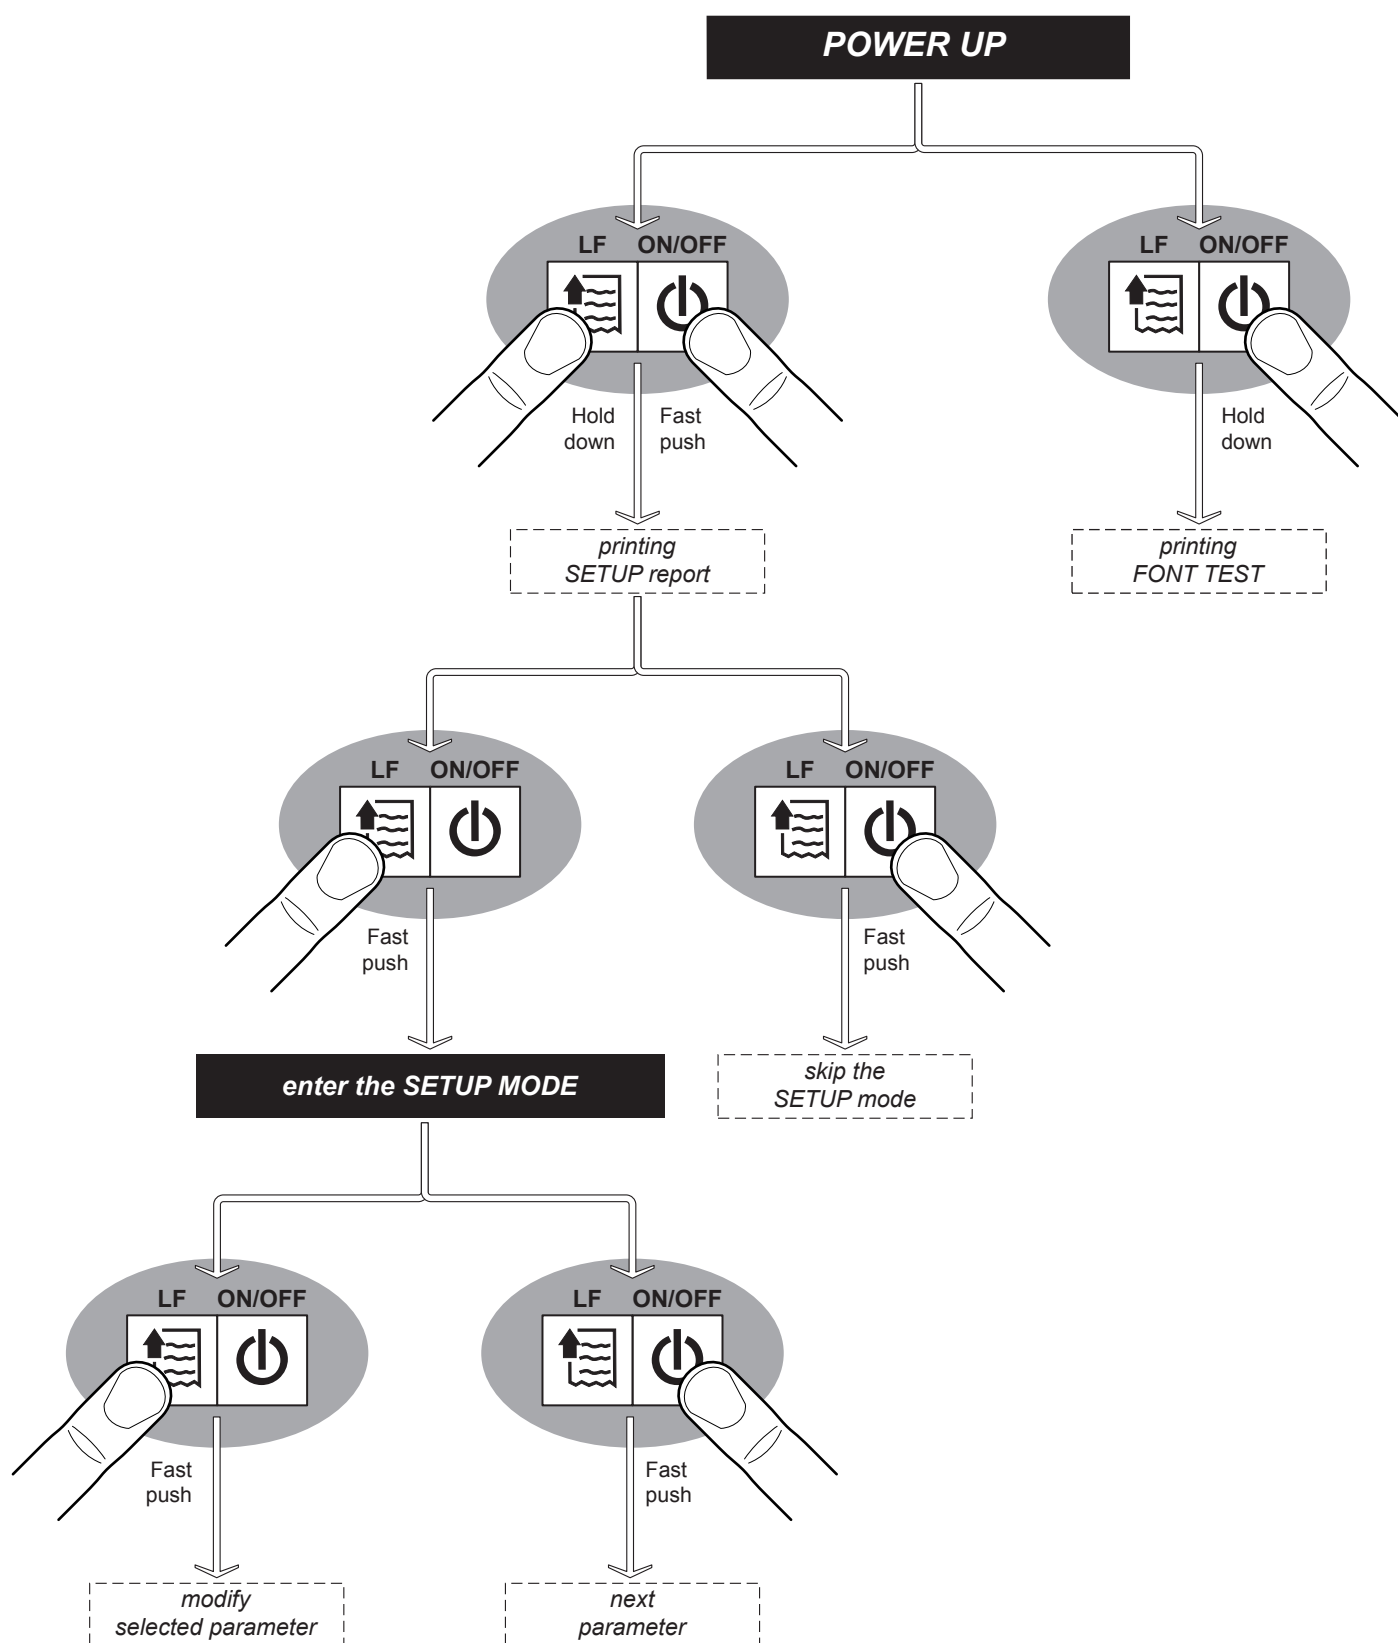




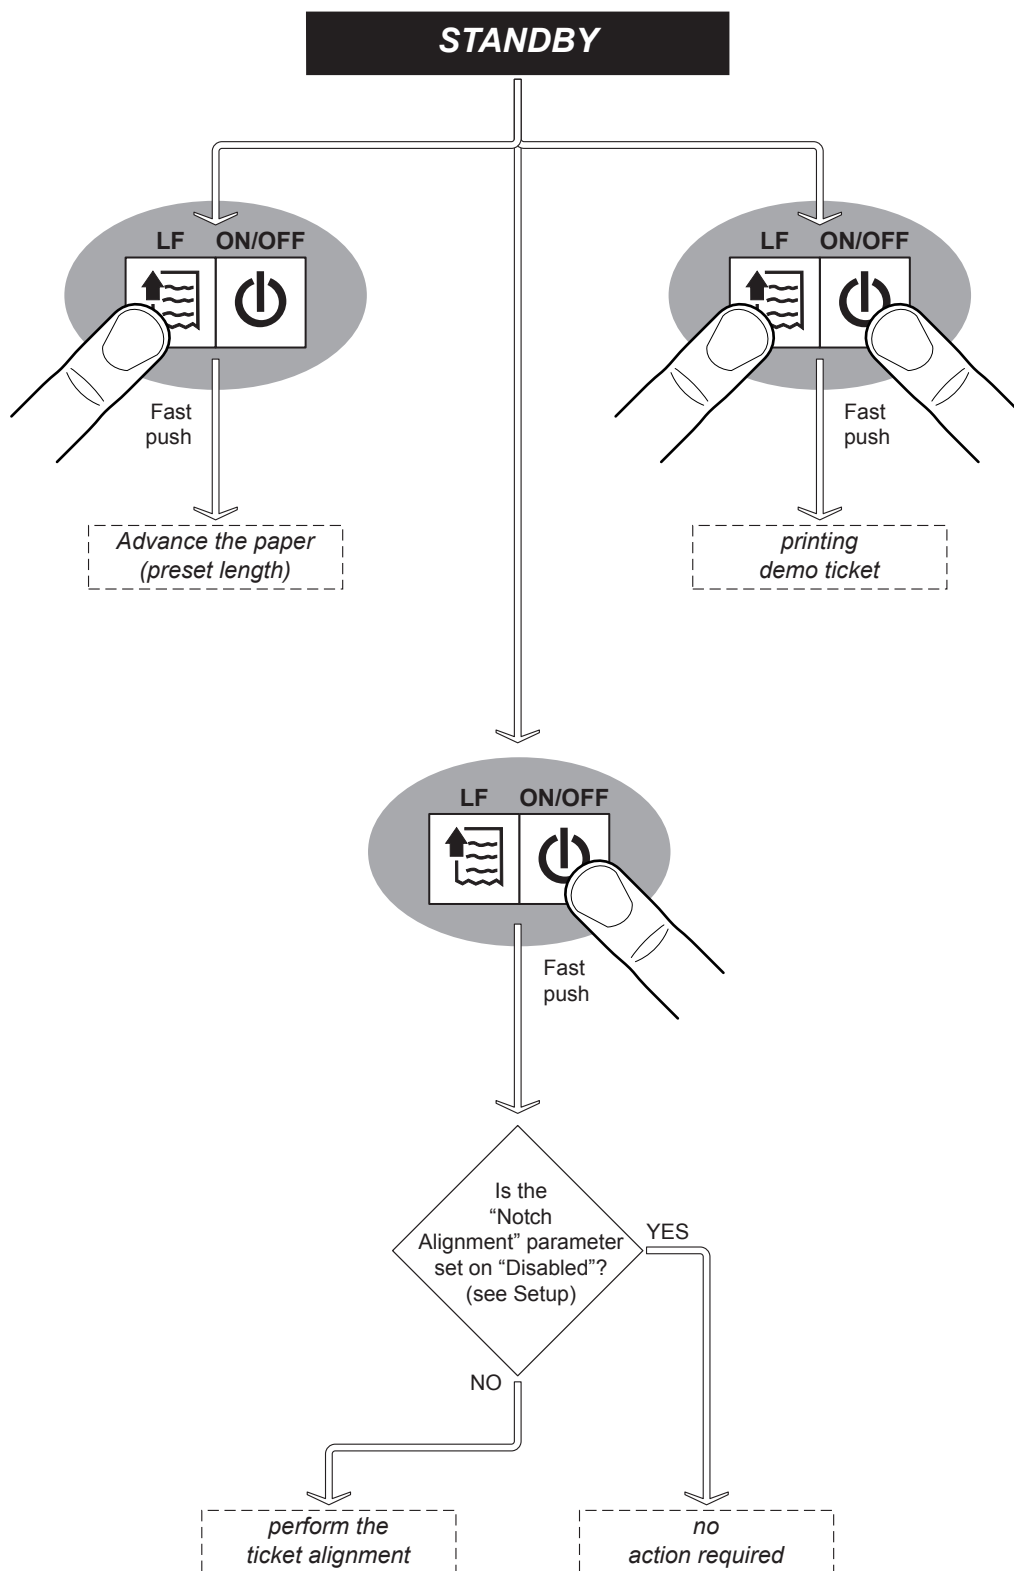

2.5 Key functions: standby





2.6 Status messages

The Status LED indicates hardware status of device. Given in the table below are the various LED signals and the corresponding device status.


STATUS LED		DESCRIPTION	
-		OFF	PRINTER OFF
GREEN		ON	PRINTER ON: NO ERROR
GREEN COMMUNICATION STATUS		x 1	RECEIVE DATA
		x 2	RECEPTION ERRORS (PARITY, FRAME ERROR, OVERRUN ERROR)
		x 3	COMMAND NOT RECOGNIZED
		x 4	COMMAND RECEPTION TIME OUT
		x 5	LOW PAPER
YELLOW RECOVERABLE ERROR		x 2	PRINthead OVERHEATED
		x 3	PAPER END
		x 5	POWER SUPPLY VOLTAGE INCORRECT
		x 6	COVER OPEN
RED UNRECOVERABLE ERROR		x 3	RAM ERROR
		x 4	EEPROM ERROR
		x 5	CUTTER ERROR




3 INSTALLATION

3.1 Wall mounting

The device is provided with two slots for the mounting of the machine on pins. The slots are placed at the bottom of the machine (see following figure). The dimensions shown in the image are in millimetres.

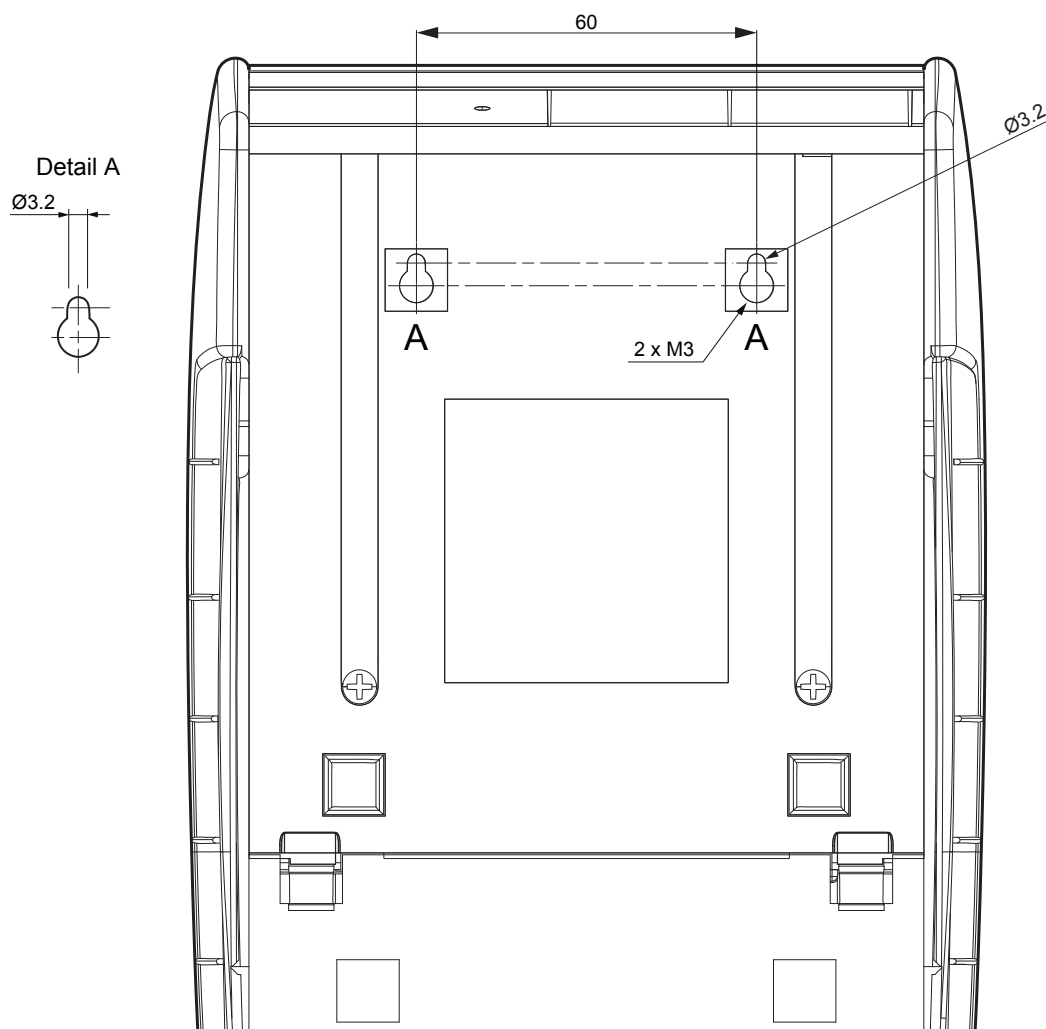


Attach two pins to the wall using the measurements shown above. The dimensions of the fixing pins are provided below. The dimensions shown in the image are in millimetres.

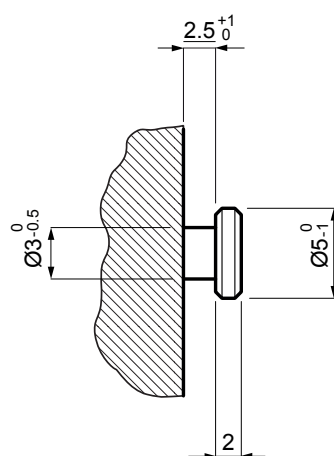

Mounting


To use the device in vertical position proceed as follows.

1

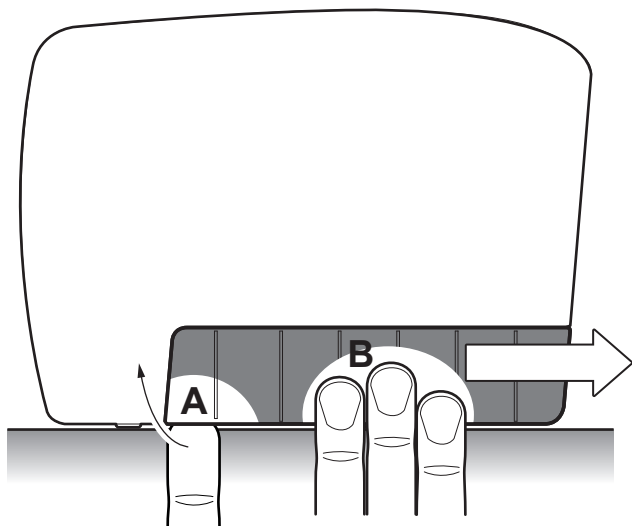


While holding the point A, put pressure at point B by pushing the left carter in the direction indicated.

2

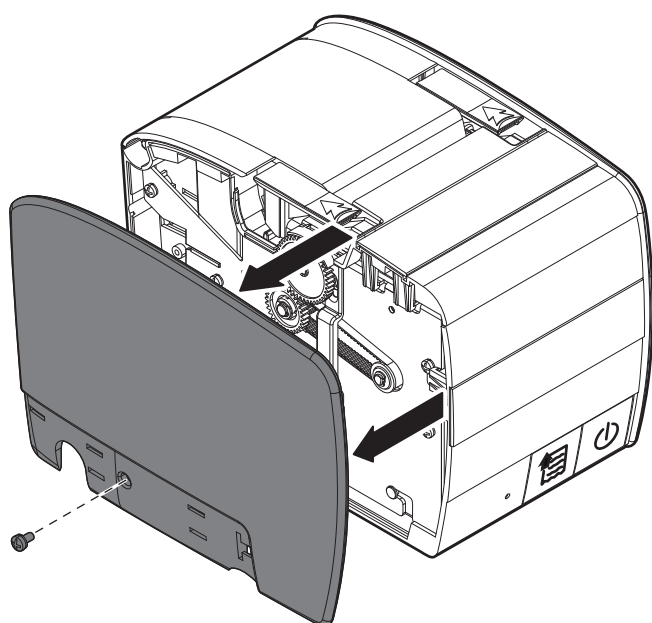


Unscrew the fixing screw and remove the left side.

3

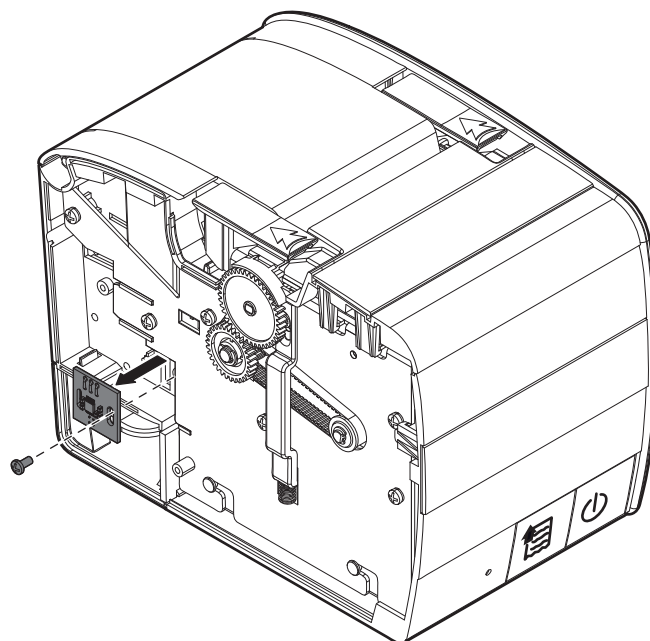


Unscrew the fixing screw and remove the low paper sensor board.

4

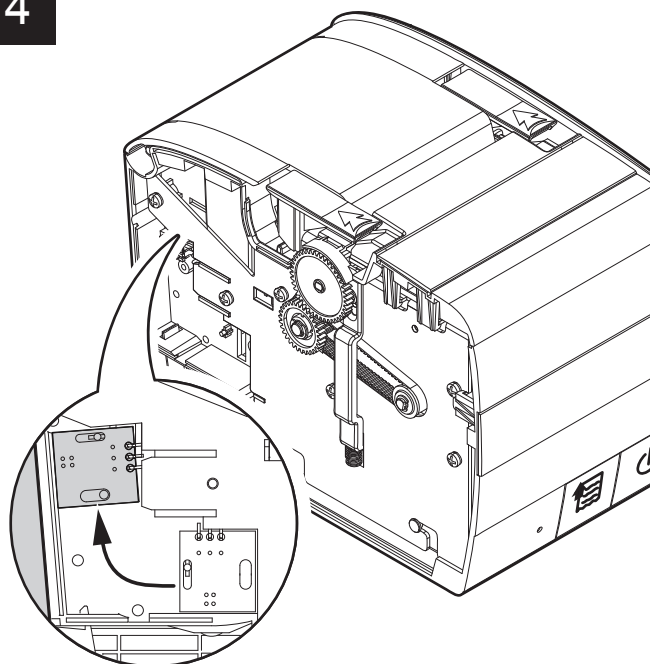


Place the low paper sensor board in the new position as shown in figure.

5

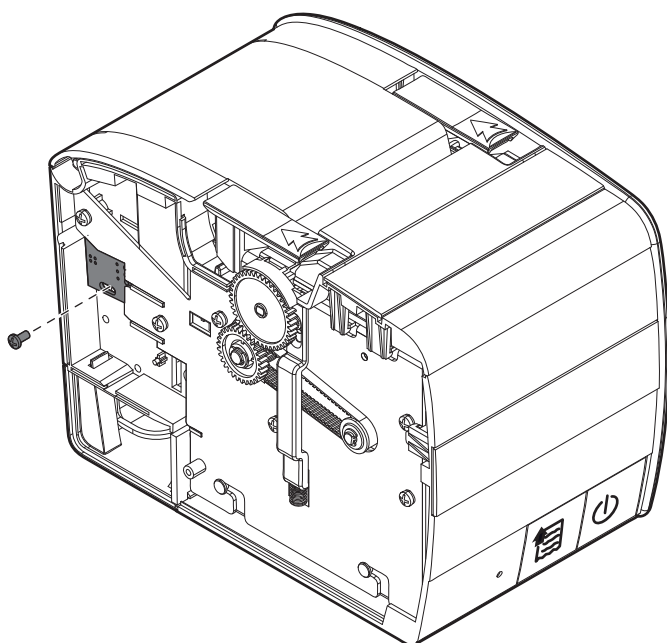


Fix the sensor board using the fixing screw removed previously.

6

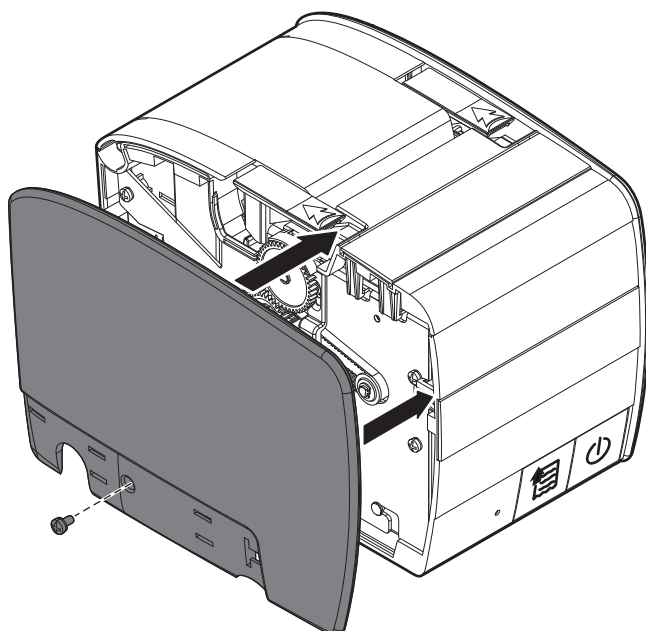


Reassemble the left side removed previously .

7

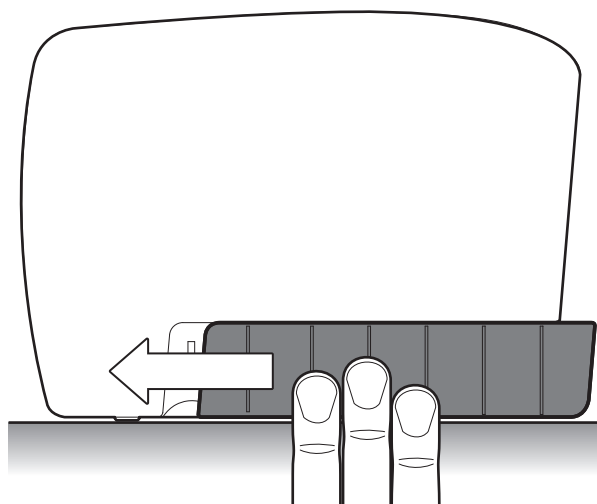


Reassemble the left carter removed previously sliding it in the direction indicated.

8

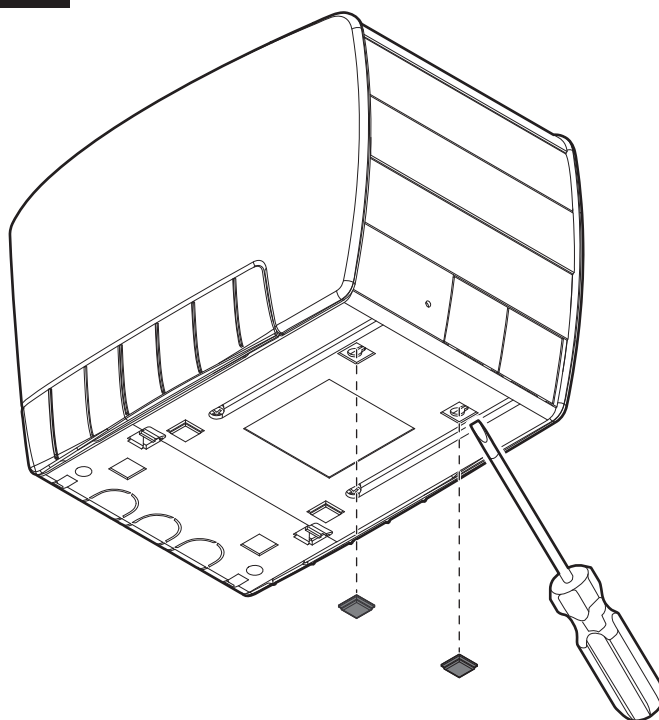

Remove the two adhesive foets by levering with a small screwdriver as shown.


9

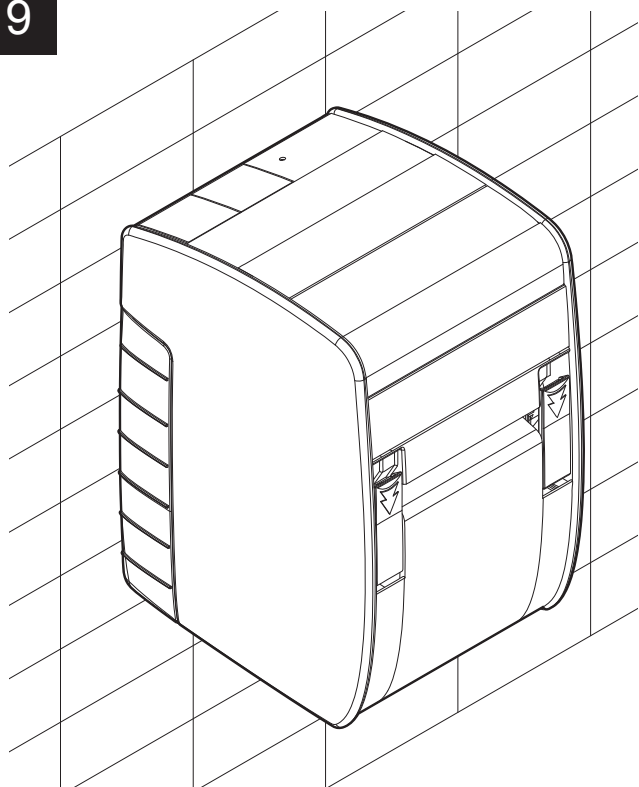

Fix the device to the wall.

3.2 Connections

The following figure shows the possible connections for the device.

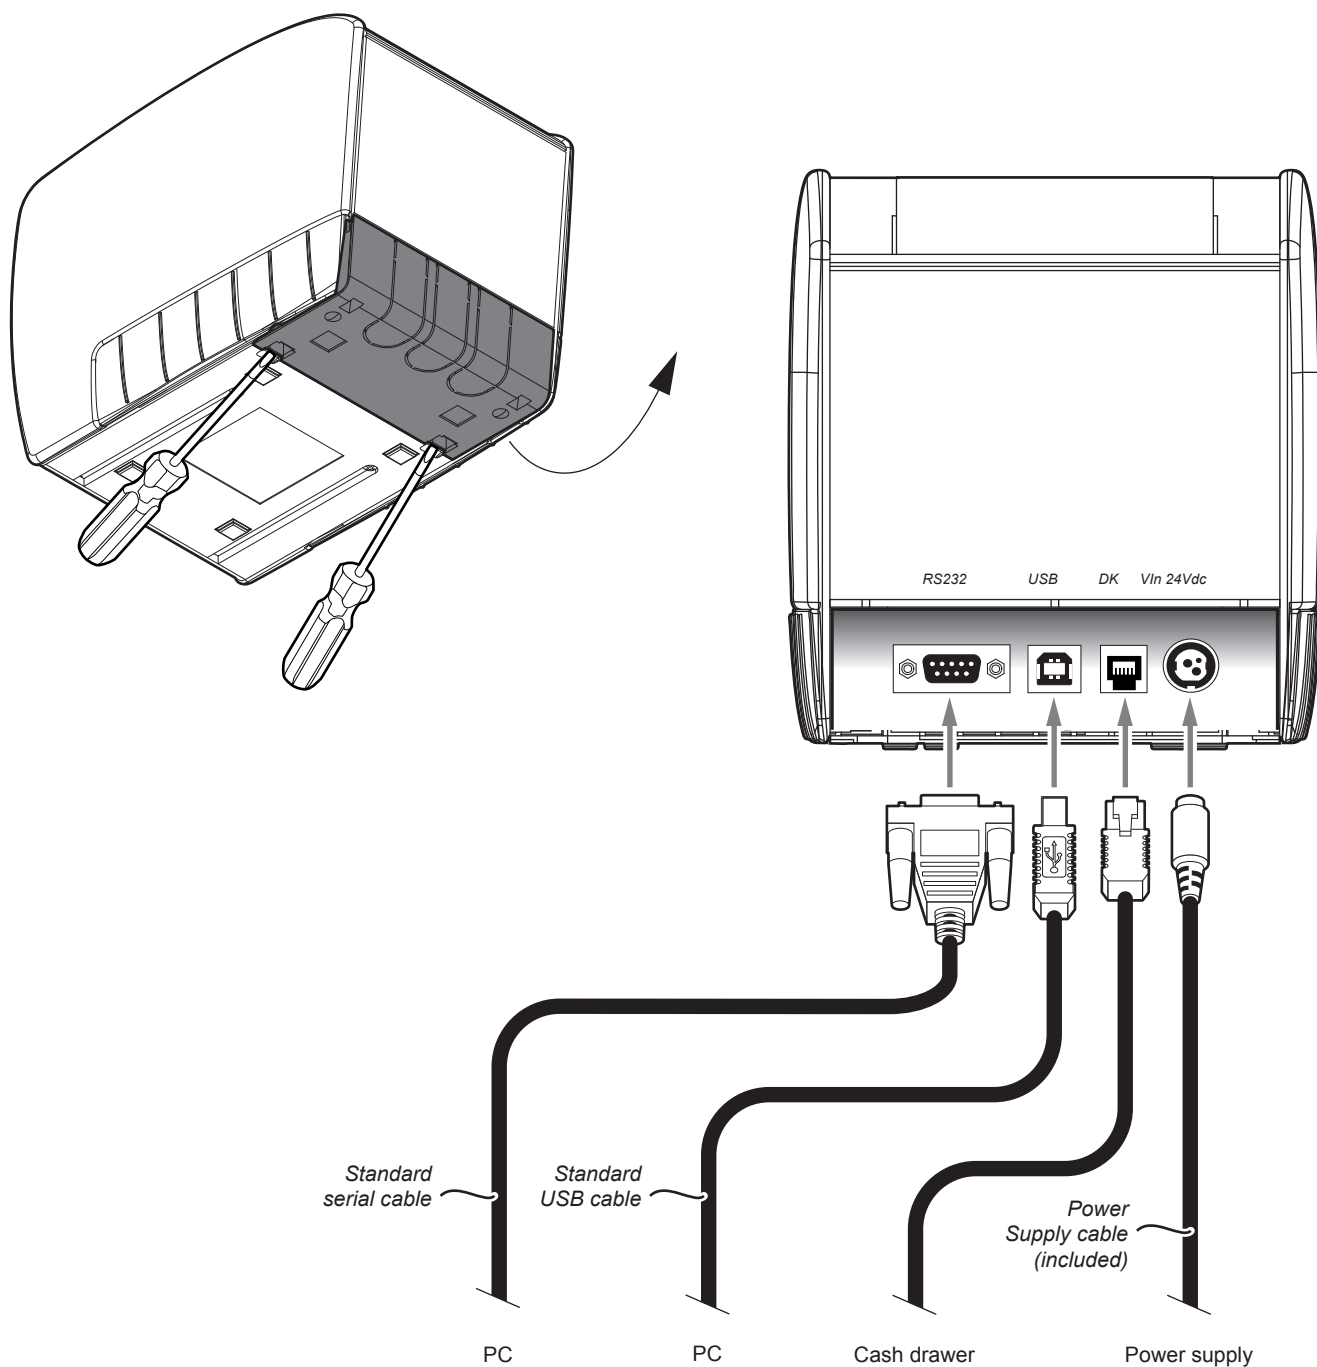

ATTENTION:

In some using conditions, we recommend the installation of a ferrite core on the power supply cable.

NOTE: If RS232 and USB connectors are inserted, communication port is USB.

3.3 Pinout




POWER SUPPLY
Tripolar female connector

J10	1	+24 Vdc
	2	GND
	3	GND
	4	Frame GND


ATTENTION:
Respect power supply polarity.

NOTE:
Power supply cable
The following figure shows the connector pinout of the power supply cable for the device:

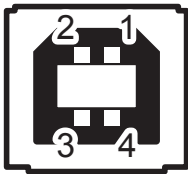

USB INTERFACE
Female USB type B connector

J14	1	USB-PLUG	(in)
	2	D0 -	(in/out)
	3	D0 +	(in/out)
	4	GND	
	SH1	SHIELD	
	SH2	SHIELD	

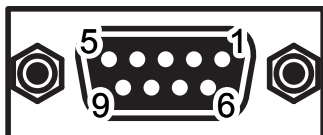

SERIAL INTERFACE

Female DB9 connector


J13	1	DTR	(out)	When "1", device is fed
	2	TX	(out)	During transmission, oscillates between "0" and "1" depending on data
	3	RX	(in)	During reception, oscillates between "0" and "1" depending on data
	4	n.c.		
	5	GND		
	6	DTR	(out)	When "1", device is fed
	7	n.c.		
	8	RTS-O	(out)	When "1", device is ready to receive data
	9	n.c.		

NOTES

Given the presence of the RS232 standard, logic value "0" corresponds to a voltage level of between +3 Vdc and +15 Vdc and logic value "1" corresponds to a voltage level of between -3 Vdc and -15 Vdc.

DEVICE > PC connection

Use an RS232 serial cable to connect the printer to a personal computer. The following picture shows an example of connection between the device and a personal computer using a 9 pin serial connector.

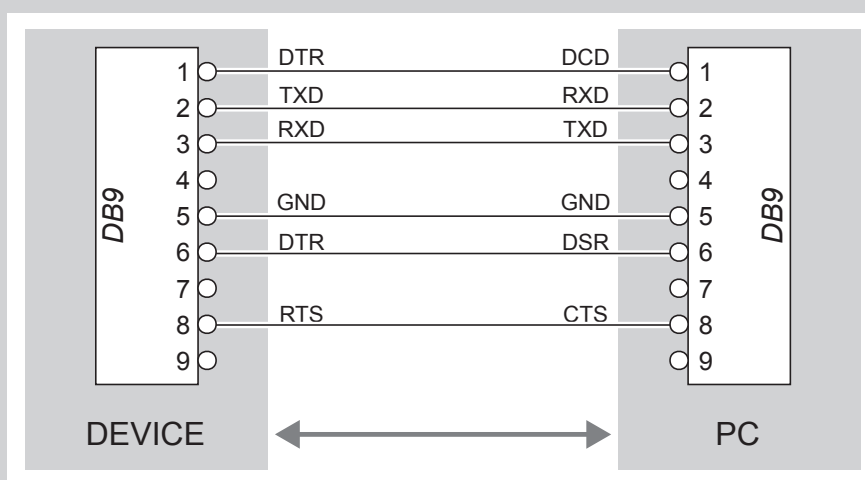

When use a serial cable, we recommend the installation of a ferrite core on the serial cable..




DRAWER CONNECTOR

Female RJ12 connector

J7	1	GND		
	2	SOL-EN	(out)	Drawer 1 command (open collector)
	3	CASS	(in)	Drawer status
	4	+24 Vdc		
	5	n.c.		
	6	GND		


NOTES:

The solenoid of the drawer 1 must be connected from Pin 2 to Pin 4 on the drawer connector

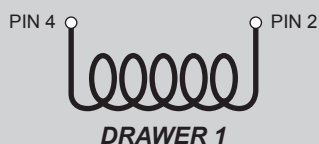

DEVICE > CASH DRAWER (optional) connection

Use an optional adapter cable RJ12-Jack to connect the device to a cash drawer. Refer to the picture below for the connector pin signals

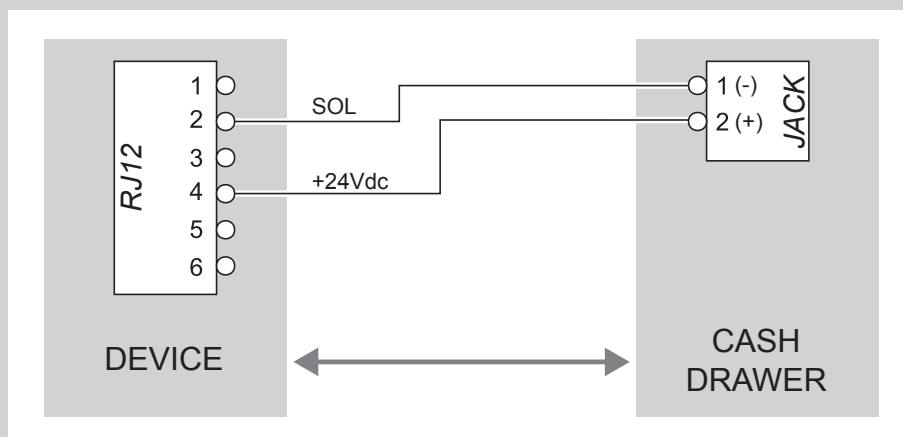



3.4 Driver and SDK

The drivers are available for the following operating systems:

OPERATING SYSTEM	DESCRIPTION	INSTALLATION PROCEDURE
Windows	Driver for Windows XP	From the START menu, press Run and type-in the path where the SW was saved on your PC, then click OK. Follow the instructions that appear on the screen to install the driver.
	Driver for Windows VISTA (32/64bit)	
	Driver for Windows 7 (32/64bit)	
	Driver for Windows 8 (32/64bit)	
	Driver for Windows 8.1 (32/64bit)	
	Driver for Opos	
Linux	32/64 bit	Follow the instruction get back on the README.TXT file. You can find it in the software package downloaded in advance.
Windows / Linux	Driver for JavaPOS	Extract the zipped folder to the destination path desired.
Android	SDK for CustomAndroidAPI	Extract the zipped folder to the destination path desired. Follow the instructions present in the software package that you downloaded on how to install and use the library.
iOS	SDK for CustomiOSApi	Extract the zipped folder to the destination path desired. Follow the instructions present in the software package that you downloaded on how to install and use the library.
Windows Phone 8 / 8.1	SDK for CeWP8Api	Extract the zipped folder to the destination path desired. Follow the instructions present in the software package that you downloaded on how to install and use the library.

NOTE:


All drivers can be found in the DOWNLOAD section of the web site www.custom.biz.



4 OPERATION


4.1 Opening the device

1

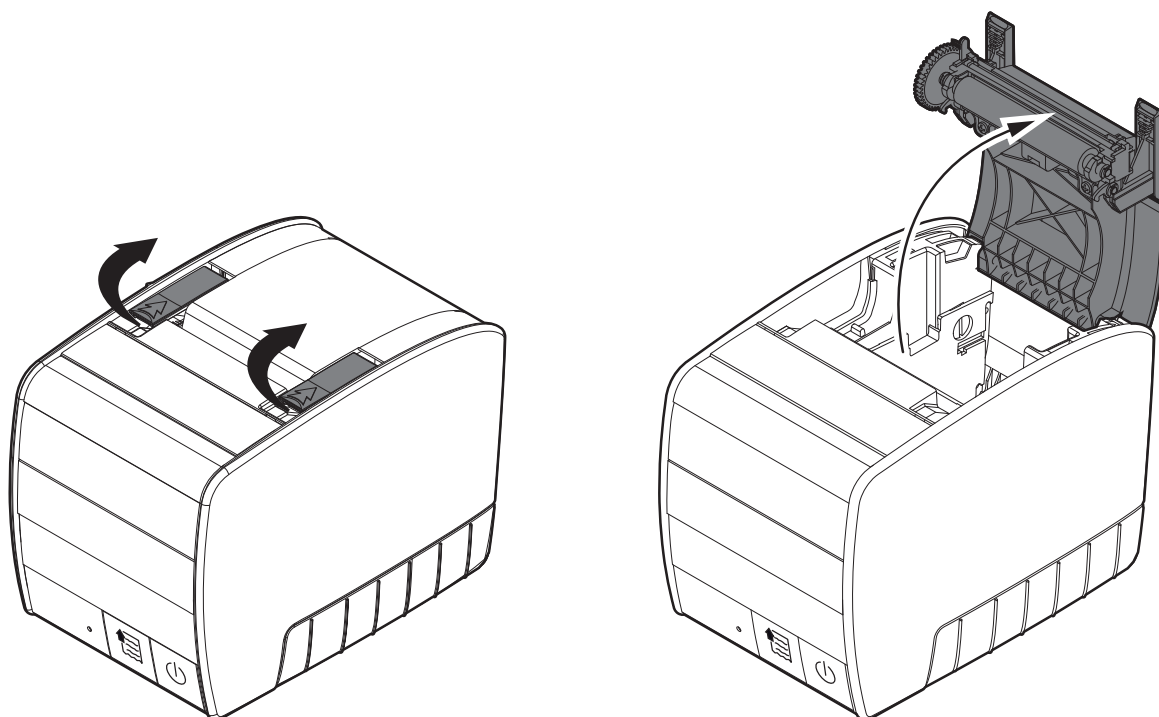

Lift the opening levers and open the device cover.


2

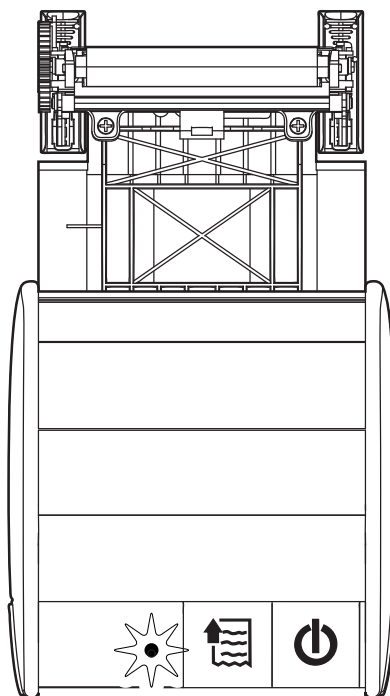

The indicator shows the state "Cover Open".


4.2 Switch the device ON/OFF

1

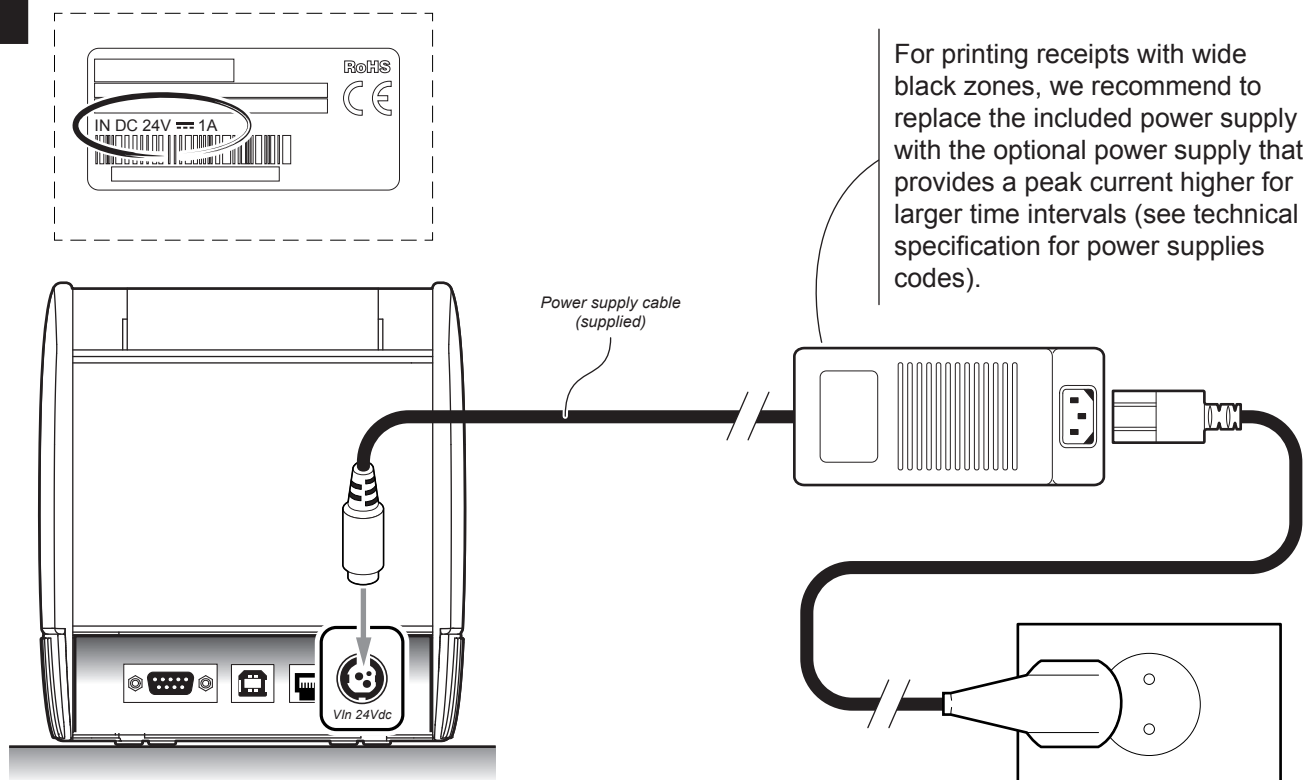

Connect the power adapter (supplied) to the device and the mains outlet.
Use the type of electrical power supply indicated on the label.



2

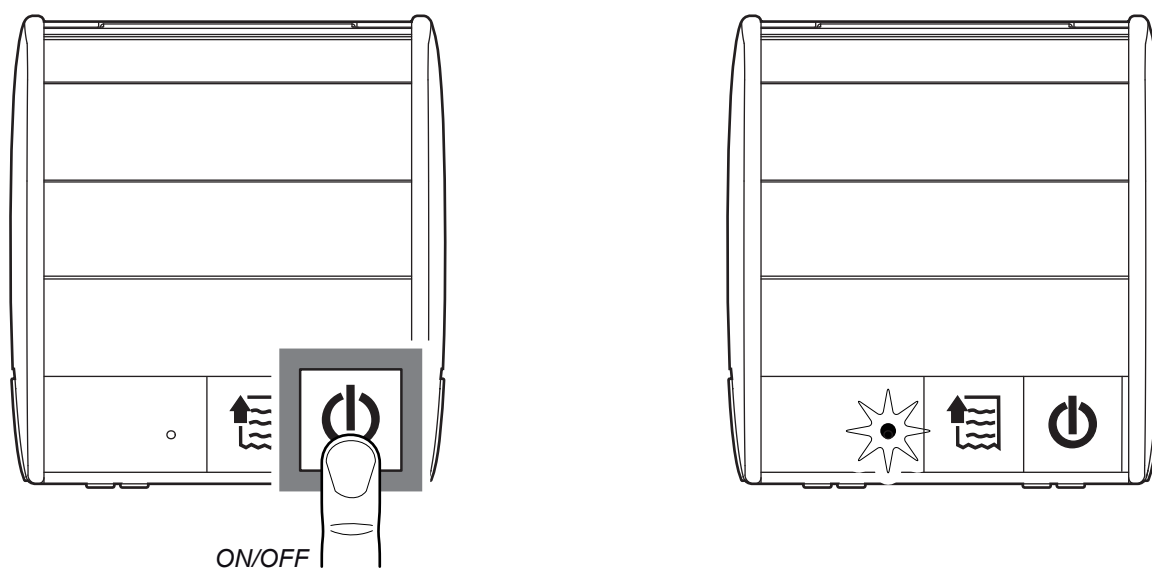

Switch device On pressing key ON/OFF, the indicator light is switched on and the device is ready.
Switch device Off pressing key ON/OFF for at least 3 seconds.

4.3 Loading the paper roll

To change the paper proceed as follows. At every change of paper, check inside the device to locate and remove any scraps of paper.

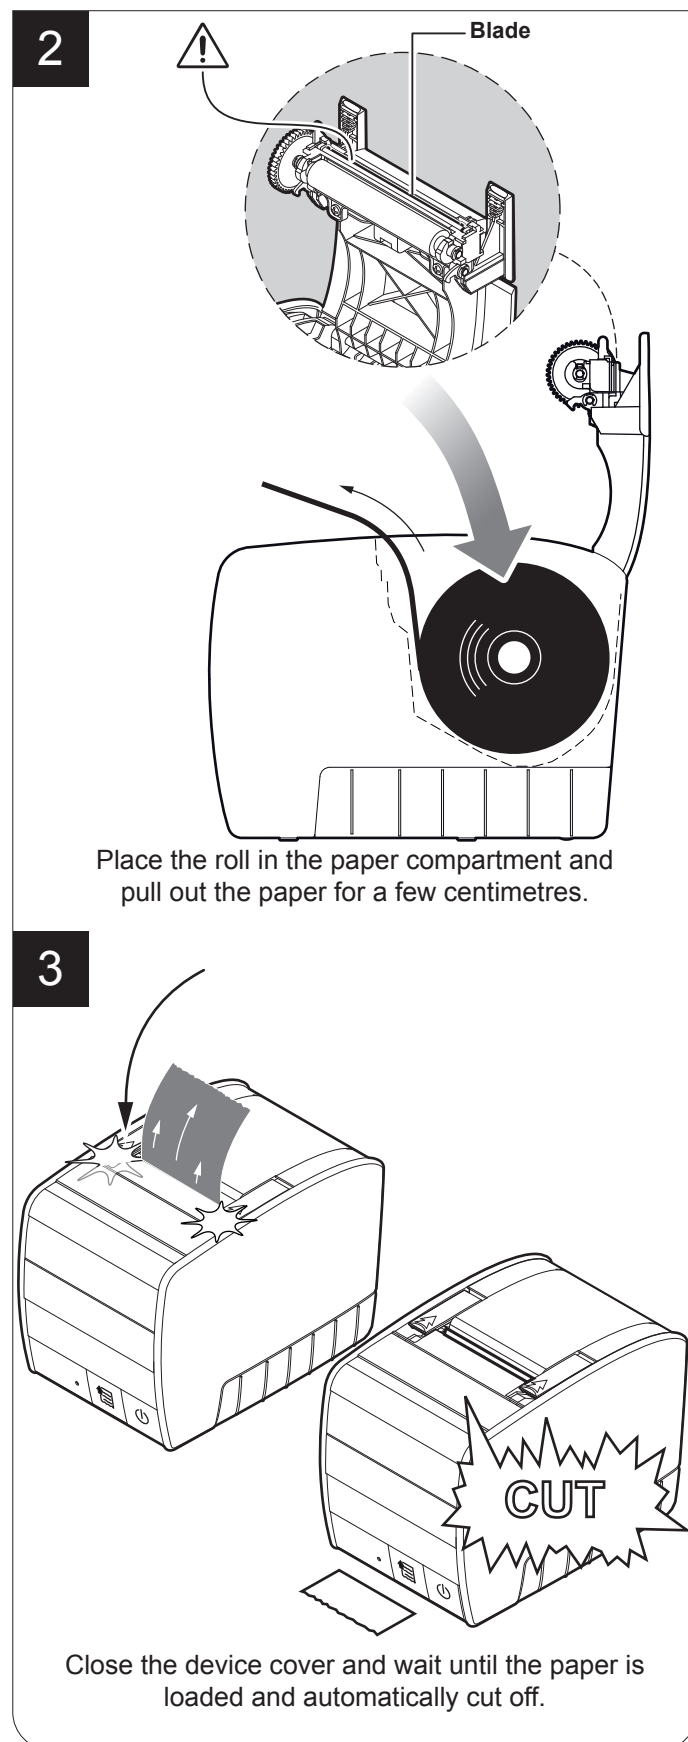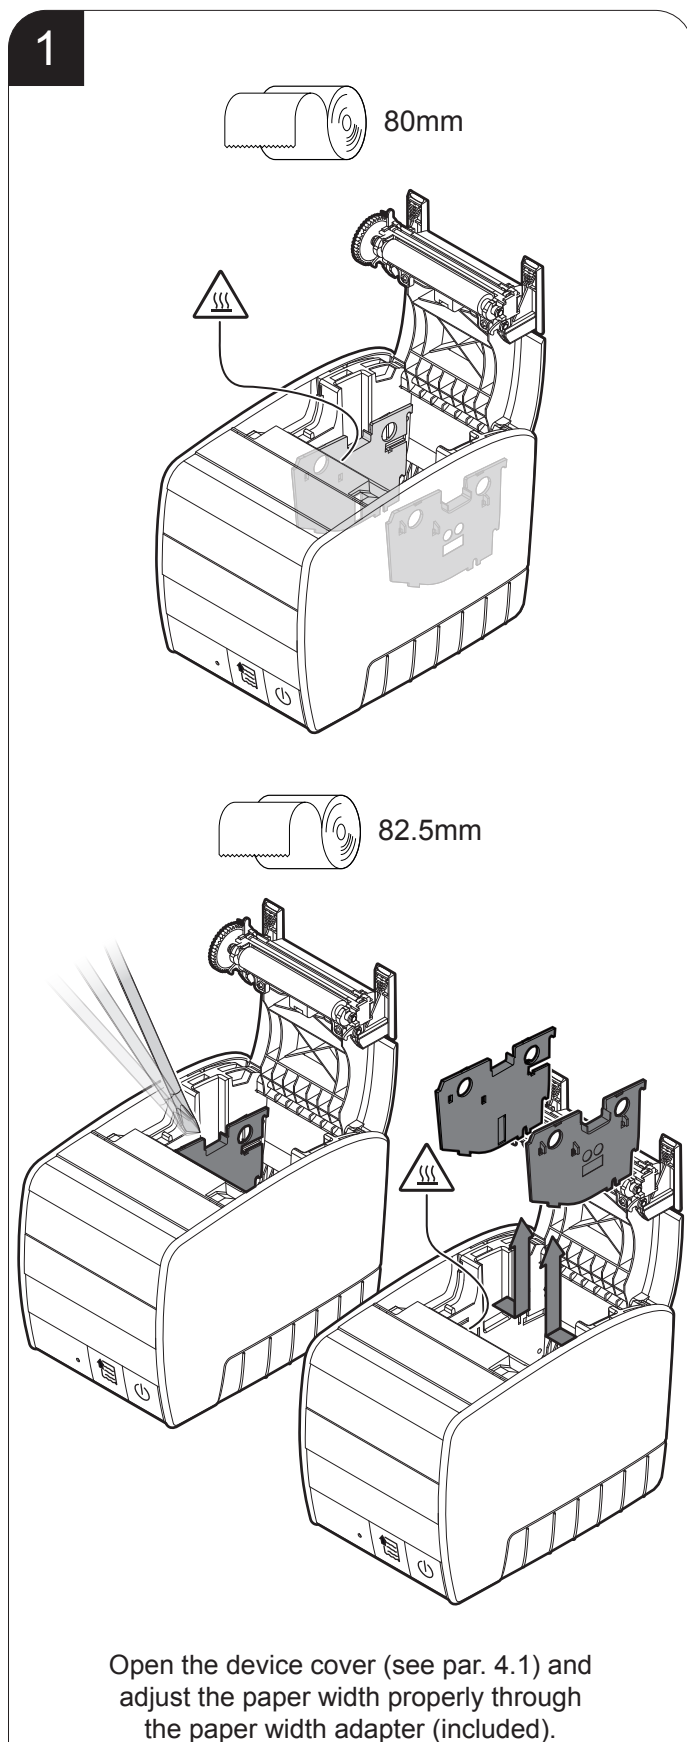




5 CONFIGURATION

5.1 Configuration mode


To enter the configuration mode and print a SETUP report with the operating parameters of the device, proceed as follows.

1

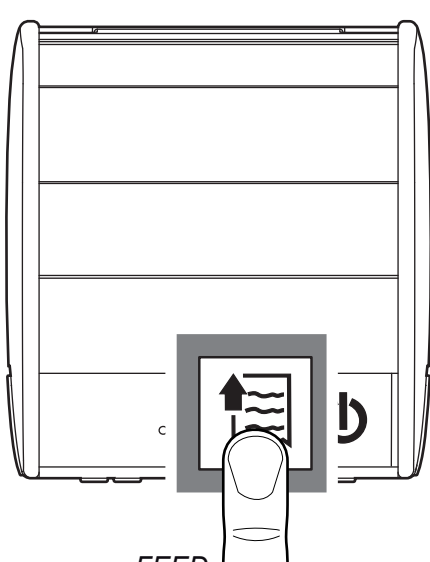


Press the FEED key.

2

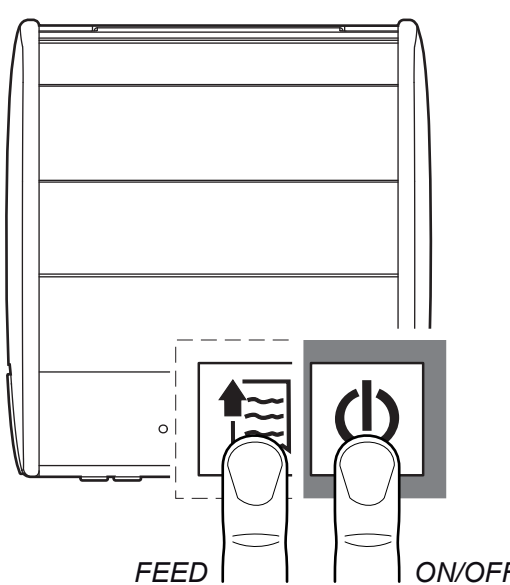


While pressing the FEED key, switch on the device by pressing the ON/OFF key.

3

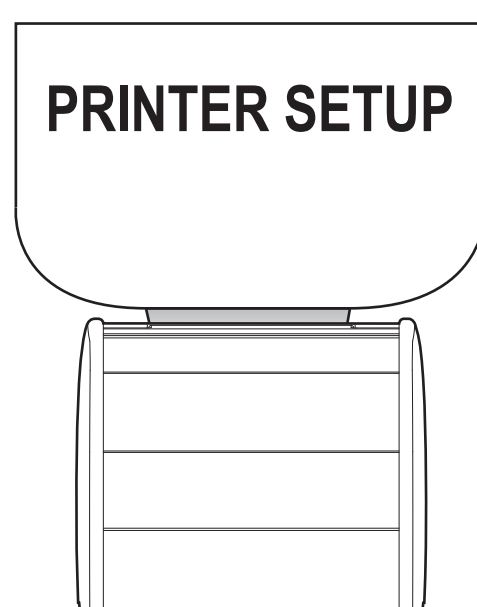

The device prints the report with parameters for printer settings.


4



FEED

↓

Enter setup



ON/OFF

↓

Skip setup

Press the FEED key to enter the configuration mode or press the ON/OFF key to skip setup procedure.



5.2 Setup report

The following figures show the setup reports of the device. The shown values for parameters are sample values; for the list and the description of device parameters see the following paragraphs.

<i>DEVICE NAME and FIRMWARE MODULES RELEASE</i>	<div><div><device name></div><div>SCODE <code> - rel 2.20</div><div>FCODE <code> - rel 1.00</div></div>
<i>DEVICE STATUS</i>	<div>PRINTER SETUP</div> <div>PRINTER TYPE<device model></div> <div>PRINTING HEAD TYPE<head model></div> <div>INTERFACEUSB/RS232</div> <div>PROGRAM MEMORY TEST.....OK</div> <div>DYNAMIC RAM TEST.....OK</div> <div>EEPROM TEST.....OK</div> <div>CUTTER TEST.....OK</div> <div>HEAD VOLTAGE [V] = 24.21</div> <div>HEAD TEMPERATURE [°C] = 28</div> <div>POWER ON COUNTER = 4</div> <div>PAPER PRINTED [cm] = 40</div> <div>CUT COUNTER = 1</div>
<i>PRINTER PARAMETERS</i>	<div>RS232 Baud Rate 115200 bps</div> <div>RS232 Data Length 8 bits/chr</div> <div>RS232 Parity None</div> <div>RS232 Handshaking Hardware</div> <div>Busy Condition RxFull</div> <div>USB Address Number 0</div> <div>Autofeed CR Disabled</div> <div>Print Mode Normal</div> <div>Chars / inch A=15 B=20 cpi</div> <div>Speed / Quality Normal</div> <div>Printing Width 80mm[82.5 PaperW]</div> <div>Notch Alignment Enabled</div> <div>Notch Threshold 2.00V</div> <div>Notch Distance 0.00</div> <div>Total cut (ESC i) Enabled</div> <div>PaperEnd Buffer Clear Disabled</div> <div>PowerFail WakeUp Mode..... LAST PWR State</div> <div>Font Type..... International</div> <div>Code Table [num] 00</div> <div>Print Density..... 0%</div>
<i>KEYS FUNCTIONS</i>	<div>[LF] Key to enter setup</div> <div>[ON/OFF] Key to skip Setup</div>



5.3 Device status

The device operating status is indicated in the configuration print-out in which, next to the name of the components displayed, the following information is given:

PRINTER TYPE	<i>device model</i>
PRINTING HEAD TYPE	<i>print head model</i>
INTERFACE	<i>Present interface</i>
PROGRAM MEMORY TEST	<i>OK appears if functioning and NOT OK if faulty</i>
DYNAMIC RAM TEST	<i>OK appears if functioning and NOT OK if faulty</i>
EEPROM TEST	<i>OK appears if functioning and NOT OK if faulty</i>
CUTTER TEST	<i>OK appears if functioning and NOT OK if faulty</i>
HEAD VOLTAGE	<i>voltage of the head</i>
HEAD TEMPERATURE	<i>temperature of the head</i>
POWER ON COUNTER	<i>number of power-ups made</i>
PAPER PRINTED	<i>centimetres of paper printed</i>
CUT COUNTER	<i>number of cuts performed</i>



5.4 Printer parameters

This device allows the configuration of the parameters listed in the following table.

The parameters marked with the symbol ^D are the default values.

Settings remain active even after the device has been turned off and they are stored in non-volatile memory.

RS232 BAUD RATE

Communication speed of the serial interface:

1200 19200
2400 38400
4800 57600
9600 115200 ^D

NOTE: Parameter valid only with serial interface.

RS232 DATA LENGTH

Number of bit used for characters encoding:

7 bits/car
8 bits/car ^D

NOTE: Parameter valid only with serial interface.

RS232 PARITY

Bit for the parity control of the serial interface:

None ^D = parity bit omitted
Even = even value for parity bit
Odd = odd value for parity bit

NOTE: Parameter valid only with serial interface.

RS232 HANDSHAKING

Handshaking:

XON/XOFF = software handshaking
Hardware ^D = hardware handshaking (CTS/RTS)

NOTES:
Parameter valid only with serial interface.

When the receive buffer is full, if handshaking is set to XON/XOFF, the device sends the XOFF (0x13) on the serial port. When the receive buffer has cleared once again, if handshaking is set to XON/XOFF, the device sends the XON (0x11) on the serial port.

BUSY CONDITION

Activation mode for Busy signal:

OffLine/ RXFull = Busy signal is activated when the device is both in OffLine status and the buffer is full
RXFull ^D = Busy signal is activated when the buffer is full

NOTE: Parameter valid only with serial interface.



USB ADDRESS NUMBER	<i>Numerical address code for the univocal identification of the USB device (in case of more than a USB device connected with the same PC):</i>				
	<i>0^D</i>	<i>2</i>	<i>4</i>	<i>6</i>	<i>8</i>
	<i>1</i>	<i>3</i>	<i>5</i>	<i>7</i>	<i>9</i>
AUTOFEED	<i>Setting of the Carriage Return character:</i>				
	<i>CR disabled^D = Carriage Return disabled</i> <i>CR enabled = Carriage Return enabled</i>				
PRINT MODE	<i>Printing mode:</i>				
	<i>Normal^D = enables printing in normal writing way</i> <i>Reverse = enables printing rotated 180 degrees</i>				
CHARS / INCH	<i>Font selection:</i>				
	<i>A = 11 cpi, B = 15 cpi</i> <i>A = 15 cpi, B = 20 cpi^D</i>				
	NOTE: CPI = Characters Per Inch				
SPEED / QUALITY	<i>Setting of printing speed and printing quality:</i>				
	<i>Normal^D</i> <i>High Quality</i> <i>High Speed</i>				
PRINTING WIDTH	<i>Width of printing area:</i>				
	<i>76mm^D (80 PaperW)</i> <i>80mm (82.5 PaperW)</i>				
NOTCH ALIGNMENT	<i>Alignment management:</i>				
	<i>Disabled^D = the black mark alignment is not performed</i> <i>Enabled = the black mark alignment is performed</i>				
NOTCH THRESHOLD	<i>Threshold value for the recognition of the presence of black mark by the black mark sensor:</i>				
	<i>0.75 V</i>	<i>2.00 V^D</i>			
	<i>1.00 V</i>	<i>2.25 V</i>			
	<i>1.25 V</i>	<i>2.50 V</i>			
	<i>1.50 V</i>	<i>2.75 V</i>			
	<i>1.75 V</i>				
	NOTE: If the "Notch Alignment" parameter is disabled, this parameter is not printed				



NOTCH DISTANCE

“Notch Distance” is the minimum distance (in mm) between the upper edge of ticket and the notch.

The numeric value of the distance is made up with the following three parameters for the setting of three digits (two for the integer part of the number and one for the decimal part):

Setting the digit for tens:

NOTCH DISTANCE [mm x 10]

0 ^D	2	4	6	8
1	3	5	7	9

Setting the digit for units:

NOTCH DISTANCE [mm x 1]

0 ^D	2	4	6	8
1	3	5	7	9

Setting the digit for decimals:

NOTCH DISTANCE [mm x .1]

0 ^D	2	4	6	8
1	3	5	7	9

NOTES:

For example, to set the notch distance to 15 mm, modify the parameters as follows:

Notch Distance [mm x 10] = 1

Notch Distance [mm x 1] = 5

Notch Distance [mm x .1] = 0

If the “Notch Alignment” parameter is disabled, the parameters for the “Notch Distance” are not printed.

TOTAL CUT

Sets the behavior of the cutter when the total cut command 0x1B 0x69 (ESC i) is sent:

Disabled = The total cut command 0x1B 0x69 (ESC i) will be ignored and the printer always executes a partial cut command 0x1B 0x6D (ESC m).

Enabled^D = The total cut command 0x1B 0x69 (ESC i) will be executed.

PAPEREND BUFFER CLEAR

Cleaning mode of the data in receive buffer, if the printing is stopped due to lack of paper:

Disabled^D = The data remain in the receive buffer. When the paper runs out, the device keeps the remaining data in the receive buffer and prints the remaining portion of the ticket after that the new paper is loaded.

Enabled = When the paper runs out, all data in the receive buffer are deleted.

POWERFAIL WAKEUP MODE

This parameter set the printer state (ON or OFF) that will be automatically restored after a power fail:

LAST PWR State^D = the printer returns in the previous state (ON or OFF) before the power fail.

Always ON = the printer always switches on automatically, after a power fail.

Always OFF = the printer switches on only by pressing the ON/OFF key after a power fail.



FONT TYPE

Setting of the Font Type:

International^D = Enables the use of font tables to 256 characters
Chinese GB18030 = Enables the use of the Chinese extended font GB18030-2000
Korean PC949 = Enables the use of the Korean extended font PC949

NOTES:

When the Chinese and Korean font is enabled, the selection of the character code table is suspended (parameter "CODE TABLE"). When the Chinese and Korean fonts is disabled, it returns the character code table previously in use (parameter "CODE TABLE").

Parameter present only with release HW ≥ R6 (see on the label).

CODE TABLE [num]

Identifier number of the character code table to use.

The numeric value of the identifier is made up with the following two parameters for the setting of two digits for the tens and the units:

Setting the digit for tens:

CODE TABLE [num x 10]

0 ^D	2	4	6	8
1	3	5	7	9

Setting the digit for units::

CODE TABLE [num x 1]

0 ^D	2	4	6	8
1	3	5	7	9

NOTES:

See the paragraph 7.6 to learn about the character tables corresponding to the identification numbers set with this parameter.

The character tables set with this parameter are the same set with the command 0x1B 0x74 (refer to the Commands Manual of the device).

Parameter present only with release HW ≥ R6 (see on the label).

PRINT DENSITY

Adjusting the printing density:

-50%	-12%	+25%
-37%	0 ^D	+37%
-25%	+12%	+50%



5.5 Hexadecimal dump

This function is used for the diagnosis of the characters received from the communications port. Characters are printed as hexadecimal code and the corresponding ASCII code (see below). Each line is preceded by a counter in hexadecimal that indicates the number of bytes received.


During the startup, if you hold down the FEED key, the printer enters the self-test routine and print the setup report. The printer remains in standby until a key is pressed or characters are received through the communication port (Hexadecimal Dump mode). For each character sent, the ticket shows the hexadecimal value and the ASCII codes (if the characters are underlined, the receive buffer is full). Shown below is an example of a Hexadecimal Dump:

HEXADECIMAL DUMP											
31	32	33	34	35	...	12345	...				
39	30	31	32	33	...	90123	...				
37	38	39	75	69	...	789ui	...				
68	6B	6A	73	64	...	hkjsd	...				
73	64	66	6B	6A	...	sdfkj	...				
66	73	64	66	6B	...	fsdfk	...				
65	69	6F	79	75	...	eioyu	...				
6F	72	69	75	77	...	oriuw	...				
6F	75	77	65	72	...	ouwer	...				
77	65	72	69	6F	...	werio	...				
72	69	6F	75	77	...	riouw	...				
6B	6C	73	64	66	...	kl sdf	...				
64	66	6B	73	64	...	dfksd	...				
73	64	66	6B	6A	...	sdfkj	...				
66	6B	F2	6A	73	...	fk>j	...				
6A	6B	6C	68			jklh					

6 MAINTENANCE

6.1 Autocutter jam


1

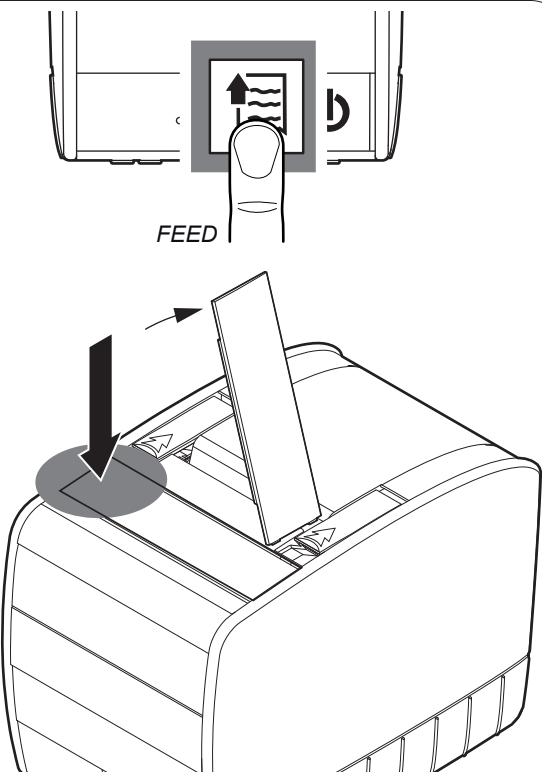

FEED


Press the FEED key to try to unlock the cutter.
If the cutter did not unlock press slightly the left side of the cutter cover, so that it opens.

2

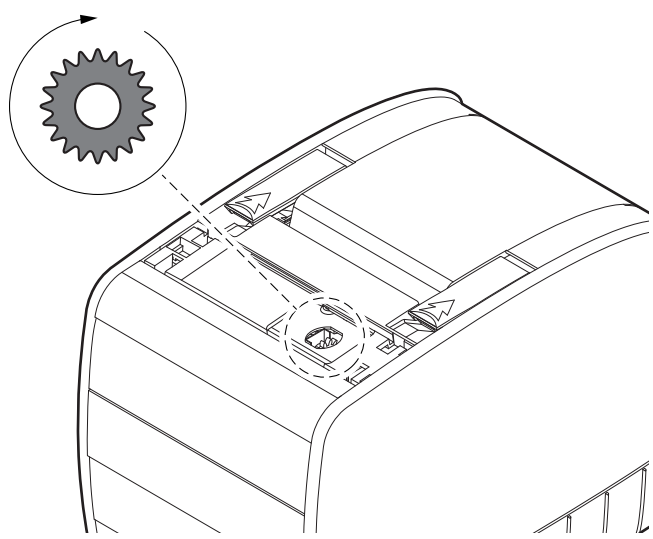

Rotate the mechanism in the direction that oppose less resistance, as shown in the label.



3

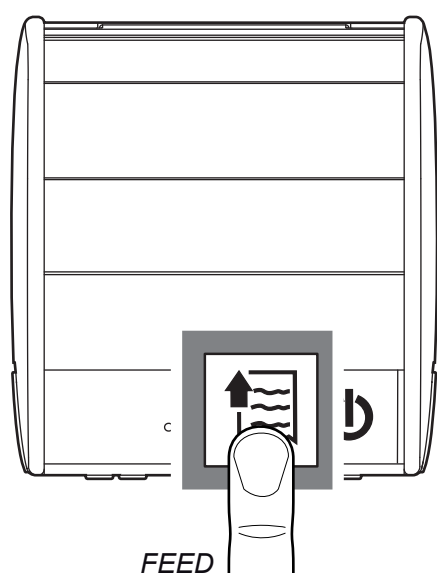

FEED


Press the FEED key.

4

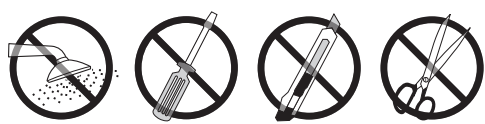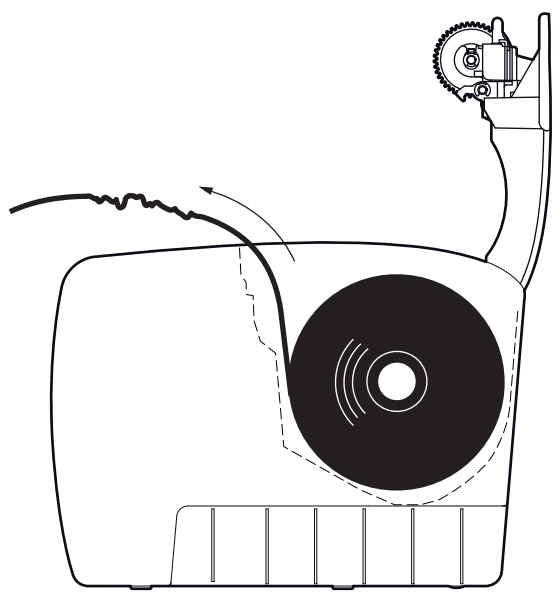Open the device cover (see par. 4.1) and pull the paper in order to have the damaged part outside the device.

5

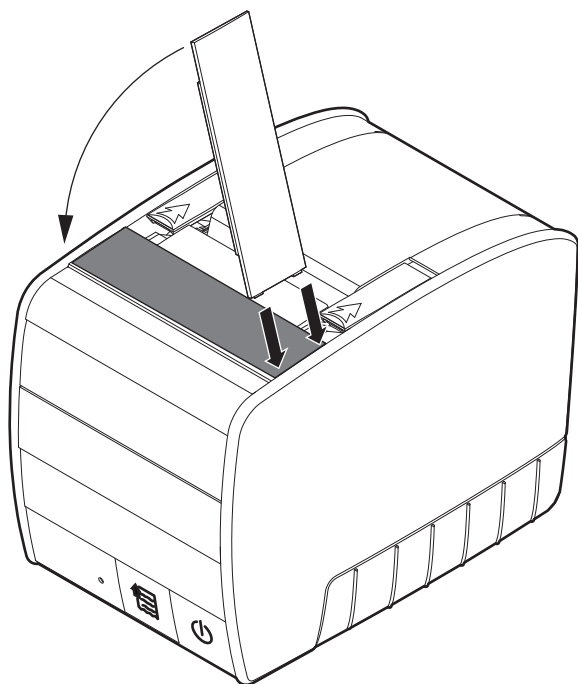

If the problem persists, please
contact the customer service.
Reassemble the cover removed previously.

NOTE: Remove possible scraps of paper along the path
of the cutter using tweezers.



6.2 Planning of cleaning operations

The regular cleaning of the device keeps the print quality and extends its life. The following table shows the recommended planning for the cleaning operations.

EVERY PAPER CHANGE	
Printhead	Use isopropyl alcohol
Rollers	Use isopropyl alcohol
EVERY 5 PAPER CHANGES	
Cutter	Use compressed air
Paper path	Use compressed air or tweezers
Sensors	Use compressed air
EVERY 6 MONTHS OR AS NEEDED	
Printer case	Use compressed air or a soft cloth

For specific procedures, see the following pages.


NOTE: If you use the device in dusty environments, you must reduce the intervals between the cleaning operations.

6.3 Cleaning

For periodic cleaning of the device, see the instructions below.


Sensors

1

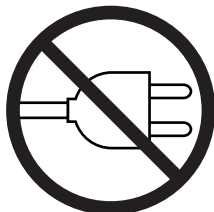

Disconnect the power supply cable and open the device cover (see par. 4.1)

2

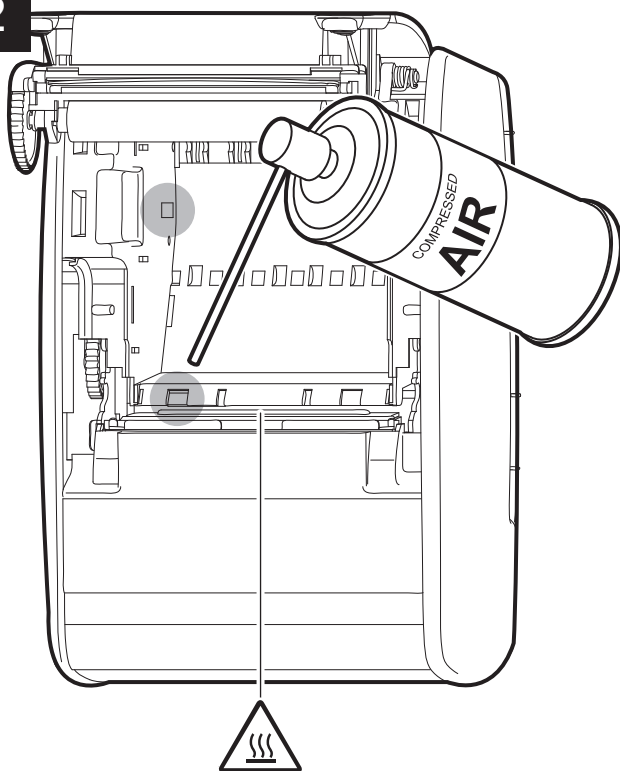


ATTENTION:
Do not use alcohol, solvents, or hard brushes.
Do not let water or other liquids get inside the device.



Clean the device sensors by using compressed air.


Paper path

1

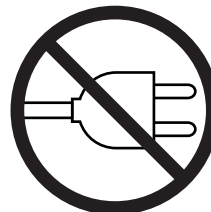

Disconnect the power supply cable and open the device cover (see par. 4.1)

2

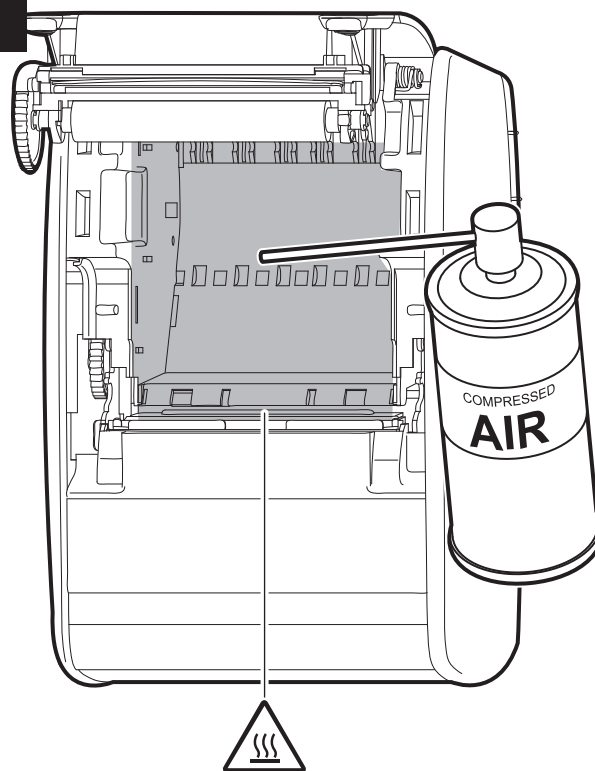


ATTENTION:
Do not use alcohol, solvents, or hard brushes.
Do not let water or other liquids get inside the device.



Clean the area involved in the passage of paper by using compressed air.


Printhead

1

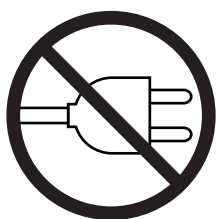

Disconnect the power supply cable and open the device cover (see par. 4.1)

2

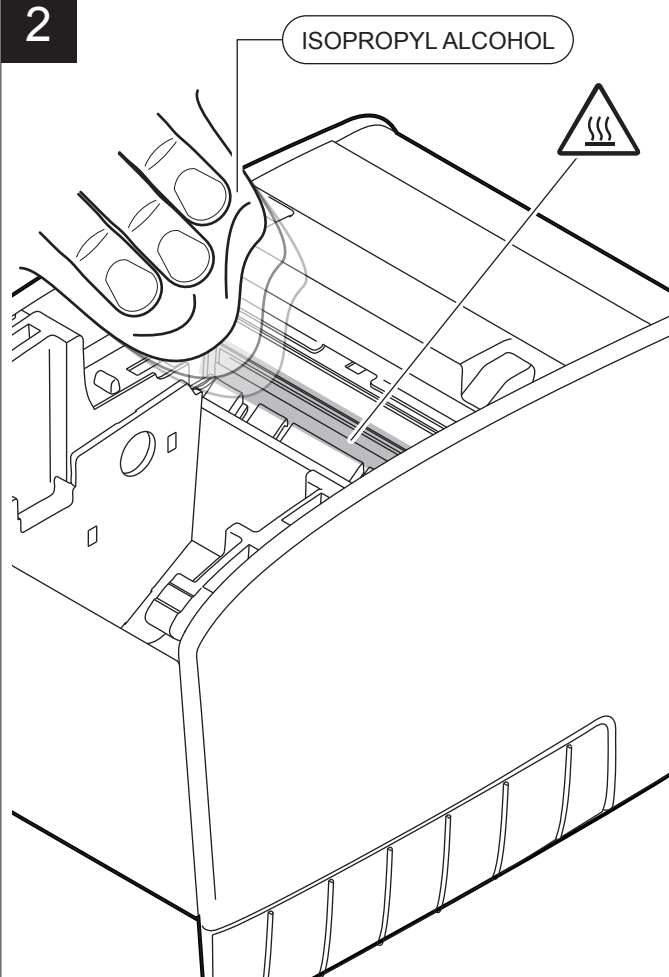


ATTENTION:
Do not use solvents, or hard brushes.
Do not let water or other liquids get inside the machine.



Clean the printing head by using a non-abrasive cloth moistened with isopropyl.


Printing roller

1

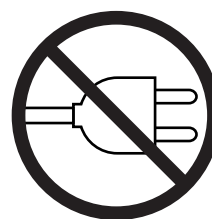

Disconnect the power supply cable and open the device cover (see par. 4.1)

2

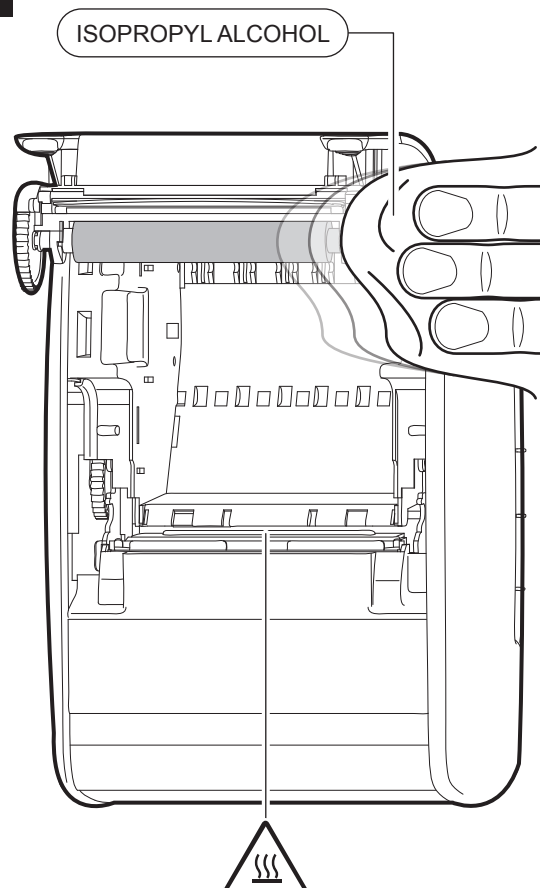


ATTENTION:
Do not use solvents, or hard brushes.
Do not let water or other liquids get inside the machine.



Clean the printing roller by using a non-abrasive cloth moistened with isopropyl.


Cutter

1

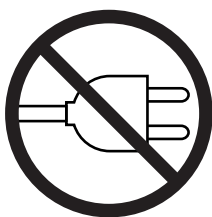

Disconnect the power supply cable and open the device cover (see par. 4.1)

2

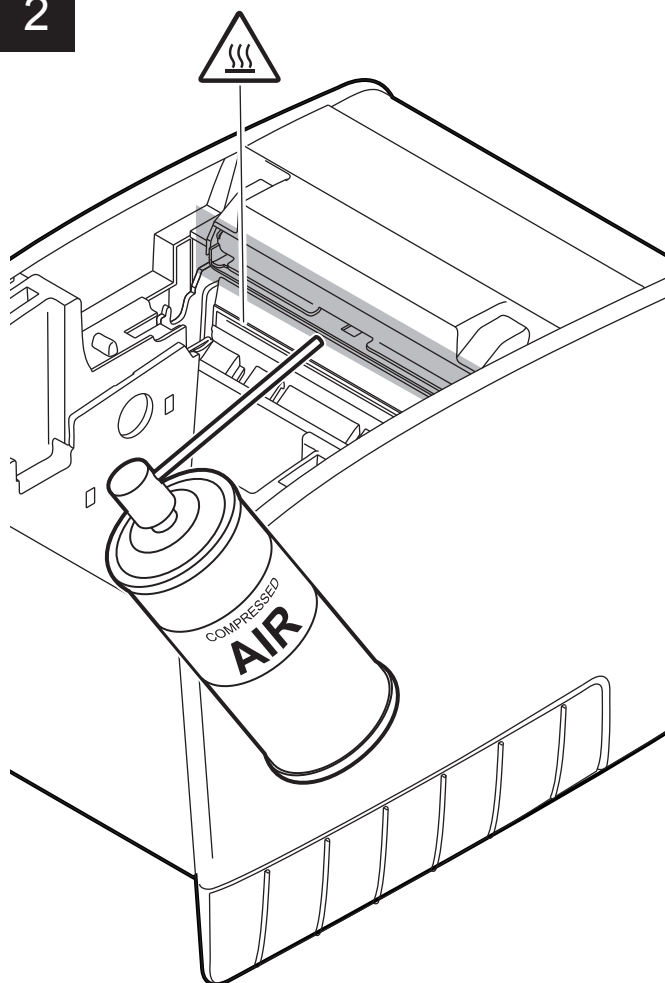


ATTENTION:
Do not use alcohol, solvents, or hard brushes.
Do not let water or other liquids get inside the device.



Clean the cutter compartment from the inside using compressed air.


Case

1

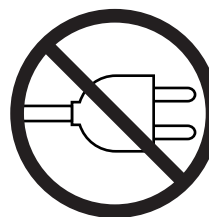

Disconnect the power supply cable

2

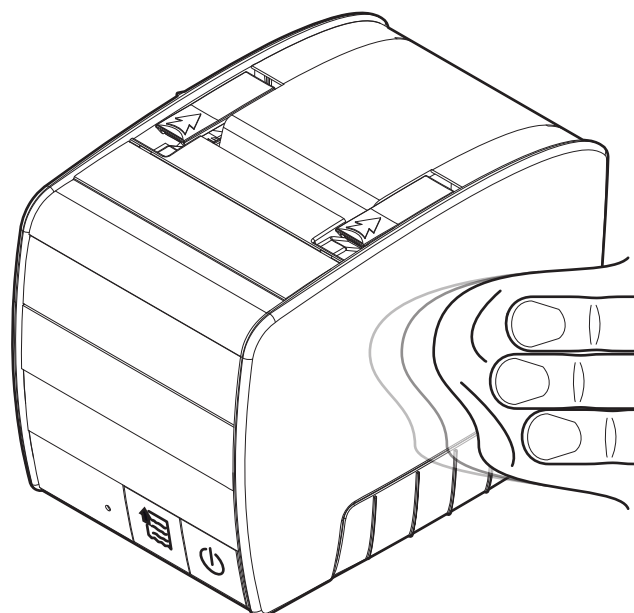

ATTENTION:
Do not use alcohol, solvents, or hard brushes.
Do not let water or other liquids get inside the device.



To clean the device,
use compressed air or a soft cloth.

6.4 Upgrade firmware


WARNING: During communication between PC/device for the firmware update it is strictly forbidden to disconnect the communication cable or to remove the power supply of the devices not to endanger the proper functioning of the device.

NOTES:

The latest firmware of the device is available in the download area of the web site www.custom.biz

Install on the PC used for device upgrading the UPG-CEPRN software available in the download area of the web site www.custom.biz.

9. Select the serial communication port (ex. COM1):

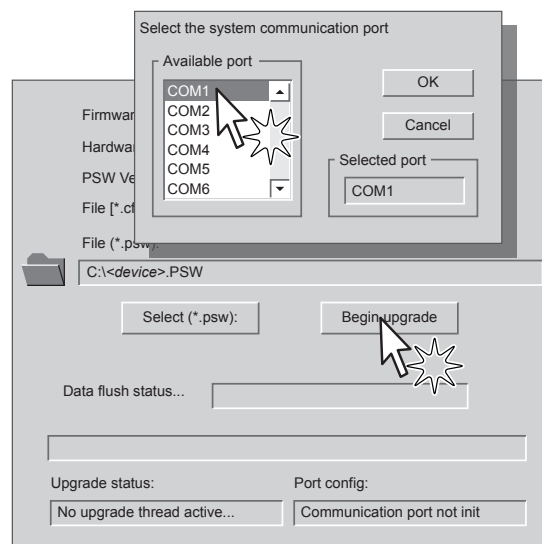


UPDATE VIA SERIAL INTERFACE


Proceed as follows:

1. Write down the product code (14 digits) printed on the product label (see par. 2.3).
2. Go to the web site www.custom.biz and download the appropriate firmware release from the DOWNLOAD area.
3. Print the SETUP report (see chapter 5).
4. Switch OFF the device.
5. Connect the device to the PC using a serial cable (see par. 3.2).
6. Switch ON the device.
7. Launch the software UPGCEPRN.
8. Select the update file .PSW location:

10. Detecting and setting of the parameters necessary for serial communication are performed automatically and then updating begins.
11. After a few minutes a message on the screen warns that the update is completed.

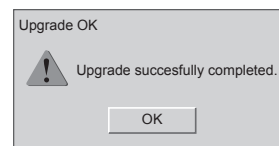

12. Print a new SETUP report to verify the new firmware release (see chapter 5).

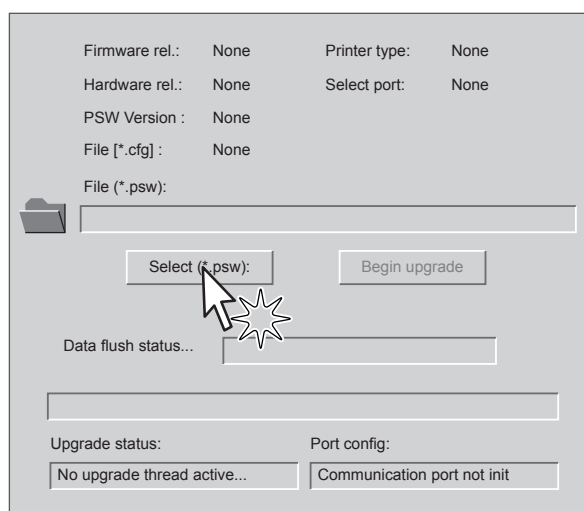

UPDATE VIA USB INTERFACE

ATTENTION:


Only during the firmware update, the connection between PC and device must be direct, without the use of wireless HUB.

Only during the firmware update, do not connect or disconnect other USB devices.


NOTE: For communication via USB you must install on PC the device driver available in the download area of the web site www.custom.biz.

Proceed as follows:


1. Write down the product code (14 digits) printed on the product label (see par. 2.3).
2. Go to the web site www.custom.biz and download the appropriate firmware release from the DOWNLOAD area.
3. Print the SETUP report (see chapter 5).
4. Switch OFF the device.
5. Connect the device to the PC using a USB cable (see par. 3.2).
6. Switch ON the device.
7. Launch the software UPGCEPRN.
8. Select the update file .PSW location:

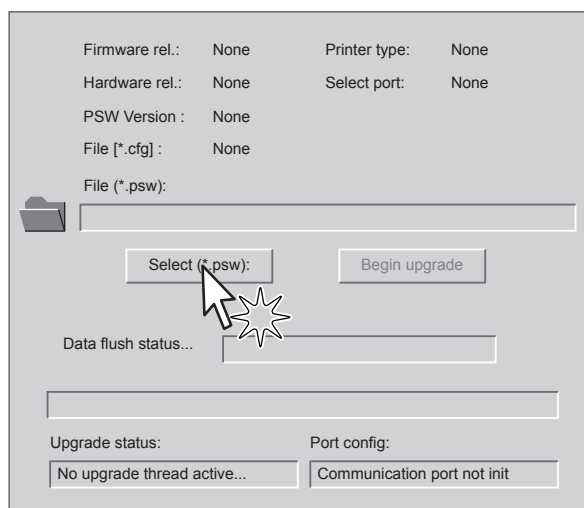

9. Select item USB and then select the USB device among those proposed (eg. device1):

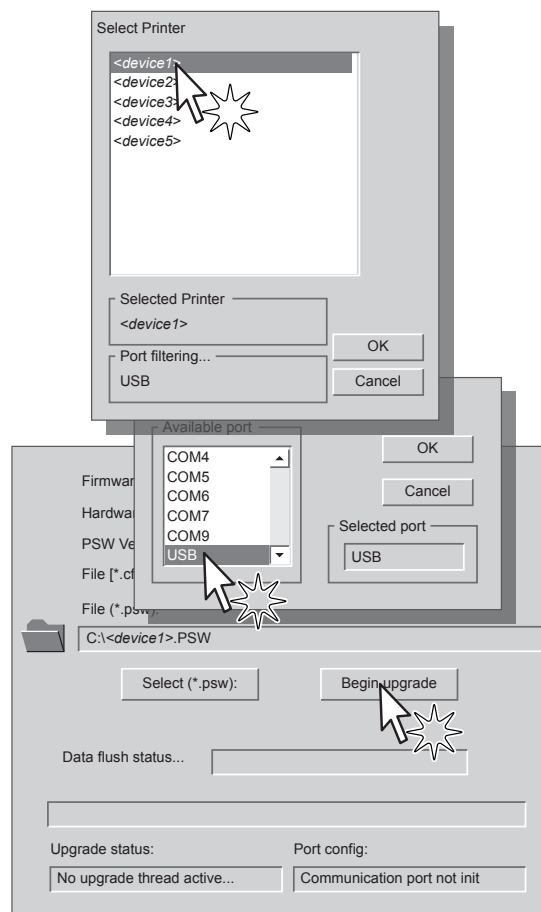

10. After a few minutes a message on the screen warns that the update is completed.

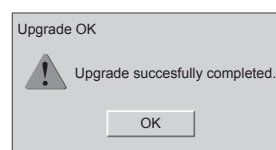

11. Print a new SETUP report to verify the new firmware release (see chapter 5).



7 SPECIFICATION

7.1 Hardware specifications

GENERALS	
Sensors	Paper presence / black mark, head temperature, cover open, low paper
MTBF ⁽¹⁾	108 350 hours
Emulations	CUSTOM/POS
Printing driver	Windows XP VISTA (32/64bit) Windows 7 (32/64bit) Windows 8 (32/64bit) Windows 8.1 (32/64bit) Opos Linux JavaPOS Android iOS Windows Phone 8 / 8.1
INTERFACES	
USB Port	12 Mbit/s (USB 1.1 full speed)
RS232 serial port	from 1200 bps to 115200 bps
MEMORIES	
Receive buffer	20 Kbytes
Flash memory	512 Kbytes
RAM memory	2 Mbytes
Graphic memory	2 logos (608 x 862 dots)
PRINTER SPECIFICATIONS	
Resolution	203 DPI (8 dot/mm)
Printing method	Thermal, fixed head



Head life ⁽²⁾	
Abrasion resistance ⁽³⁾	100 Km (with recommended paper)
Pulse durability	100 M (12.5% duty cycle)
Printing width	76 mm, 80 mm
Printing mode	Normal, 90°, 180°, 270°
Printing format	Height/Width from 1 to 8, bold, reverse, underlined, italic
Character fonts	
Release HW ≤ R5 (see on the label)	PC437, PC850, PC860, PC863, PC865, PC858 (euro)
Release HW ≥ R6 (see on the label)	54 character code tables Extended chinese GB18030-2000 Korean PC949
Printable barcode	UPCA, UPCE, EAN13, EAN8, CODE39, ITF, CODABAR, CODE93, CODE128, CODE32, PDF417, QRCODE
Printing speed ^{(2) (3)}	High quality = 130 mm/s Normal = 200 mm/s High speed = 220 mm/s / 250 mm/s ^{(4) (5)}
PAPER	
Type of paper	Thermal rolls, heat-sensitive side on outside of roll
Paper width	80 mm ± 0.5 mm 82.5 mm ± 0.5 mm
Paper weight	58 g/m ² ± 5 g/m ² 90 g/m ² ± 5 g/m ²
Paper thickness	63 µm ± 5 µm (for KF50 paper)
Recommended paper	KANZAN KF50 or equivalent (for 58 g/m ² paper weight) KANZAN KP470 or equivalent (for 90 g/m ² paper weight) MITSUBISHI TL1000 (for 80 g/m ² paper weight)
External roll diameter	max 90 mm
External roll core diameter	25 mm



Paper end	Not attached to roll core
Core type	Cardboard or plastic
CUTTER	
Paper cut	Total or partial
Estimated life ⁽²⁾	1 000 000 cuts
DEVICE ELECTRICAL SPECIFICATIONS	
Power supply	24 Vdc \pm 10% (external power supply)
Medium consumption ⁽³⁾	1 A
Standby consumption	0.08 A
ELECTRICAL SPECIFICATIONS POWER SUPPLY cod.961GE020000001 ⁽⁷⁾	
Power supply voltage	from 100 Vac to 240 Vac
Frequency	from 47 Hz to 63 Hz
Output	24 V, 2.5 A
Power	60 W
ELECTRICAL SPECIFICATIONS POWER SUPPLY cod.963GE020000003 (OPTIONAL)	
Power supply voltage	from 100 Vac to 240 Vac
Frequency	from 50 Hz to 60 Hz
Output	24 V, 2.5 A
Power	60 W
ENVIRONMENTAL CONDITIONS	
Operating temperature	from 0°C to +50°C
Relative humidity	from 10% Rh to 85% Rh
Storage temperature	from -20 °C to +70 °C
Storage relative humidity	from 10% Rh to 90% Rh



NOTES:

- (1) : Control board.
- (2) : Respecting the regular schedule of cleaning for the device components.
- (3) : Damages caused by scratches, ESD and electromigration are excluded.
- (4) : Referred to a standard CUSTOM receipt (L=10cm, Density = 12,5% dots on).
- (5) : This speed is achieved in the following test conditions: parameter "Speed / Quality" = High Speed, Print Density = 0%, Ambient Temperature = 25 °C, Power Supply 24Vdc.
- (6) : Possibility through Firmware configuration up to 250 mm/s respecting the test conditions described in note 4 and using paper MITSUBISHI TL4000.
- (7) : For receipts with wide black zones is recommended the optional power supply cod. 963GE020000003 that provides a peak current higher for larger time intervals.



7.2 Character specifications

Character set	3		
Character density	11 cpi	15 cpi	20 cpi
Number of columns	35	45	64
Character / sec	2600	3352	4700
Lines / sec	73	73	73
Characters (L x H mm)-Normal	2.25 x 3	1.75 x 3	1.25 x 3

NOTE: Theoretical values. (Printing width = 80 mm).

7.3 Specifications for Wi-Fi DONGLE Access Point Ethernet (optional)

Wi-Fi ACCESS POINT EXTERNAL SPECIFICATIONS (cod. 972GU01000000302)

Wireless standards	IEEE 802.11 b/g/n
Networking standards	10/100Mbps
Frequency range	from 2.4GHz to 2.485GHz
Wireless transfer rates	11 / 54 / 135 / 150Mbps
Port	ETH and USB
Protocol supported	UPnP, DDNS, and a static router, TCP/IP
Security	supports SSID broadcast with control of MAC lists with access authorization WEP 64/128/152-bit coding, compatible with WPA 128 bit (TKIP/AES)
Reset button	Press the Reset button (located on the back side of the router) for 5~8 seconds to Reset the router to factory default settings (clear all settings)
LED indicators	LAN, WPS, WLAN, POWER
Antenna	Internal Antenna
Power supply	DC 5V




7.4 Device dimensions

Length	209 mm
Height	152 mm (with cover closed) 254 mm (with cover open)
Width	140 mm
Weight	2300 g

NOTES:

Dimensions referred to devices without paper roll.


All the dimensions shown in following figures are in millimetres.

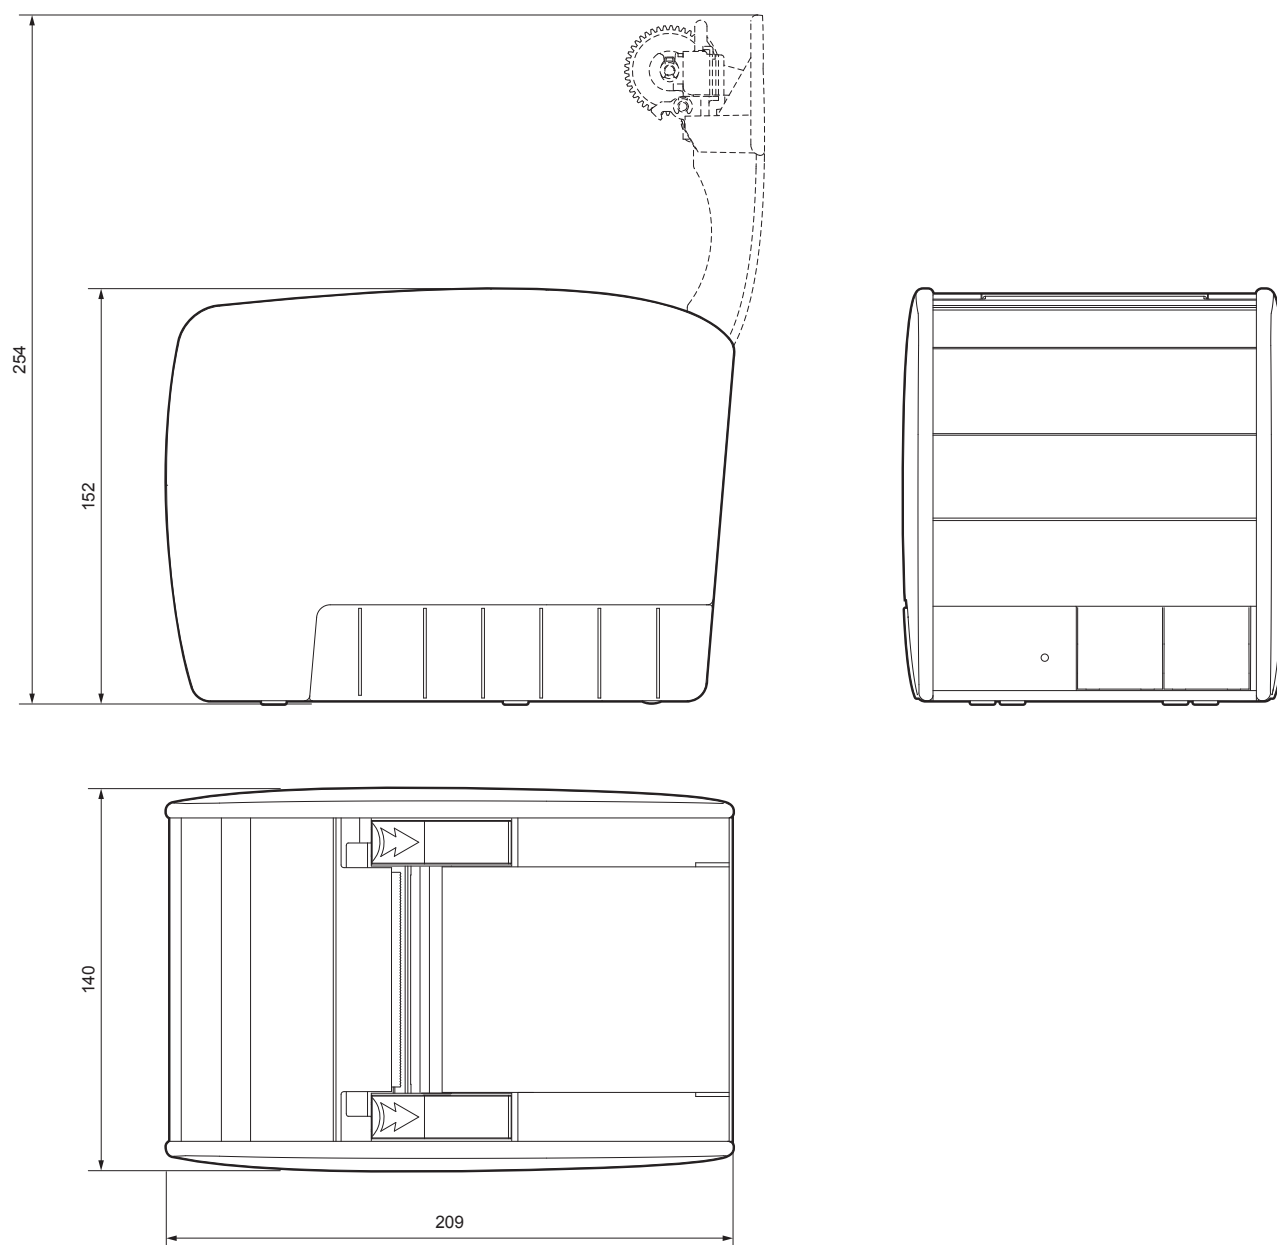

7.5 Power supply dimensions cod. 961GE020000001

Length	112 mm
Height	27 mm
Width	48 mm


All the dimensions shown in following figures are in millimetres.

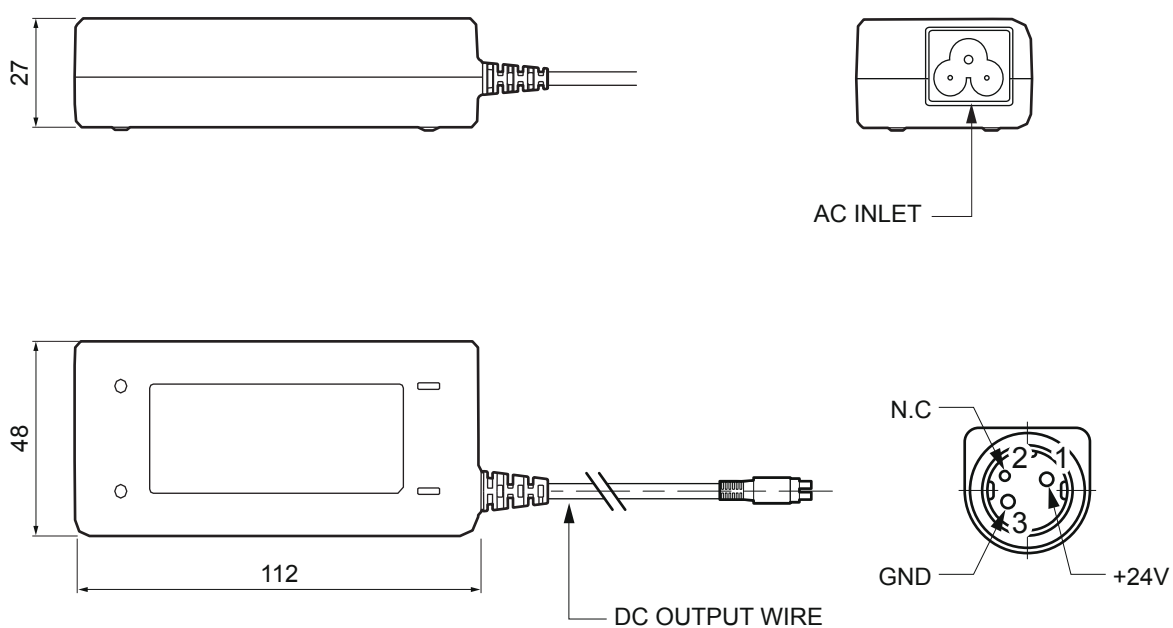

7.6 Power supply dimensions cod. 963GE020000003 (optional)

Length	127 mm
Height	35.5 mm
Width	56 mm

NOTE: All the dimensions shown in following figures are in millimetres.

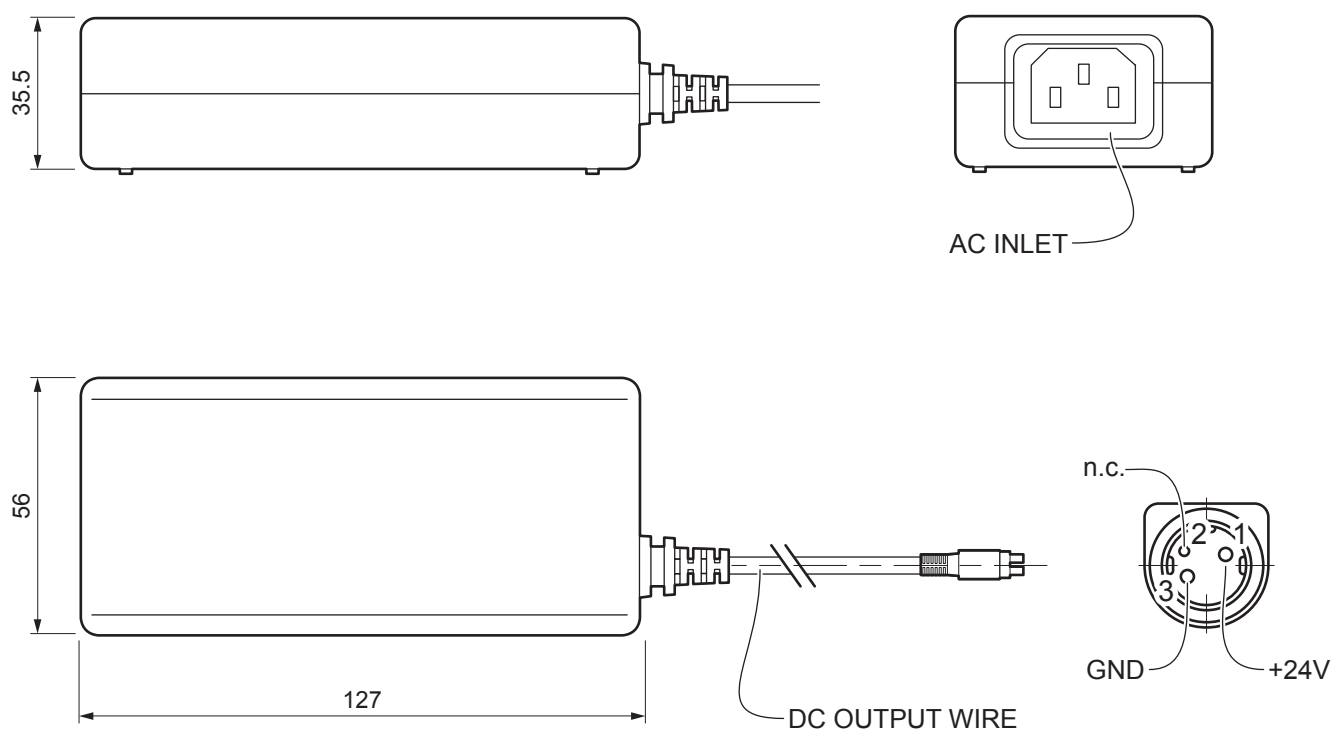


7.7 Paper specifications

Paper with black mark alignment

The following image shows the placement of the black mark on the non-thermal side of paper. For more information about the use of paper with black mark see chapter 10.

NOTE: All the dimensions shown in following figures are in millimetres.

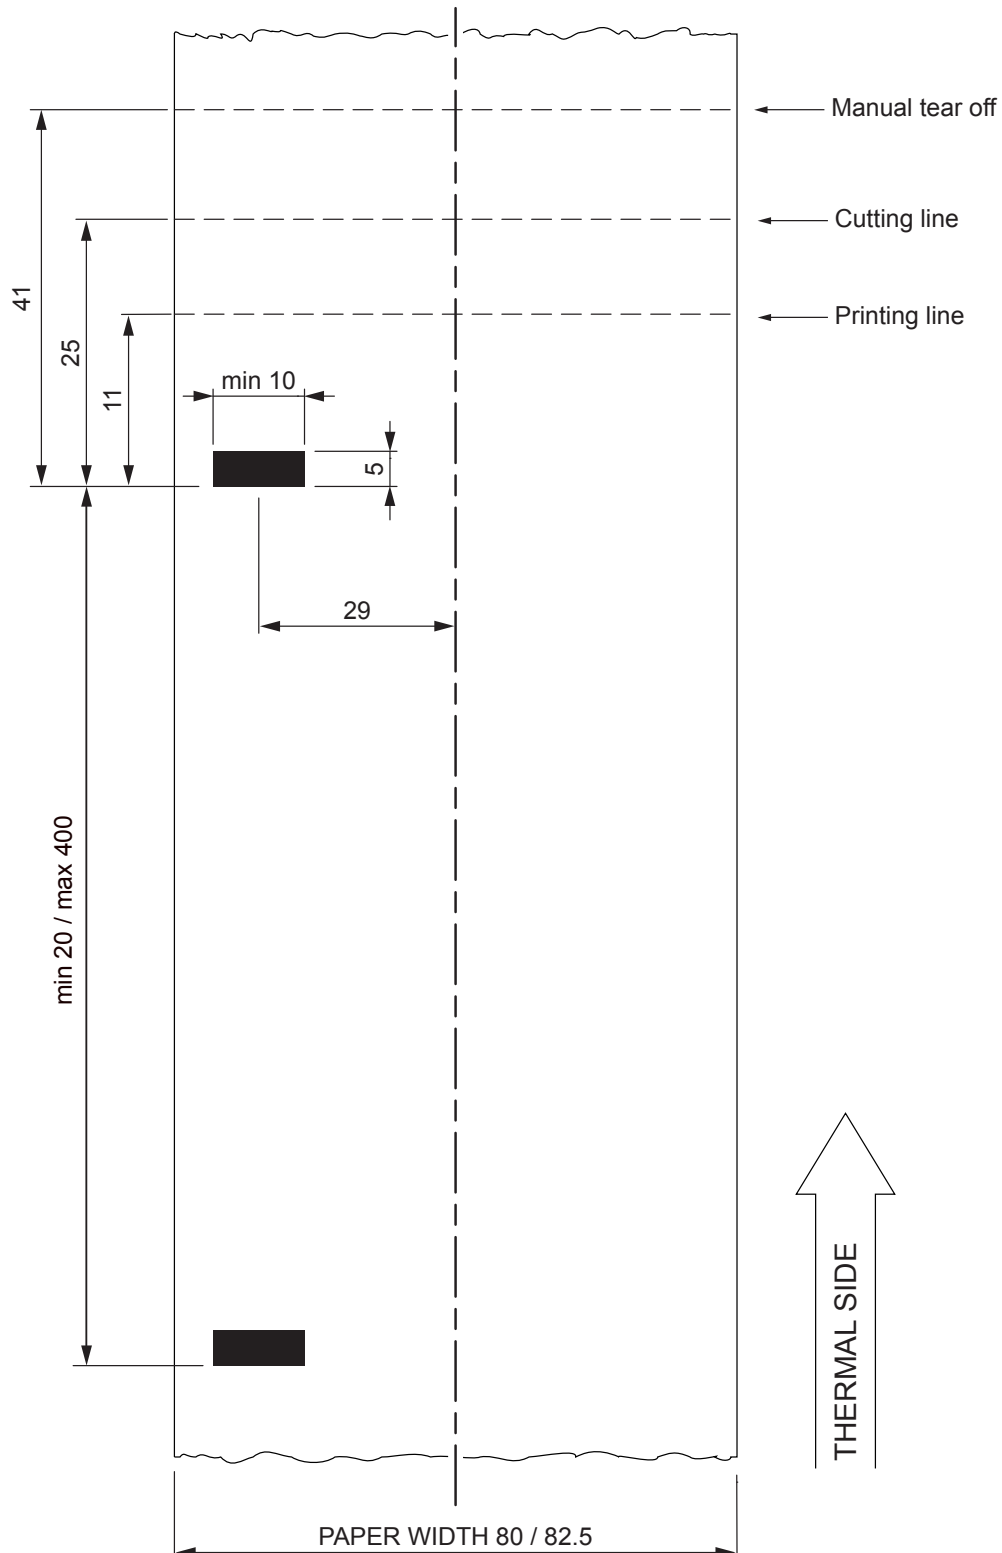



7.8 Character sets (release HW ≥ R6)

NOTE: To verify the HW release of the device consult the the data printed on the product label

The device has 3 fonts of varying width (11, 15 and 20 cpi) which may be related one of the coding tables provided on the device.

To know the coding tables actually present on the device, you need to print the font test (see par.2.4).

You can set font and coding table by using the commands (see the Commands Manual of the device) or using the “Code Table” and the “Chars / Inch” parameters during the Setup procedure (see par.5.4).

The following is the full list of coding tables that can be installed on the device.

<CodeTable>	Coding table	
0	PC437 - U.S.A., Standard Europe	
1	Katakana	
2	PC850 - Multilingual	
3	PC860 - Portuguese	
4	PC863 - Canadian/French	
5	PC865 - Nordic	
11	PC851 - Greek	on request
12	PC853 - Turkish	on request
13	PC857 - Turkish	
14	PC737 - Greek	
15	ISO8859-7 - Greek	on request
16	WPC1252	on request
17	PC866 - Cyrillic 2	
18	PC852 - Latin 2	
19	PC858 with Euro symbol in position 213	
20	KU42 - Thai	
21	TIS11 - Thai	on request
26	TIS18 - Thai	on request
30	TCVN_3 - Vientamese	on request
31	TCVN_3 - Vientamese	on request
32	PC720 - Arabic	on request




<CodeTable>		Coding table
33	WPC775 - Baltic Rim	on request
34	PC855 - Cyrillic	
35	PC861 - Icelandic	on request
36	PC862 - Hebrew	
37	PC864 - Arabic	
38	PC869 - Greek	on request
39	ISO8859-2 - Latin 2	on request
40	ISO8859-15 - Latin 9	on request
41	PC1098 - Farci	on request
42	PC1118 - Lithuanian	on request
43	PC1119 - Lithuanian	on request
44	PC1125 - Ukranian	on request
45	WPC1250 - Latin 2	on request
46	WPC1251 - Cyrillic	on request
47	WPC1253 - Greek	
48	WPC1254 - Turkish	on request
49	WPC1255 - Hebrew	on request
50	WPC1256 - Arabic	on request
51	WPC1257 - Baltic Rim	on request
52	WPC1258 - Vientamese	on request
53	KZ1048 - Kazakhstan	on request
255	Space page	



8 CONSUMABLES



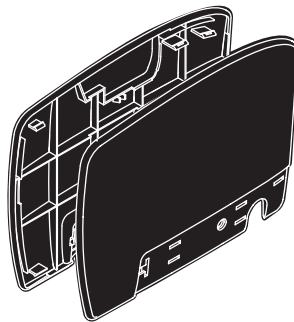


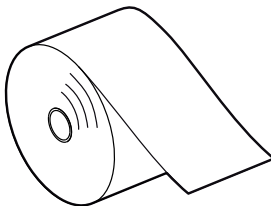The following table shows the list of available consumables for device:

DESCRIPTION	CODE
<p>THERMAL PAPER ROLL</p> <p>width = 80mm \varnothing external = 90mm \varnothing core = 25mm</p>	<p>67300000000406</p> 



9 ACCESSORIES

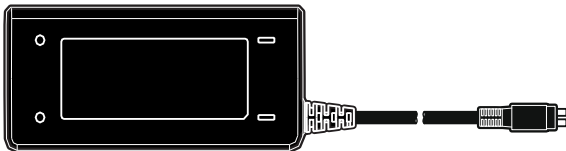
The following table shows the list of available accessories for device:

DESCRIPTION	CODE
<p>POWER SUPPLY (for technical specifications, see the paragraph 7.1)</p>	<p>961GE020000001</p> 
<p>POWER SUPPLY (for technical specifications, see the paragraph 7.1)</p>	<p>963GE020000003</p> 
<p>RIGHT AND LEFT SIDES KUBE color: black (see the paragraph 9.1)</p>	<p>976BG010000002</p> 
<p>USB CABLE TYPE AB Length = 1.8 m</p>	<p>26500000000356</p> 
<p>Wi-Fi DONGLE External Wi-Fi Access Point ETHERNET and USB (for technical specifications, see the paragraph 7.3)</p>	<p>972GU010000002</p> 

9.1 Sides replacement


To replace the device side (right or left), proceed as follows:

1

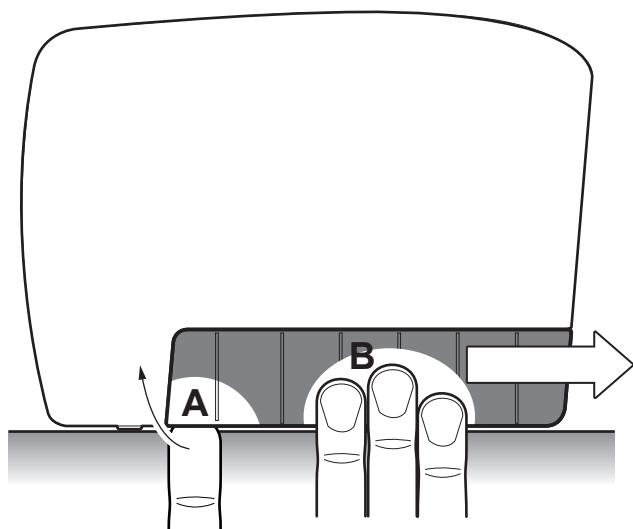


While holding the point A, put pressure at point B by pushing the carter in the direction indicated.

2

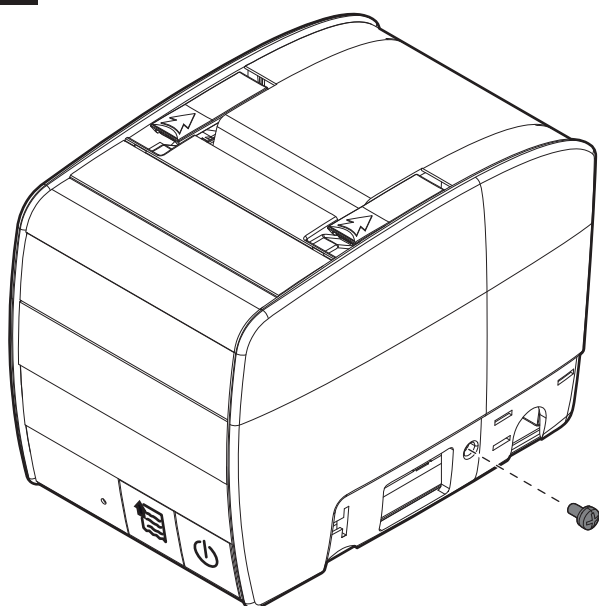


Unscrew the fixing screw for the printer side.

3

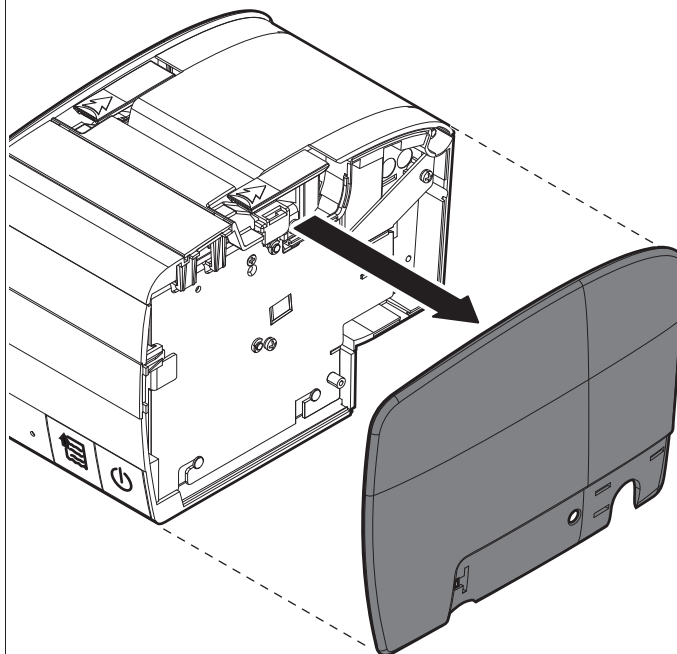


Remove the printer side.

4

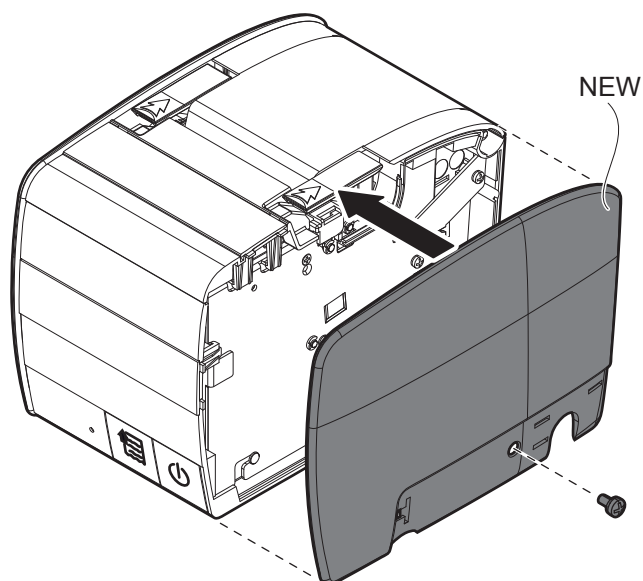

Assemble the new side and fix it with the screw previously removed.

5

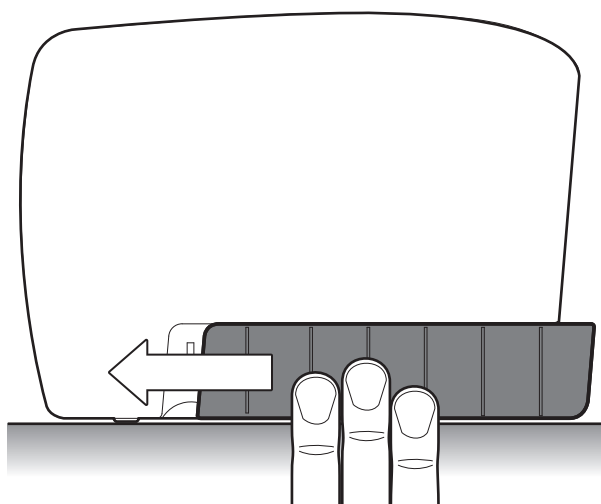

Reassemble the carter sliding it
in the direction indicated.





10 ALIGNMENT

Device is provided with a sensor for the use of alignment notch in order to handle roll of tickets with pre-printed fields and a fixed length;

The alignment notch may be formed by black mark printed on paper (see par.7.7).


The alignment sensor assembled on the device is “reflection” sensor: this kind of sensor emits a band of light and detects the quantity of light reflected to it. The presence of the notch is therefore detected by the amount of light that returns to the sensor, considering that the light is reflected by the white paper and absorbed by the black mark.

The following paragraphs show how to correctly set the configuration parameters of device in order to assure the alignment.

10.1 Enable alignment


Device is provided with one mobile sensor facing the thermal side of paper.

To guarantee the alignment, you must enable the parameter “Notch Alignment” during the Setup procedure (see chapter 5)

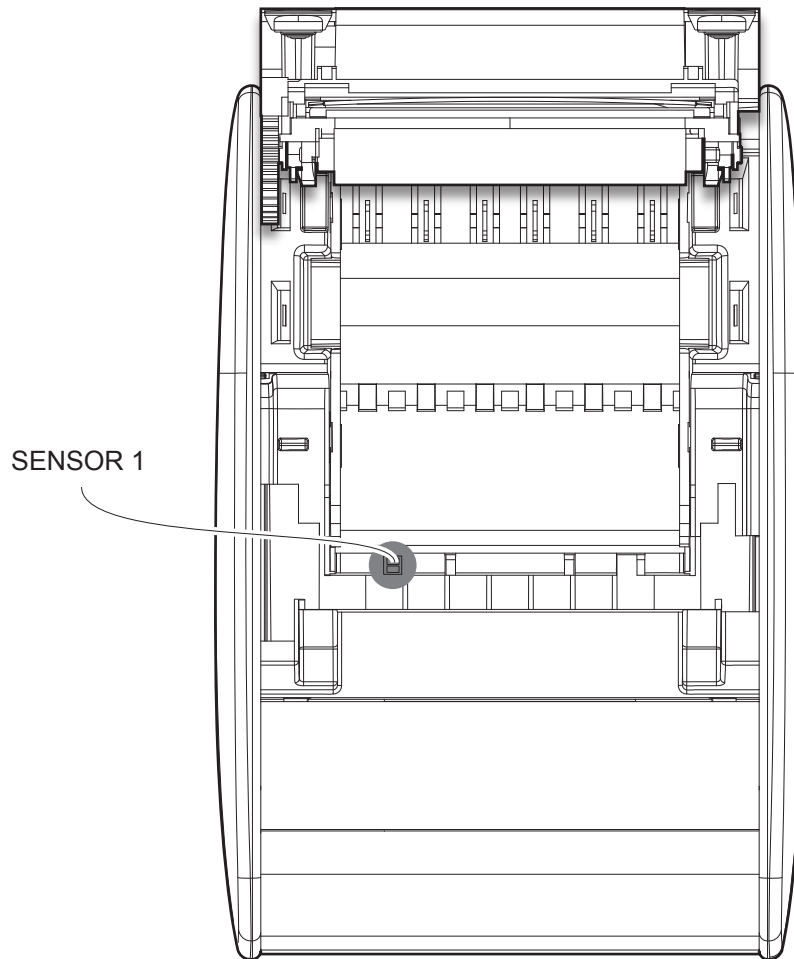

Paper with black mark on the thermal side

In the standard model the detection of black mark and paper presence is performed by the fixed sensor.

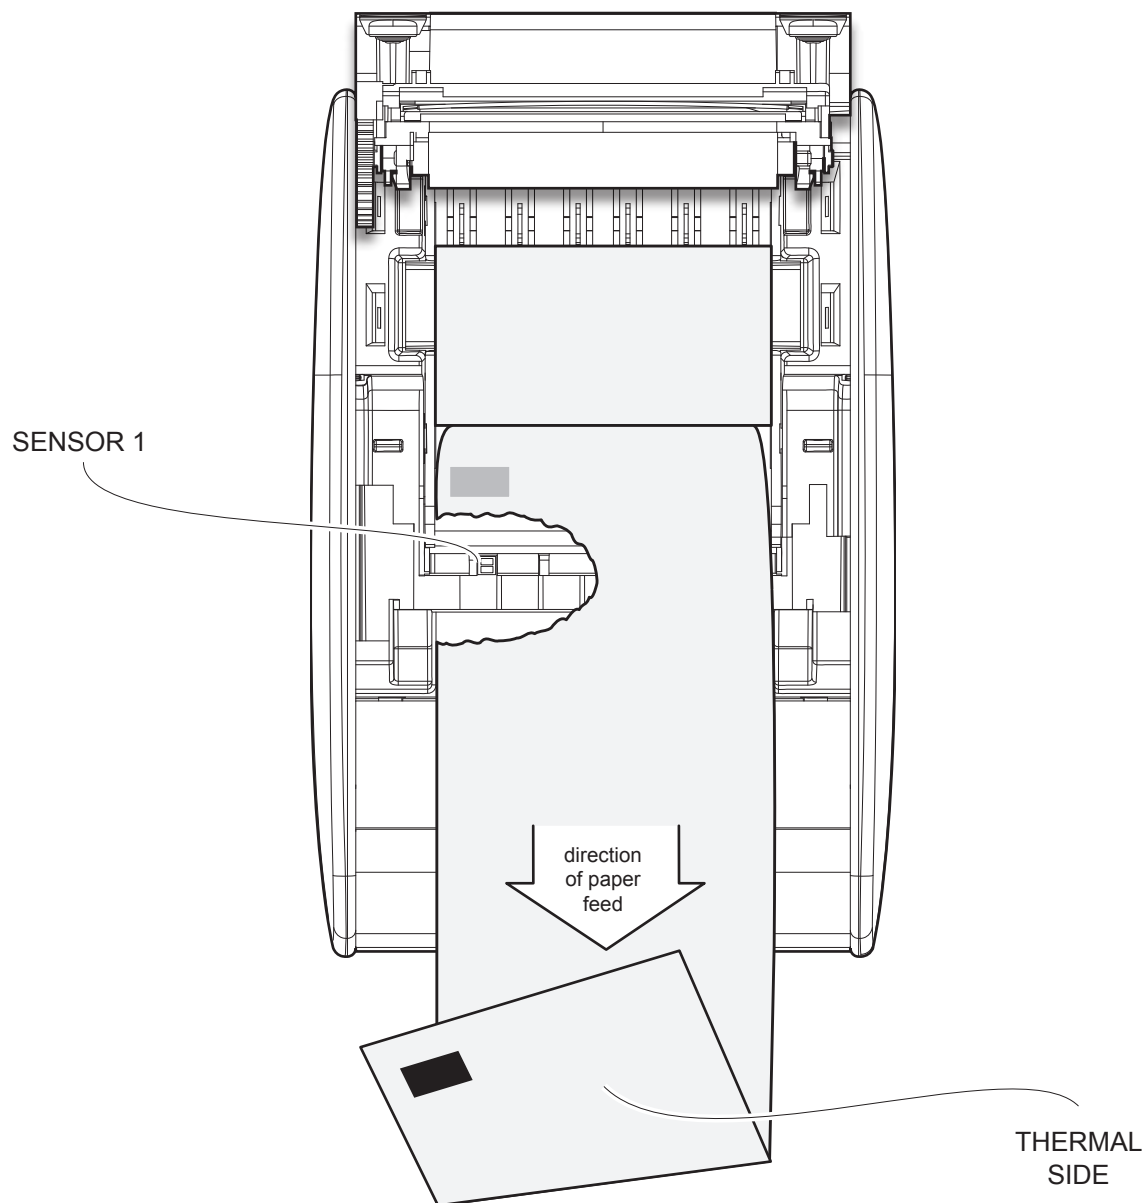

10.2 Calibration

The sensor calibration occurs automatically and consists in adjusting the quantity of light emitted to match the degree of whiteness of the paper used and the degree of black of the mark printed on paper.

The device automatically performs the self-calibration during the Setup procedure only if the “Notch Alignment” parameter is set to “Enabled” value (see chapter 5).


When self-calibration starts, the device performs some paper feeds and then it prints the calibration result and the value (numeric and as a percentage) of the “*Threshold White*” parameter that indicates the power-up level of the sensor emitting side (the value ranges from 0V to 5V):

```
Autosetting Notch : OK
Threshold White : 2.00V [39%]
```


The “Autosetting Notch” parameter indicates the result of the self-calibration procedure; OK will appear if it has been successful, NOT OK will appear if the procedure has failed.

After the printing of the procedure result, the device offers the execution of the function of paper characterization “Characterize Paper” and the change of the “Notch Threshold” parameter which represents the detection threshold of the black mark. Choosing the “Yes” value for the “Characterize Paper” parameter, the device prints a graphic representation (see following figures) of the outgoing voltage of the alignment sensor (expressed as a percentage) and the “Notch Threshold” value. This graphic representation is useful to set the most suitable value to assign to the “Notch Threshold” parameter and then to better identify the optimal threshold value which takes into account the variations of the signal and the small oscillations around zero.

The following figure shows an example of paper with the non-thermal paper printed with black marks: the outgoing voltage is constant while passing the white paper between two black marks and presents a peak at each black mark. In this case, the optimal value for the “Notch Threshold” parameter is placed about half of the peak.

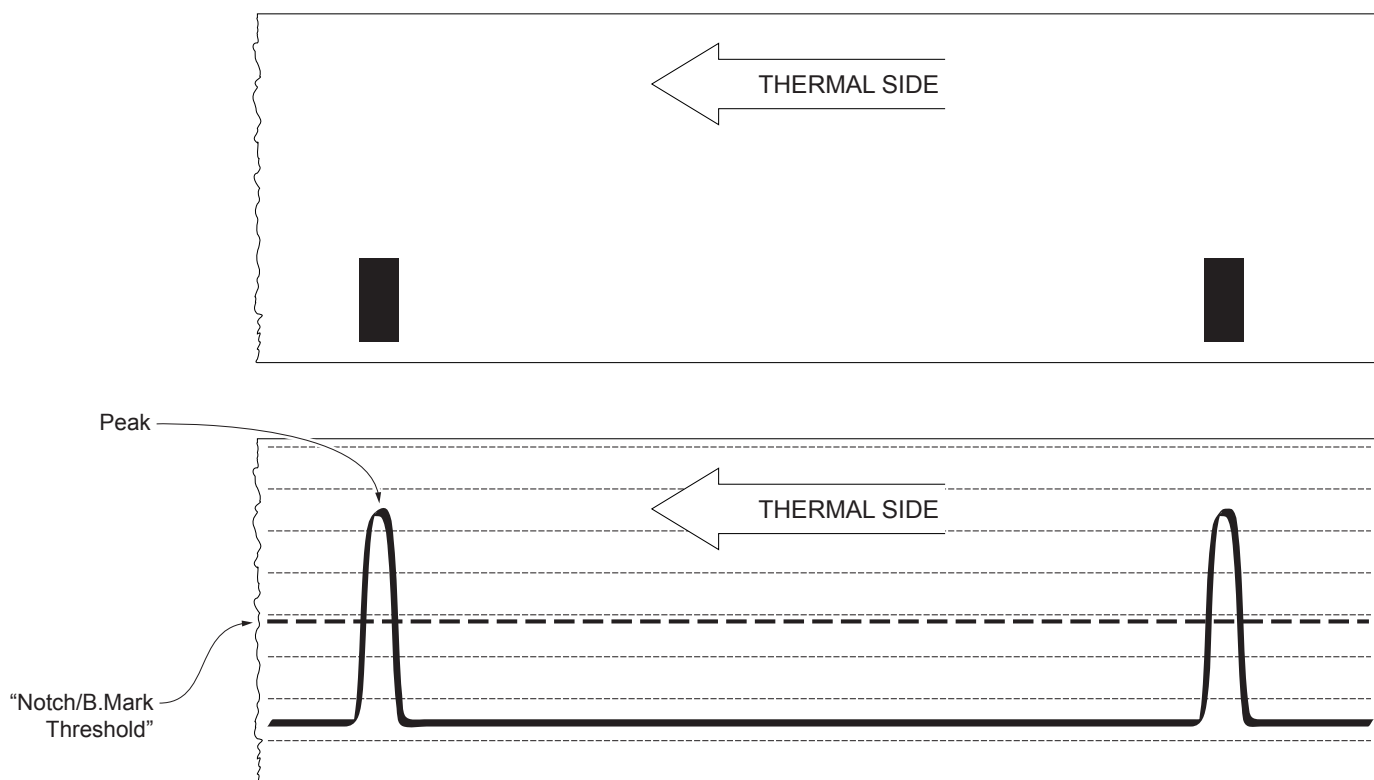

The following figure shows an example of paper with the non-thermal paper printed with black marks and other graphics (for example, a barcode): the outgoing voltage is constant while passing the white paper between two black marks, presents a peak at each black mark and presents some “noise” at each barcode. In this case, the optimal value for the “Notch Threshold” parameter is located about halfway between the peak value and the maximum value of the “noise”.

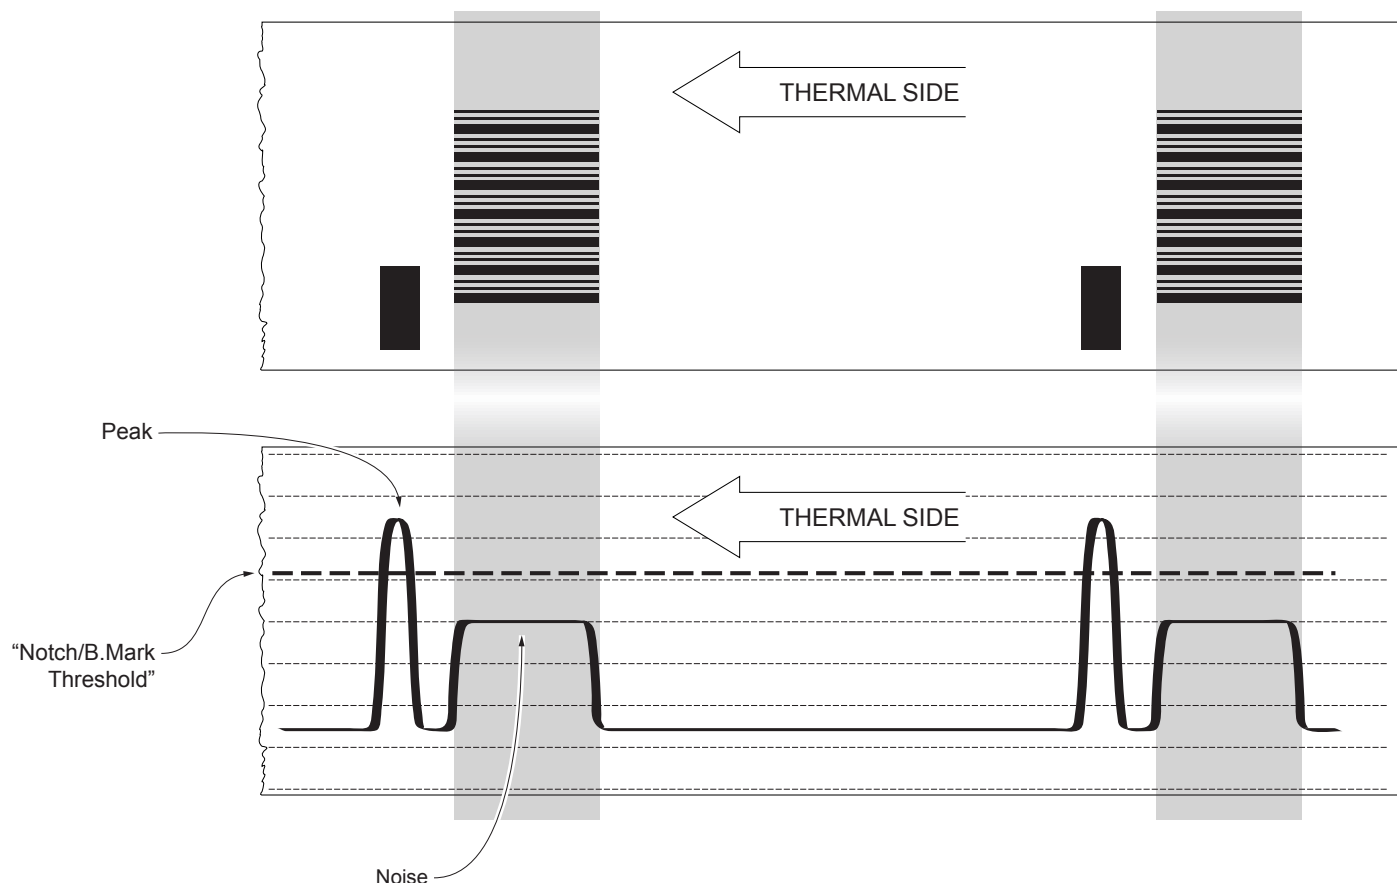


If the maximum value of “noise” read by the sensor is very close to the peak value, it might be difficult to place the value of the “Notch/B. Mark Threshold” at an intermediate point. In these cases, it is mandatory that the portion of paper between the point of printing end and the front black mark is completely white (no graphics). In this way, the only next graphic detected by the sensor for alignment after the printing end will be the black mark.

10.3 Alignment parameters

The “alignment point” is defined as the position inside the ticket to use for the black mark alignment. The distance between the black mark edge and the alignment point is defined as “Notch Distance”.


“Notch/Distance” value varies from 0mm minimum and 99.9 mm maximum.

If the “Notch Distance” value is set to 0, the alignment point is set at the beginning of the black mark.

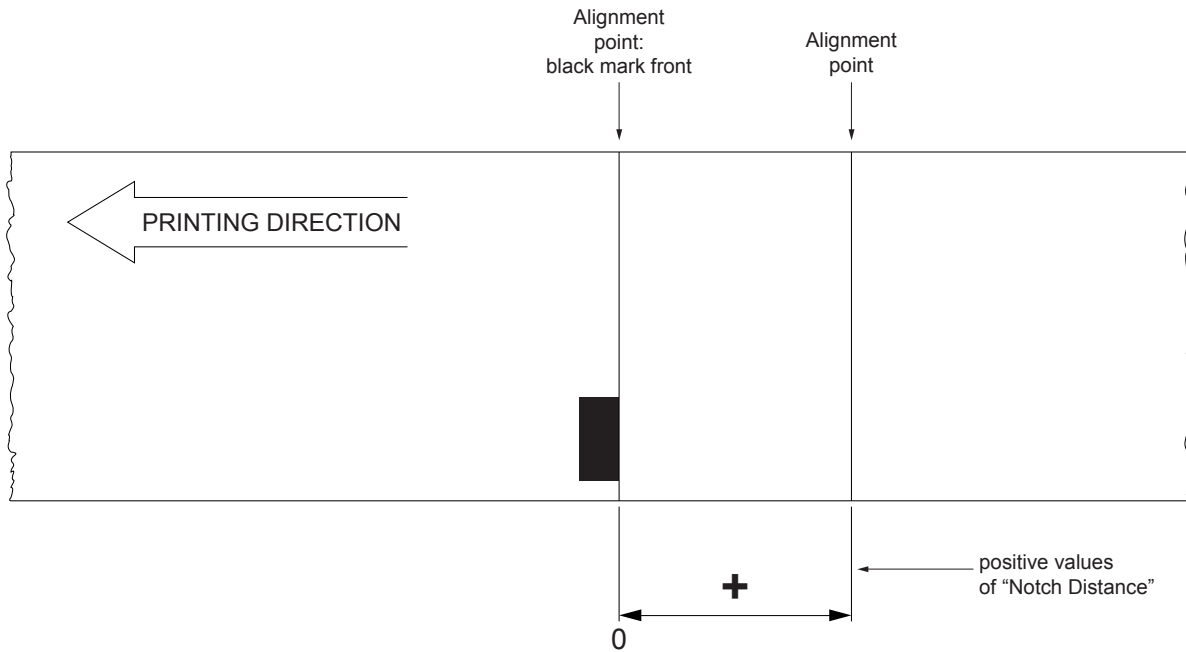

The following figure shows a section of the device with the paper path and the distances between the alignment sensor, the printing head and the cutter (cutting line), where:

NOTE: The dimension shown in following figures are in millimetres.

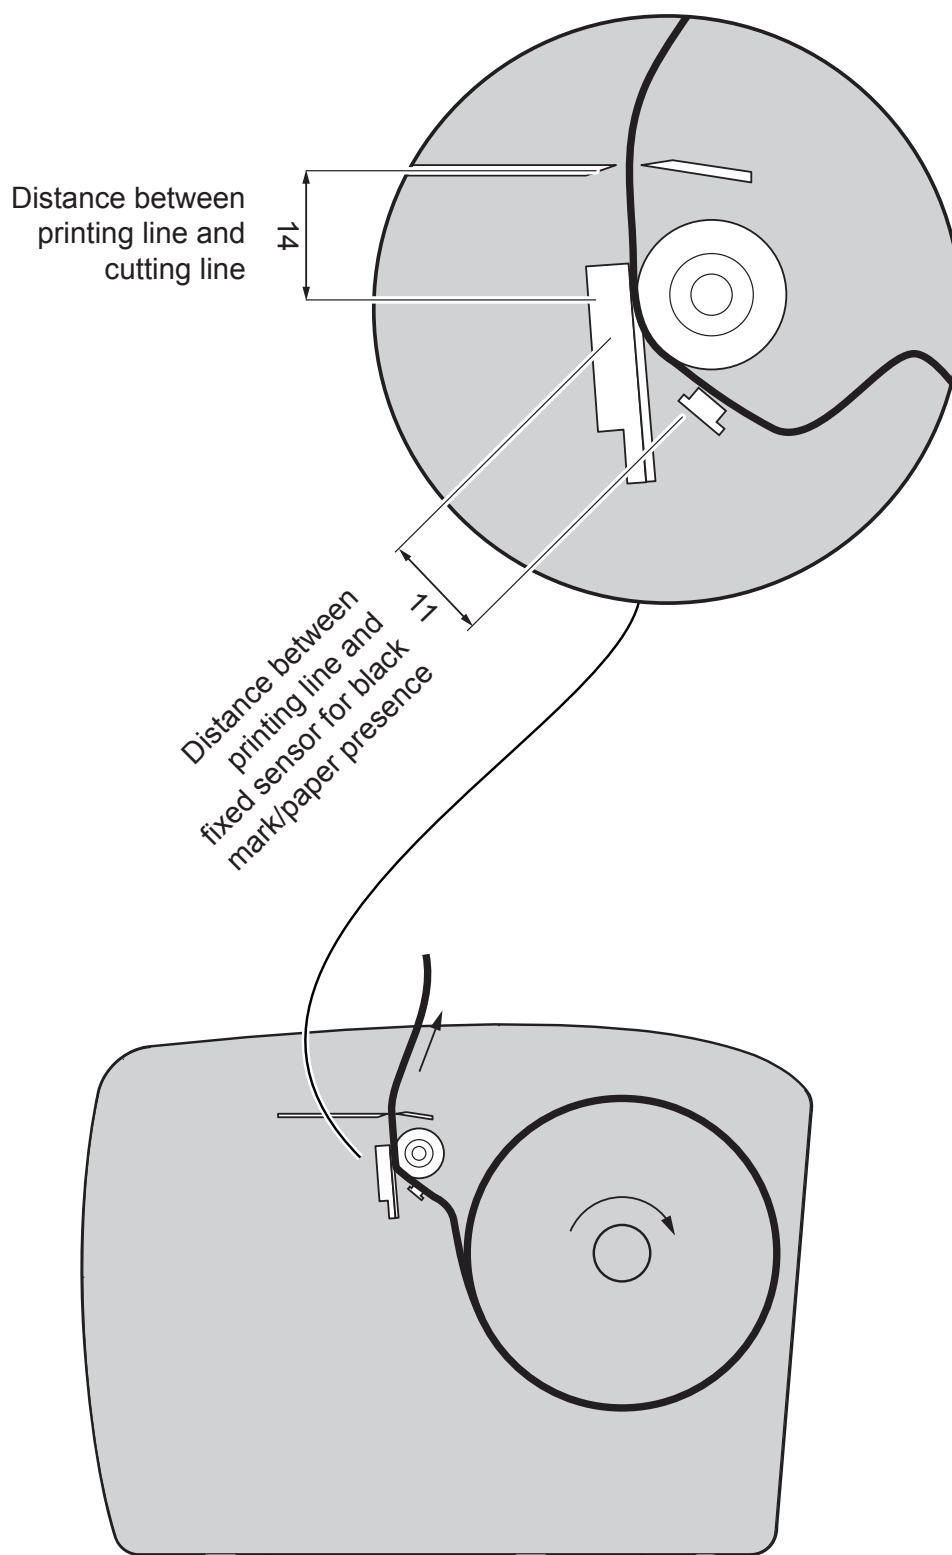



CUSTOM/POS EMULATION

To define the alignment point you need to set the device parameters that compose the numerical value of the “Notch Distance” parameter. (see par.5.4).

For example, to set a notch distance of 15mm between the notch and the alignment point, the parameters must be set on the following values:

<i>Notch Distance Sign</i>	: +
<i>Notch Distance [mm x 10]</i>	: 1
<i>Notch Distance [mm x 1]</i>	: 5
<i>Notch Distance [mm x .1]</i>	: 0


The “Notch Distance” parameter, may be modified as follows:

- during the Setup procedure of the device (see chapter 5)
- by using the 0x1D 0xE7 command (for more details, refer to the Commands Manual)
- by driver

10.4 Printing area

In order to print ticket containing only one notch and to not overlay printing to a notch (that will make it useless for the next alignment), it is important to well calibrate the height of the printing area of ticket according to the inter-notch distance.

The following figure shows an example of tickets with “Notch Distance” set to 0:

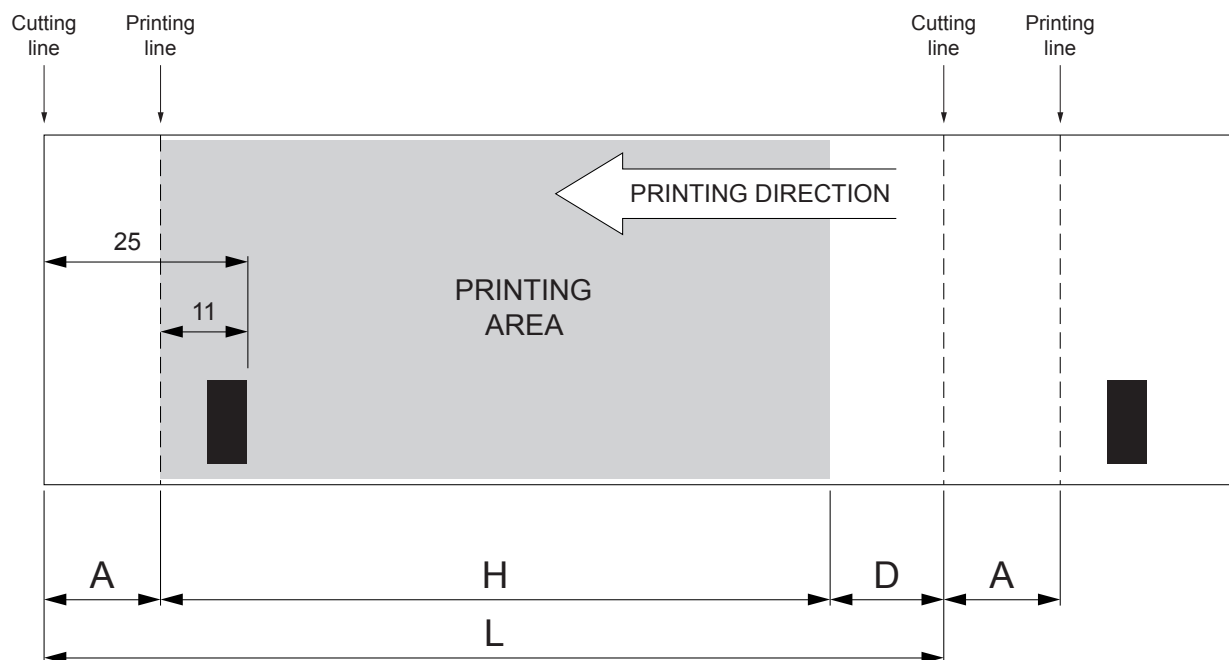

A “Non-printable area” of 14 mm generated from:

“Distance between cutter/printing head” - “Value for the paper recovery after a cut”

where:

“Distance between printhead and cutter” = 25 mm (fixed distance)

“Value for the paper recovery after a cut” = 11 mm,

H Distance between the first and the last print line, called “Height of the printing area”.

L Distance between an edge of the black mark and the next one, called “Inter-notch distance”.

D Automatic feed for alignment at the next black mark.

To use all the black marks on the paper, you must comply with the following equation:

$$H + A \leq L$$

The height of the printing area H can be increased to make no progress on alignment D but no further.



11 TECHNICAL SERVICE


In case of failure, send the 4 pieces of information listed below to our support team:

1. Product code
2. Serial number
3. Hardware release
4. Firmware release

To get the necessary data, proceed as follows:

1

XXXXXXXXXXXXXXXXXX
Rx



00000000000000000000

Write down the data printed
on the product label (see paragraph 2.3)

2

<device name>

SCODE <code>	- rel	2.20
FCODE <code>	- rel	1.00

FW

PRINTER SETUP

```

PRINTER TYPE .....<device model>
PRINTING HEAD TYPE .....<head model>
INTERFACE .....RS232
PROGRAM MEMORY TEST.....OK
DINAMIC RAM TEST.....OK
EEPROM TEST.....OK
CUTTER TEST.....OK
HEAD VOLTAGE [V]           = 23.70
          
```

Print a Setup report (see paragraph 5.1)
The Setup report shows
the firmware release

3





Customer Service Department:

support@custom.it
(worldwide)

or

support@customamerica.com
(specific for North/South American customers)

Send an e-mail to the Technical Service,
with the data collected.





CUSTOM S.p.A.

World Headquarters

Via Berettine, 2/B - 43010 Fontevivo, Parma ITALY

Tel. +39 0521 680111 - Fax +39 0521 610701

info@custom.biz - www.custom.biz

All rights reserved