

# VMK-P096 Vehicle Mount Kit

## Mounting Instructions



### GENERAL FEATURES

The VMK-P096 is a special mount for the BC96XX, used to attach the base station to a vehicle, such as a forklift.


The mounting kit contains the following components:

- 1 mounting platform
- 2 U-bolts
- 2 fixing bolts and 4 hexagon stop nuts
- 1 wall bracket
- 8 short screws M3x8

### ASSEMBLING THE VMK-P096


To assemble the VMK-P096, follow the steps below:

1. Attach the mounting plate found in the BC96XX package onto the VMK-P096 mounting platform by screwing 4 short screws into the four vertical holes.
2. Insert the U-bolts into the grooves on the VMK-P096 mounting platform, as shown below;

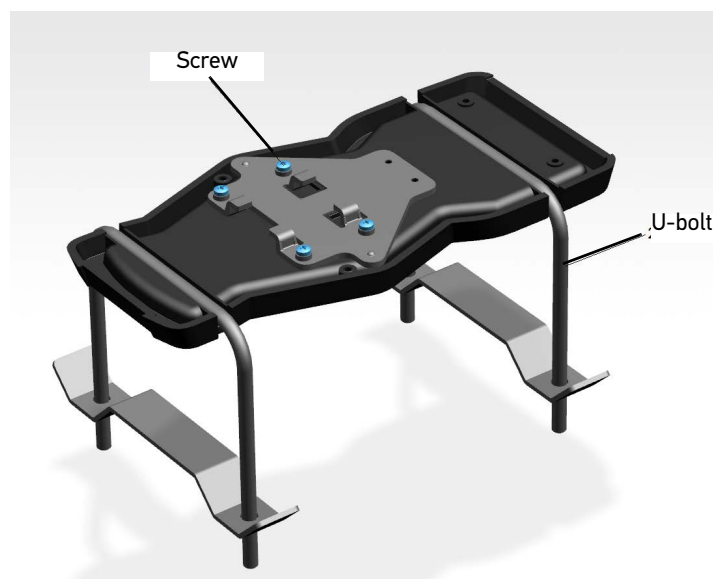


3. Remove the adhesive strips protecting the mounting tabs on the back of the BC96XX base station (**Figure 1**), and slide the base station on the metal plate. After aligning the tabs, push up to lock into place (**Figure 2**).
4. Fix the cradle to the VMK-P096 with two screws (**Figure 3**).

**Figure 1**

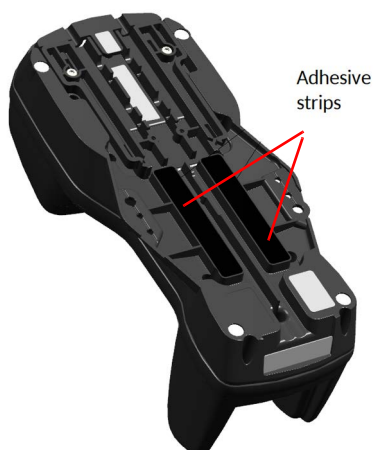

**Figure 2**

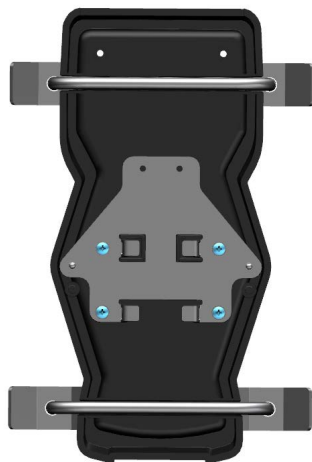

**Figure 3**




## Mounting the Scanner Wall Bracket

To mount the wall bracket to the base station follow the steps below and refer to the figures at right:

1. Remove the wall bracket label;
2. Fix the wall bracket onto the base station with 2 screws.

Wall bracket label

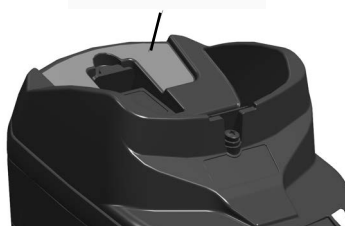

## Mounting to Vehicle

Use the fixing U-bolts and the hexagon stop nuts (included in the kit) to mount the assembly on the vehicle as shown below.

